

Oster 2195809

Oster Classic 3-Speed Blender User Manual

Model: 2195809

INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and care of your Oster Classic 3-Speed Blender, Model 2195809. Please read all instructions thoroughly before using the appliance.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- To protect against electrical shock, do not place cord, plug, or motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- Blades are sharp. Handle carefully.
- Always operate blender with lid in place.

- When blending hot liquids, use caution; sudden steam can cause burns.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Oster Classic 3-Speed Blender:





The Oster Classic 3-Speed Blender, fully assembled, showing the motor base, blending jar, blade assembly, and lid.

- **Motor Base:** Contains the 700-watt high-torque motor and control dial.
- **6-Cup Blending Jar:** Transparent, BPA-free jar with pre-marked measurement lines.
- **Blade Assembly:** Stainless steel blades for efficient blending.
- **Lid:** Secures the contents during blending.
- **Filler Cap:** Removable cap in the lid for adding ingredients during blending.

SETUP

Before first use, wash the blending jar, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry. The motor base should be wiped clean with a damp cloth.

1. Place the motor base on a clean, dry, and stable surface.
2. Ensure the control dial is in the 'OFF' (O) position.
3. Carefully place the blade assembly onto the bottom opening of the blending jar.
4. Secure the blade assembly by twisting it clockwise until tight.
5. Place the assembled blending jar onto the motor base, ensuring it is seated correctly.
6. Add ingredients to the blending jar. Do not fill past the maximum fill line.
7. Place the lid securely on the blending jar. Insert the filler cap into the lid opening.

OPERATING INSTRUCTIONS

Your blender features 3 manual speeds (Low, High) and a Pulse function for precise control over blending tasks.



3 Manual Speeds

High, Low, and Pulse for creating
a variety of textures

A detailed view of the blender's control panel, featuring a rotary dial for selecting Pulse, Low, and High speeds to achieve various blending textures.

1. Ensure the blender is properly assembled and ingredients are loaded.
2. Plug the power cord into a standard electrical outlet.
3. Turn the control dial to the desired speed:
 - **Low (1):** For lighter mixtures and initial blending.
 - **High (2):** For heavier mixtures, pureeing, and continuous blending.
 - **Pulse:** For short bursts of power, ideal for chopping or controlled blending. Turn the dial to 'Pulse' and release to stop.
4. Blend until the desired consistency is achieved.
5. To stop blending, turn the control dial to the 'OFF' (O) position.
6. Unplug the blender from the outlet before removing the jar or pouring contents.

Tips for Best Results:

- For ice crushing, use the Pulse setting for short bursts.



Ice-Crushing Power


700 watt high-torque motor blends even the toughest ingredients

The blending jar filled with ice cubes, blueberries, and sliced bananas, illustrating the blender's capacity to process tough ingredients with its 700-watt high-torque motor.

- When blending thick mixtures, start with a small amount of liquid and add more as needed.
- Do not overload the blender.
- For adding ingredients during blending, remove the filler cap from the lid.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your blender.

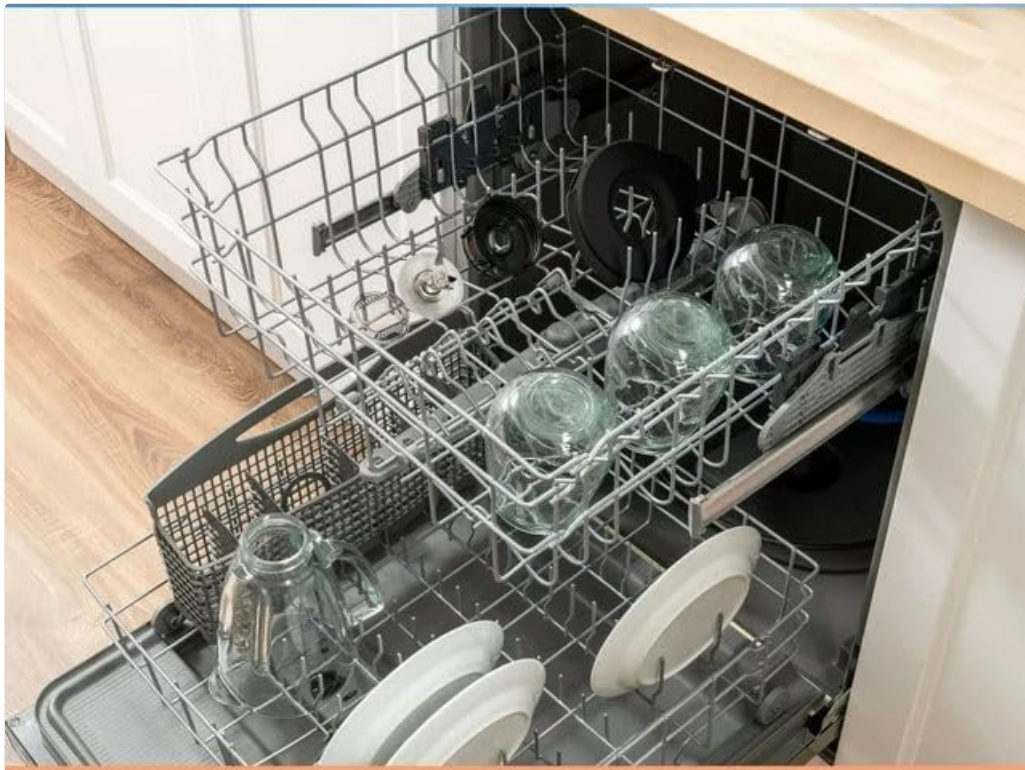

Dishwasher-safe for easy cleanup!

The blending jar and lid positioned in a dishwasher, demonstrating their dishwasher-safe design for convenient and easy cleanup.

1. Always unplug the blender before cleaning.
2. **Blending Jar, Lid, and Blade Assembly:** These parts are dishwasher-safe. They can also be washed by hand in warm, soapy water. Handle blades with extreme care as they are sharp.
3. **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
4. Ensure all parts are completely dry before reassembling or storing.

Storage:

Store the blender in a dry place. You can store the jar assembled on the motor base or separately.

TROUBLESHOOTING

If your blender experiences issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; control dial not in 'ON' position.	Check power cord connection; test outlet with another appliance; turn dial to a speed setting.

Problem	Possible Cause	Solution
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid; reduce ingredient quantity; cut ingredients into smaller pieces. Use Pulse function.
Loud noise or unusual odor.	Overloading; foreign object in jar; motor overheating.	Turn off and unplug. Reduce load. Check for obstructions. Allow motor to cool down for 15-20 minutes. If problem persists, discontinue use and contact customer service.
Leakage from bottom of jar.	Blade assembly not tightened properly; seal damaged.	Ensure blade assembly is securely twisted onto the jar. Check the seal for damage and replace if necessary.



SPECIFICATIONS

- **Brand:** Oster
- **Model Number:** 2195809
- **Number of Speeds:** 3 (Low, High, Pulse)
- **Motor Power:** 700 Watts
- **Blending Jar Capacity:** 6 cups
- **Jar Material:** BPA-Free Plastic
- **Blade Material:** Stainless Steel
- **Drive System:** All-Metal Drive
- **Dimensions:** 10.13 x 7.13 x 13.25 inches
- **UPC:** 053891174664

WARRANTY AND SUPPORT

This Oster Classic 3-Speed Blender comes with a Limited Warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, service, or warranty claims, please contact Oster Customer Service. Contact information can typically be found on the manufacturer's website or on the product packaging.

 <p>Oster User Manual Oster® Easy-to-Clean Blender with Dishwasher-Safe Glass Jar</p> <p>www.oster.com P.N. 2143131</p>	<p>Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar User Manual</p> <p>User manual for the Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar (BLSTBCG Series), covering safety, operation, cleaning, and recipes. Visit www.oster.com for more information.</p>
 <p>Oster User Manual Manuel de Instructions Manual d'Instructions MODELS/MODELLES OSTER® BLSTDG SERIES</p> <p>Visit us at www.oster.com P.N. 131104</p>	<p>Oster BLSTDG Series Blender User Manual and Recipes</p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>
	<p>Oster Hand Blender User Manual and Warranty Information</p> <p>Comprehensive guide for Oster hand blenders (models 2609, 2611, 2612, 2613, 2614, FPSTHB2615B), covering operating instructions, safety precautions, cleaning, storage, and a one-year limited warranty.</p>
 <p>Oster Oster® Pro Series Blender with High Performance Motor Mélangeur Pro Series Oster® à moteur hautes performances</p> <p>Model BLSTEPG OSTER® Pro Series Blender with High Performance Motor</p> <p>www.oster.com/oster-oster.ca</p>	<p>Oster Pro Series Blender with High Performance Motor User Manual</p> <p>User manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPG-STO), detailing safety precautions, product features, operation instructions, care and maintenance, and warranty information.</p>
 <p>Oster Oster® Pro Series Blender with High Performance Motor</p> <p>Model BLSTEPH OSTER® Pro Series Blender with High Performance Motor</p> <p>www.oster.com</p>	<p>Oster Pro Series Blender with High Performance Motor User Manual</p> <p>User manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPH), providing detailed instructions on safety, operation, assembly, cleaning, maintenance, and warranty information.</p>
 <p>Oster Oster® Pro Series Blender with High Performance Motor</p> <p>Model BLSTEPH OSTER® Pro Series Blender with High Performance Motor</p> <p>www.oster.com</p>	<p>Oster Pro Series Blender User Manual - Model BLSTEPH</p> <p>Comprehensive user manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPH). Learn about features, operation, safety, cleaning, and accessories.</p>