

COSYLAND CS00120-3-US

COSYLAND Toddler Standing Tower Instruction Manual

Model: CS00120-3-US | Brand: COSYLAND

INTRODUCTION

Thank you for choosing the COSYLAND Toddler Standing Tower. This adjustable height kitchen stool is designed to safely elevate your child to counter height, allowing them to participate in family activities such as cooking, washing hands, or brushing teeth. This manual provides essential information for assembly, safe operation, and maintenance of your new standing tower.

SAFETY INFORMATION

Your child's safety is our top priority. Please read and adhere to all safety guidelines.


- The COSYLAND Toddler Standing Tower is CPC certified (Children's Product Certificate) by the federal government, ensuring it meets safety standards.
- Features a removable anti-drop railing with a patented design (patent No: 008546345-0001) for enhanced protection. Always ensure the railing is securely in place when the child is using the tower.
- Equipped with support feet and anti-tip features to provide stability and prevent tipping.
- Always supervise your child when they are using the standing tower. Never leave a child unattended.
- Ensure the tower is placed on a flat, stable surface.
- Do not allow children to climb on the outside of the tower or stand on the top rail.

Enhanced Product Safety

Global Safety Certifications and Designs



Natural Materials & Rounded Corners

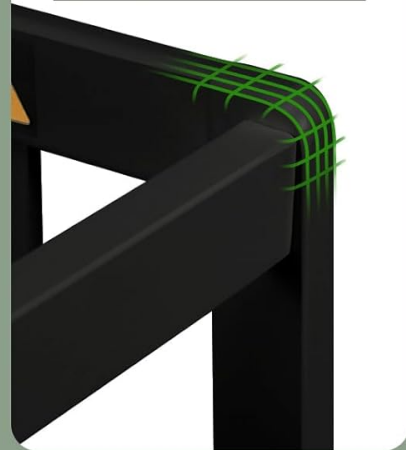

Anti-tip Feet

The standing tower is designed with enhanced safety features, including CPC certification, rounded corners, and anti-tip feet for stability.

Safe Usage Guideline



Follow safe usage guidelines: always assist your child when entering and exiting the tower, and ensure they are properly positioned inside.

KEY FEATURES

Adjustable Height Platform

The standing platform offers three adjustable height levels, accommodating toddlers and children from 18 months to 3 years old (or those with a height of 25 to 40 inches). This feature allows the tower to grow with your child, ensuring they can comfortably reach various counter heights.

- **Level 1 (Lowest):** Suitable for children from 18 months, height less than 32 inches.
- **Level 2 (Middle):** Suitable for children from 2 years, height between 32 and 39 inches.
- **Level 3 (Highest):** Suitable for children from 3 years, height greater than 39 inches.

Witness Your Child's Growth

3 Height Adjustable, Kids Kitchen Step Stool with Activity Board



FROM
3+
YEAR

Height Range
—
>39INCH

FROM
2
YEAR

Height Range
—
**<39INCH
>32INCH**

FROM
18
MONTHS

Height Range
—
<32INCH

⚠ Notice: Height recommendations are for reference only, actual suitability may vary.

The adjustable platform allows the tower to adapt to your child's growth, ensuring a comfortable and safe height for various activities.

Removable Safety Railing

The tower includes a removable anti-drop railing, providing easy access for your child while ensuring effective protection against falls. This unique patented design enhances safety during use.

New Removable Anti-drop bar

Removable gate for easy access and effective protection for your children.



Other Version



Without Anti-Drop Rolling Rail

The removable anti-drop bar allows for easy entry and exit while maintaining a secure environment for your child.

Durable and Child-Safe Construction

Constructed from solid natural bamboo, the standing tower is built to last. It features a child-safe, meticulous finish that helps prevent scratches and scuff marks, making it ideal for active use in the kitchen or bathroom.



Crafted from natural bamboo, the tower is designed for durability and safety with a smooth, child-friendly finish.

ASSEMBLY INSTRUCTIONS

The COSYLAND Toddler Standing Tower is designed for easy assembly. All necessary installation tools are included, and each part, including screws, is numbered for clear identification.

1. Unpack all components and verify against the parts list provided in the packaging.
2. Lay out all numbered parts on a clean, flat surface.
3. Follow the step-by-step instructions in the included manual, matching numbered parts and screws.
4. Ensure all screws are tightened securely, but do not overtighten to avoid damaging the wood.
5. Attach the non-slip rubber feet to the bottom of the tower for added stability.

Note: Some users may find tightening the screws requires significant hand strength. If you experience difficulty, consider seeking assistance to ensure proper and secure assembly.

Removable Anti-drop bar

Removable gate for easy access and effective protection for your children



Components include numbered parts, non-slip rubber feet, and installation gloves to assist with assembly.

OPERATING INSTRUCTIONS

Adjusting the Platform Height

To adjust the standing platform to the desired height:

1. Ensure no child is in the tower before adjusting.
2. Locate the adjustment pins or screws on the side supports of the platform.
3. Carefully remove the pins/loosen the screws that secure the platform at its current height.
4. Slide the platform to the desired height level.
5. Reinsert the pins/tighten the screws securely at the new height. Double-check that the platform is stable before allowing your child to use it.

General Usage

The COSYLAND Toddler Standing Tower is suitable for various household activities:

- **Kitchen:** Allows children to safely reach kitchen counters for meal preparation, baking, or washing dishes.

- **Bathroom:** Enables children to reach the sink for hand washing and teeth brushing, fostering independence.
- **Study/Play Areas:** Can be used at desks or tables for drawing, crafts, or other learning activities.



Bathroom

The standing tower provides safe access to the bathroom sink, encouraging hygiene and independence.

Study



The tower can also be used in study or play areas, allowing children to engage with activities at higher surfaces.

MAINTENANCE

To ensure the longevity and safety of your COSYLAND Toddler Standing Tower, follow these maintenance guidelines:

- **Cleaning:** Wipe down the bamboo surfaces with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners, which can damage the finish. Dry immediately with a clean cloth.
- **Inspection:** Regularly check all screws and connections to ensure they remain tight. Retighten as necessary.
- **Storage:** Store the tower in a dry environment away from extreme temperatures or humidity to prevent warping or damage to the bamboo.

TROUBLESHOOTING

Difficulty During Assembly

If you encounter difficulty during assembly, particularly with tightening screws:

- Ensure all parts are correctly aligned before attempting to fully tighten screws.
- Apply steady, firm pressure when turning screws. If the provided L-wrench is difficult to use, a screwdriver with a compatible head may offer better leverage.
- If a screw hole seems too tight, ensure you are using the correct screw for that hole. Do not force screws, as this can split the wood.
- If you continue to experience issues, please contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	18.5"D x 35.2"W x 16.3"H
Material	Bamboo
Color	Black
Maximum Height	35 Inches
Weight Capacity	150 Pounds
Number of Steps	3
Special Features	Adjustable Height, Heavy Duty, Lightweight, Non-Skid Feet, Slip Resistant Step, Removable Safety Railing
Recommended Age Range	Toddler (18 months to 3 years)
Assembly Required	Yes

PRODUCT VIDEOS

Watch the official product video for a visual guide on the COSYLAND Toddler Standing Tower's features and usage.

Your browser does not support the video tag.

Official COSYLAND video demonstrating the height adjustable Kids Kitchen Step Stool.

WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your COSYLAND Toddler Standing Tower, please do not hesitate to reach out to our customer support. We are committed to ensuring your satisfaction and providing assistance with your product.

Please refer to your purchase documentation or the COSYLAND official website for specific warranty details and contact information.

