

FAFOUR 001

FAFOUR Turbowasher Power High-Pressure Cleaner Instruction Manual

Model: 001

1. INTRODUCTION

The FAFOUR Turbowasher is a versatile high-pressure cleaning attachment designed to connect to any standard garden hose. It provides powerful water pressure for various cleaning tasks, from delicate surfaces to tough dirt. Its design emphasizes ease of use, durability, and efficient cleaning.

- **Technical Design:** Constructed from oxidized aluminum alloy with EVA handles for lightweight comfort and durability.
- **Powerful Pressure:** Engineered for both light and heavy-duty cleaning, featuring a 360° design and adjustable pressure control.
- **Versatile Applications:** Suitable for cleaning flower beds, outdoor vehicles, driveways, patios, windows, and more.
- **Universal Compatibility:** Designed to fit seamlessly with any standard garden hose.

2. SAFETY INFORMATION

Please read and understand all safety instructions before operating the Turbowasher. Failure to follow these instructions may result in injury or property damage.

- Always wear appropriate eye protection when operating the pressure washer.
- Do not direct the water spray at people, pets, or electrical equipment.
- Ensure all connections are secure before turning on the water supply to prevent leaks and maintain pressure.
- Keep children and bystanders away from the operating area.
- Do not use the Turbowasher with hot water or corrosive chemicals.
- Store the unit in a dry, protected area when not in use.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x FAFOUR Turbowasher Unit
- 3 x Connectors
- 1 x 5m Hose



Figure 3.1: Exploded view of the Turbowasher components, highlighting the Galvanic Power Nozzle, Anti-Slip Handle, Spray Settings, High-Quality Stainless Steel, Reinforced Handle, and Hose Connector.

4. SETUP INSTRUCTIONS

Follow these steps to set up your Turbowasher:

1. **Prepare Your Garden Hose:** Ensure your garden hose is free from kinks and connected to a water source.
2. **Remove Existing Attachment:** If your garden hose has an existing nozzle or attachment, unscrew it.
3. **Attach Turbowasher Connector:** Select the appropriate connector from the included accessories and securely attach it to the end of your garden hose.
4. **Connect Turbowasher:** Place the hose connector onto the Turbowasher unit and twist until it is firmly secured. Ensure there are no loose connections to prevent leaks.
5. **Turn on Water:** Slowly turn on the water supply to your garden hose. Check for any leaks at the connection points.

5. OPERATING INSTRUCTIONS

The Turbowasher is designed for intuitive operation. Here's how to use it effectively:

1. **Adjust Spray Settings:** The nozzle features adjustable spray settings. Rotate the nozzle head to change the water

beam strength and pattern, from a concentrated jet for tough stains to a wider spray for general rinsing.

2. **Engage Trigger:** Squeeze the trigger on the handle to activate the water flow. Release the trigger to stop the flow.
3. **Control Pressure:** The 360° design allows for versatile cleaning angles. Adjust your distance from the cleaning surface to control the effective pressure. For delicate surfaces, maintain a greater distance.
4. **Cleaning Applications:**
 - **Car Washing:** Use a wider spray for initial rinse, then a more focused spray for stubborn dirt, keeping a safe distance from paintwork.
 - **Patio/Driveway Cleaning:** Use a strong jet for removing grime and moss.
 - **Garden Watering:** Adjust to a gentle spray for watering plants.
 - **Window Cleaning:** Use a moderate spray, ensuring not to direct high pressure at window seals.



Figure 5.1: Turbowasher in use, demonstrating a focused spray for cleaning a car windshield.



Figure 5.2: Examples of adjustable spray patterns, from a concentrated jet to a wide fan spray.



Figure 5.3: Diverse applications of the Turbowasher, including vehicle washing, pet rinsing, deck cleaning, and window washing.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Turbowasher.

- **After Each Use:**

- Turn off the water supply and squeeze the trigger to release any remaining pressure.
- Disconnect the Turbowasher from the garden hose.
- Rinse the unit with clean water to remove any dirt or debris.

- **Storage:** Store the Turbowasher in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure it is completely drained to prevent freezing damage in cold climates.
- **Inspect Connections:** Periodically check all connectors and seals for wear or damage. Replace any worn parts to maintain a watertight seal.

7. TROUBLESHOOTING

If you encounter issues with your Turbowasher, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Low water pressure	◦ Water supply partially off ◦ Kink in garden hose ◦ Loose connections ◦ Clogged nozzle	◦ Ensure water tap is fully open. ◦ Straighten the garden hose. ◦ Tighten all connections. ◦ Clean the nozzle opening.
Water leaks from connections	◦ Loose connections ◦ Worn or missing O-rings/washers	◦ Tighten all connections securely. ◦ Inspect and replace O-rings or washers if damaged or missing.
No water flow	◦ Water supply off ◦ Hose completely blocked	◦ Turn on water supply. ◦ Check hose for severe kinks or blockages.

8. SPECIFICATIONS

Feature	Detail
Brand	FAFOUR
Model Number	001
Material	Aluminum alloy + plastic
Color	Black
Item Dimensions (L x W x H)	15 x 6 x 2 inches (approx. 38.1 x 15.24 x 5.08 cm)
Weight (Gross)	800g (approx. 1.76 lbs)
Hose Length (Included)	5 meters (approx. 16.4 feet)
Inlet Connection Type	Press
Outlet Connection Type	G Connector
UPC	016392993431

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where you purchased the FAFOUR Turbowasher or visit the official FAFOUR website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question