

[Manuals.plus](#) /

› [OKD](#) /

› OKD Luxury 70-inch Fluted Fireplace TV Stand Instruction Manual

OKD B0D5492H2Y

OKD Luxury 70-inch Fluted Fireplace TV Stand Instruction Manual

Model: B0D5492H2Y

1. INTRODUCTION

Thank you for purchasing the OKD Luxury 70-inch Fluted Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



An overall view of the assembled OKD Luxury 70-inch Fluted Fireplace TV Stand in Natural Oak, featuring the electric fireplace, fluted doors, and faux marble top.

2. IMPORTANT SAFETY INFORMATION

To ensure safe use of this product, please adhere to the following guidelines:

- Read all instructions thoroughly before assembly and operation.
- Assembly requires two adults. Do not attempt to assemble alone.
- Ensure all electrical connections for the fireplace are secure and plugged into a grounded outlet.
- Do not overload the TV stand. Refer to specifications for weight capacity.
- Keep children and pets away from the assembly area.
- Unplug the electric fireplace from the power outlet before cleaning or maintenance.
- Do not block the air vents of the electric fireplace.

3. PACKAGE CONTENTS

Your OKD TV Stand and electric fireplace will be shipped in two separate packages. Please ensure you have received both and all components are present before beginning assembly.

- TV Stand Components (panels, legs, hardware)
- Electric Fireplace Unit
- Electric Fireplace Remote Control
- Assembly Instruction Manual

4. SETUP AND ASSEMBLY

Follow these steps for proper assembly. Clear assembly instructions and labeled parts are provided in the separate assembly guide included with your product.

4.1 Unpacking and Preparation

- Carefully unpack all components on a soft, clean surface to prevent scratches.
- Identify all parts and hardware using the provided parts list in the assembly guide.

4.2 Assembling the TV Stand

- Follow the step-by-step instructions in the dedicated assembly guide to construct the TV stand frame, panels, and doors.
- Ensure all screws and fasteners are tightened securely.
- The storage doors feature soft-closing hinges to prevent pinching.

4.3 Installing the Electric Fireplace

- Once the TV stand structure is complete, carefully insert the electric fireplace unit into its designated central compartment.
- Ensure the fireplace is seated correctly and securely.

4.4 Cable Management

- Utilize the pre-punched holes on the back panel of the TV stand to route and organize cables from your TV and media devices. This helps maintain a neat appearance.

30-inch Big Fireplace with Remote Control

Bigger screen with 3D realistic flame effect for enhanced and vivid visual enjoyment



UL Listed



500 Sq. Ft./5000BTU



62°-82° F Heating Control



The Most Quiet Fireplace
in Industry (<40db)



TV stand and electric fireplace will be shipped
in 2 separate packages



Flame can be **ON** separately all year around with or without heat
3D realistic flame with 4 brightness level adjustable.



1-8 hours timer with overheating safety protection, enjoy all night

A close-up view of the open compartment above the electric fireplace, showing a pre-punched hole for cable management, designed to keep wires organized.


5. OPERATING INSTRUCTIONS

5.1 Electric Fireplace Operation

The built-in 30-inch electric fireplace provides both ambiance and warmth. It comes with a remote control for convenient operation.

- **Power On/Off:** Use the power button on the remote control or the fireplace unit to turn the fireplace on or off.
- **Flame Effect:** The realistic dancing flames and burning logs effect can be operated independently of the heater. Adjust the flame intensity through 4 brightness levels using the remote.
- **Heater Function:** Activate the heater to provide warmth. The fireplace offers 62°-82°F heating control, capable of heating up to 500 sq. ft. (5000 BTU).
- **Timer Setting:** Set an automatic shut-off timer for 1 to 8 hours. The unit includes overheating safety protection.

Dimensions & Storage Capacity

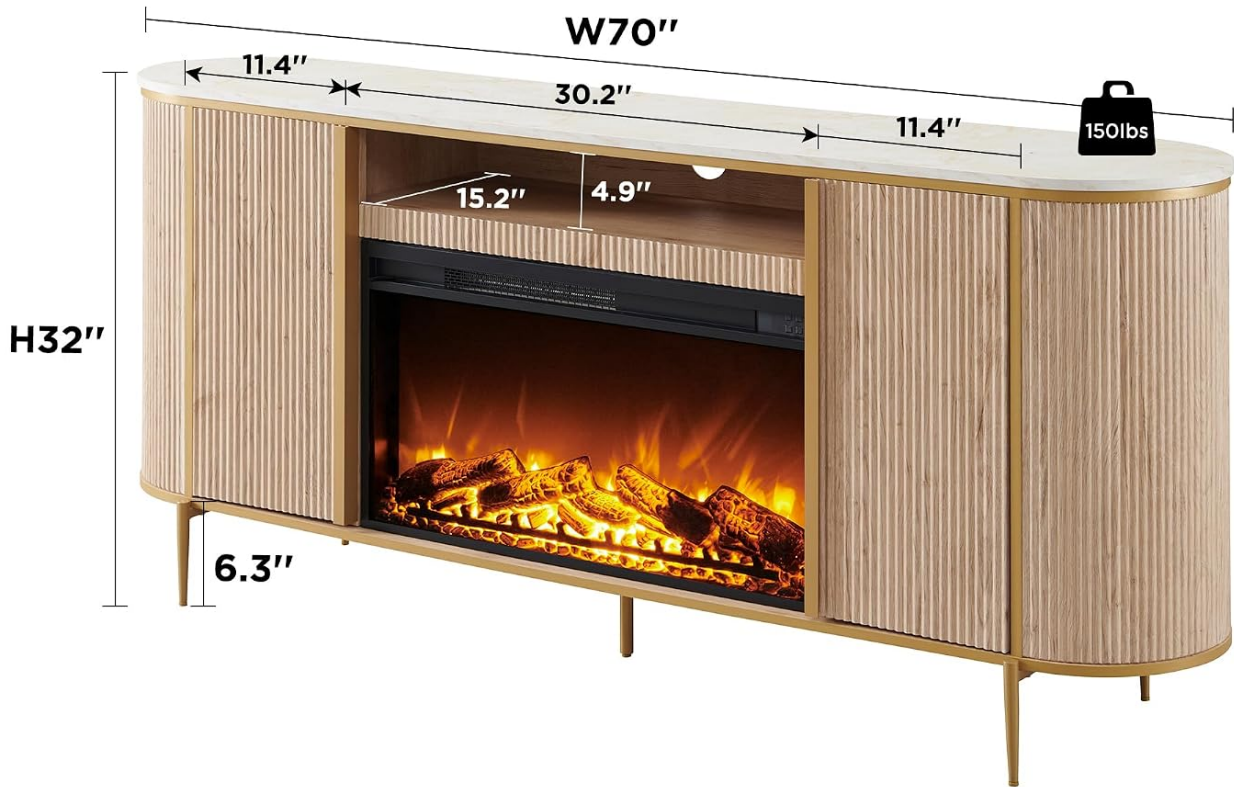

A detailed view of the 30-inch electric fireplace unit, highlighting its realistic flame effect, control panel, and accompanying remote control. Key features like heating area and temperature range are also shown.

6. MAINTENANCE

6.1 Cleaning the TV Stand

- Wipe surfaces with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, which can damage the finish.
- For the faux marble top, use a non-abrasive cleaner specifically designed for delicate surfaces.
- Periodically check and tighten any loose hardware.

6.2 Electric Fireplace Maintenance

- Ensure the air intake and exhaust vents are kept clear of dust and debris to maintain proper airflow.
- Dust the exterior of the fireplace unit with a soft, dry cloth.

- Do not attempt to open or repair the internal components of the fireplace. Contact customer support for service.

7. TROUBLESHOOTING

7.1 Common Issues and Solutions

- **Fireplace not turning on:** Check if the power cord is securely plugged into a functional wall outlet. Ensure the main power switch on the fireplace is in the 'ON' position.
- **No heat from fireplace:** Verify that the heater function is activated via the remote or control panel. Check the temperature setting to ensure it is above the current room temperature.
- **Remote control not working:** Replace the batteries in the remote control. Ensure there is a clear line of sight between the remote and the fireplace's sensor.
- **TV Stand instability:** Recheck all assembly screws and connections to ensure they are fully tightened. Ensure the stand is placed on a level surface.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	OKD
Model	B0D5492H2Y
Material	Engineered Wood, Faux Marble Top
Overall Dimensions (L x W x H)	70 x 15.2 x 32 inches
Fireplace Type	30-inch Electric Fireplace
Heating Area	Up to 500 Sq. Ft. (5000 BTU)
Temperature Control	62°-82°F
Timer	1-8 hours
Noise Level	<40dB
Weight Capacity (Top Surface)	Approximately 150 lbs



A diagram illustrating the dimensions of the TV stand (70 inches wide, 32 inches high, 15.2 inches deep) and its storage compartments, including the open shelf and side cabinets.

9. WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or contact OKD customer support directly.

10. CUSTOMER SUPPORT

For any questions, assistance with assembly, operation, or troubleshooting, please do not hesitate to contact OKD customer support. You can find more information and contact details by visiting the official OKD Store:

[Visit the OKD Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D5492H2Y>

More documents and user manuals: <https://manuals.plus/>