

[Manuals.plus](#) /

> [KYBOLT](#) /

> KYBOLT 12 X 20 Ft Wood Pergola with Retractable Sunshade Canopy Instruction Manual

KYBOLT DL-KYBOLT-WOOD-PERGOLA-12206I

KYBOLT 12 X 20 Ft Wood Pergola with Retractable Sunshade Canopy

Model: DL-KYBOLT-WOOD-PERGOLA-12206I

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your KYBOLT 12 X 20 Ft Wood Pergola with Retractable Sunshade Canopy. Please read this guide thoroughly before beginning assembly or use to ensure safe and correct installation and to maximize the lifespan of your product. This pergola is designed to provide a shaded outdoor living space for various settings such as backyards, decks, and gardens.



Image: The KYBOLT 12 X 20 Ft Wood Pergola with its retractable sunshade canopy extended, providing shade over an outdoor dining area.

SAFETY INFORMATION

Your safety is paramount. This product includes safety instructions for proper installation, assembly, and potential hazards. Adhere to all warnings and instructions to prevent injury or damage.

- **Read All Instructions:** Before assembly and use, carefully read and understand all instructions provided in this manual.
- **Two-Person Assembly:** Assembly of this pergola requires at least two adults. Do not attempt to assemble

alone.

- **Check for Damage:** Inspect all components for damage before assembly. Do not assemble if any parts are damaged. Contact customer service for replacements.
- **Secure Installation:** Ensure the pergola is securely anchored to the ground or deck surface to prevent tipping or movement, especially in windy conditions.
- **Clear Area:** Keep the assembly area clear of children and pets.
- **Weather Conditions:** Retract the sunshade canopy during strong winds, heavy rain, or snow to prevent damage to the canopy and structure.
- **Weight Limit:** Do not hang heavy objects from the pergola frame.

PACKAGE CONTENTS

The KYBOLT 12 X 20 Ft Wood Pergola is shipped in 8 separate boxes. Due to logistical reasons, these boxes may arrive on different days. Please ensure all boxes have been received before beginning assembly. Each box contains individually packaged parts and clear instructions for easier assembly.

Upon receiving all packages, verify that all components listed in the parts list (typically found in one of the boxes) are present and undamaged. If any parts are missing or damaged, please contact customer service immediately.

SETUP AND ASSEMBLY

Assembly of your KYBOLT pergola is designed to be straightforward with the provided easy-to-read installation instructions. We recommend having at least two people for assembly to ensure safety and efficiency.

1. **Site Preparation:** Choose a level and stable location for your pergola. Ensure there is adequate clearance around the structure.
2. **Unpack Components:** Carefully unpack all parts from the boxes. Organize them according to the parts list in the instruction manual.
3. **Assemble Frame:** Follow the step-by-step diagrams to assemble the main wooden frame, including posts, beams, and cross supports. Ensure all connections are secure.
4. **Install Canopy Rails:** Attach the rails for the retractable sunshade canopy according to the instructions.
5. **Attach Canopy Fabric:** Install the high-quality fabric canopy onto the rails. Ensure it is properly aligned and secured for smooth operation.
6. **Anchor Pergola:** Securely anchor the pergola to your chosen surface (concrete, wood deck, or ground) using appropriate hardware (not always included, check your specific package).

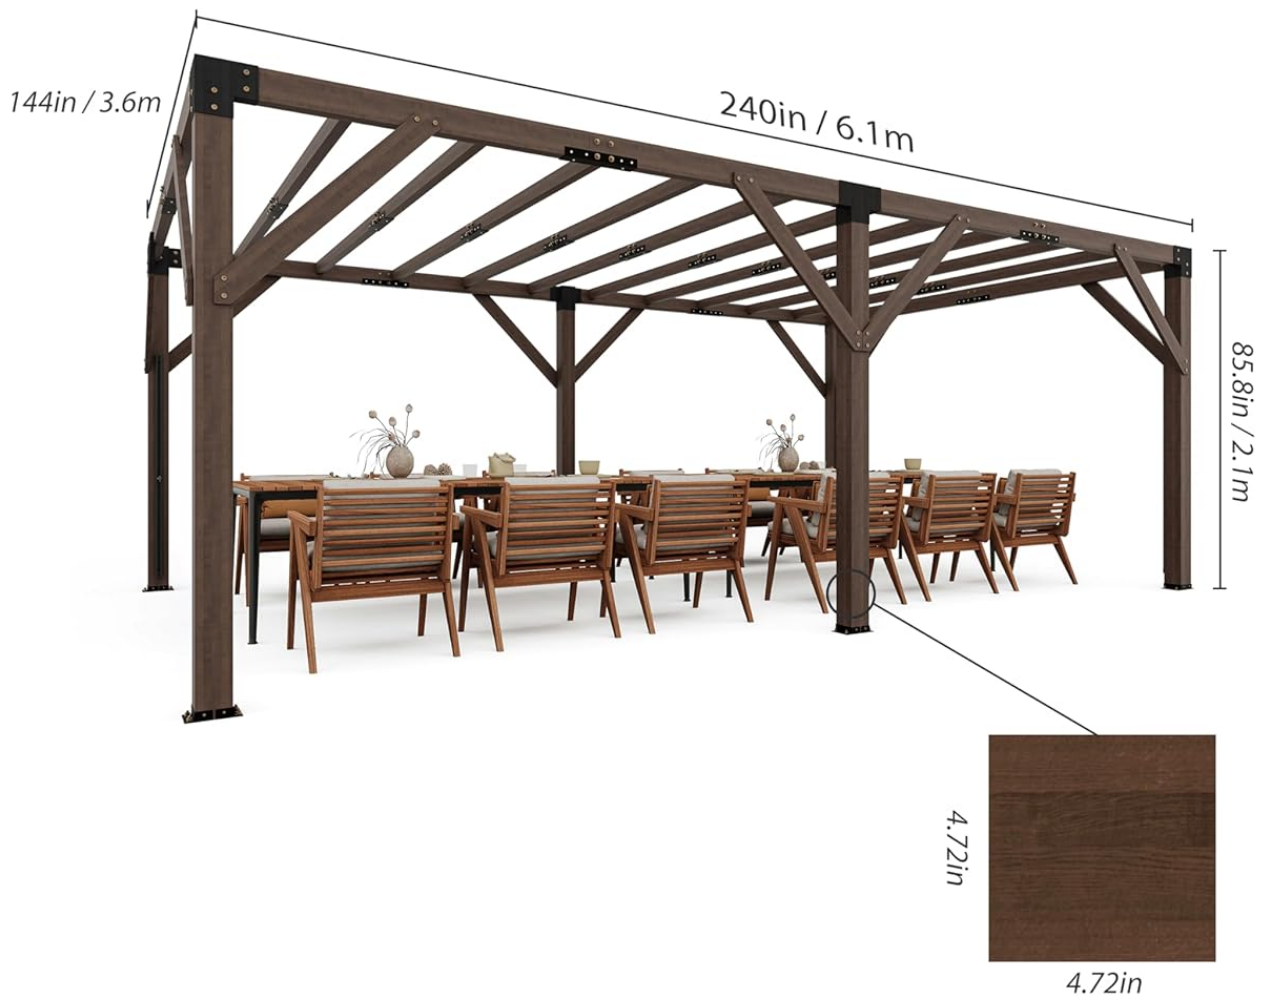


Image: A diagram illustrating the dimensions of the KYBOLT 12 X 20 Ft Wood Pergola, showing its length, width, and height in both inches and meters.

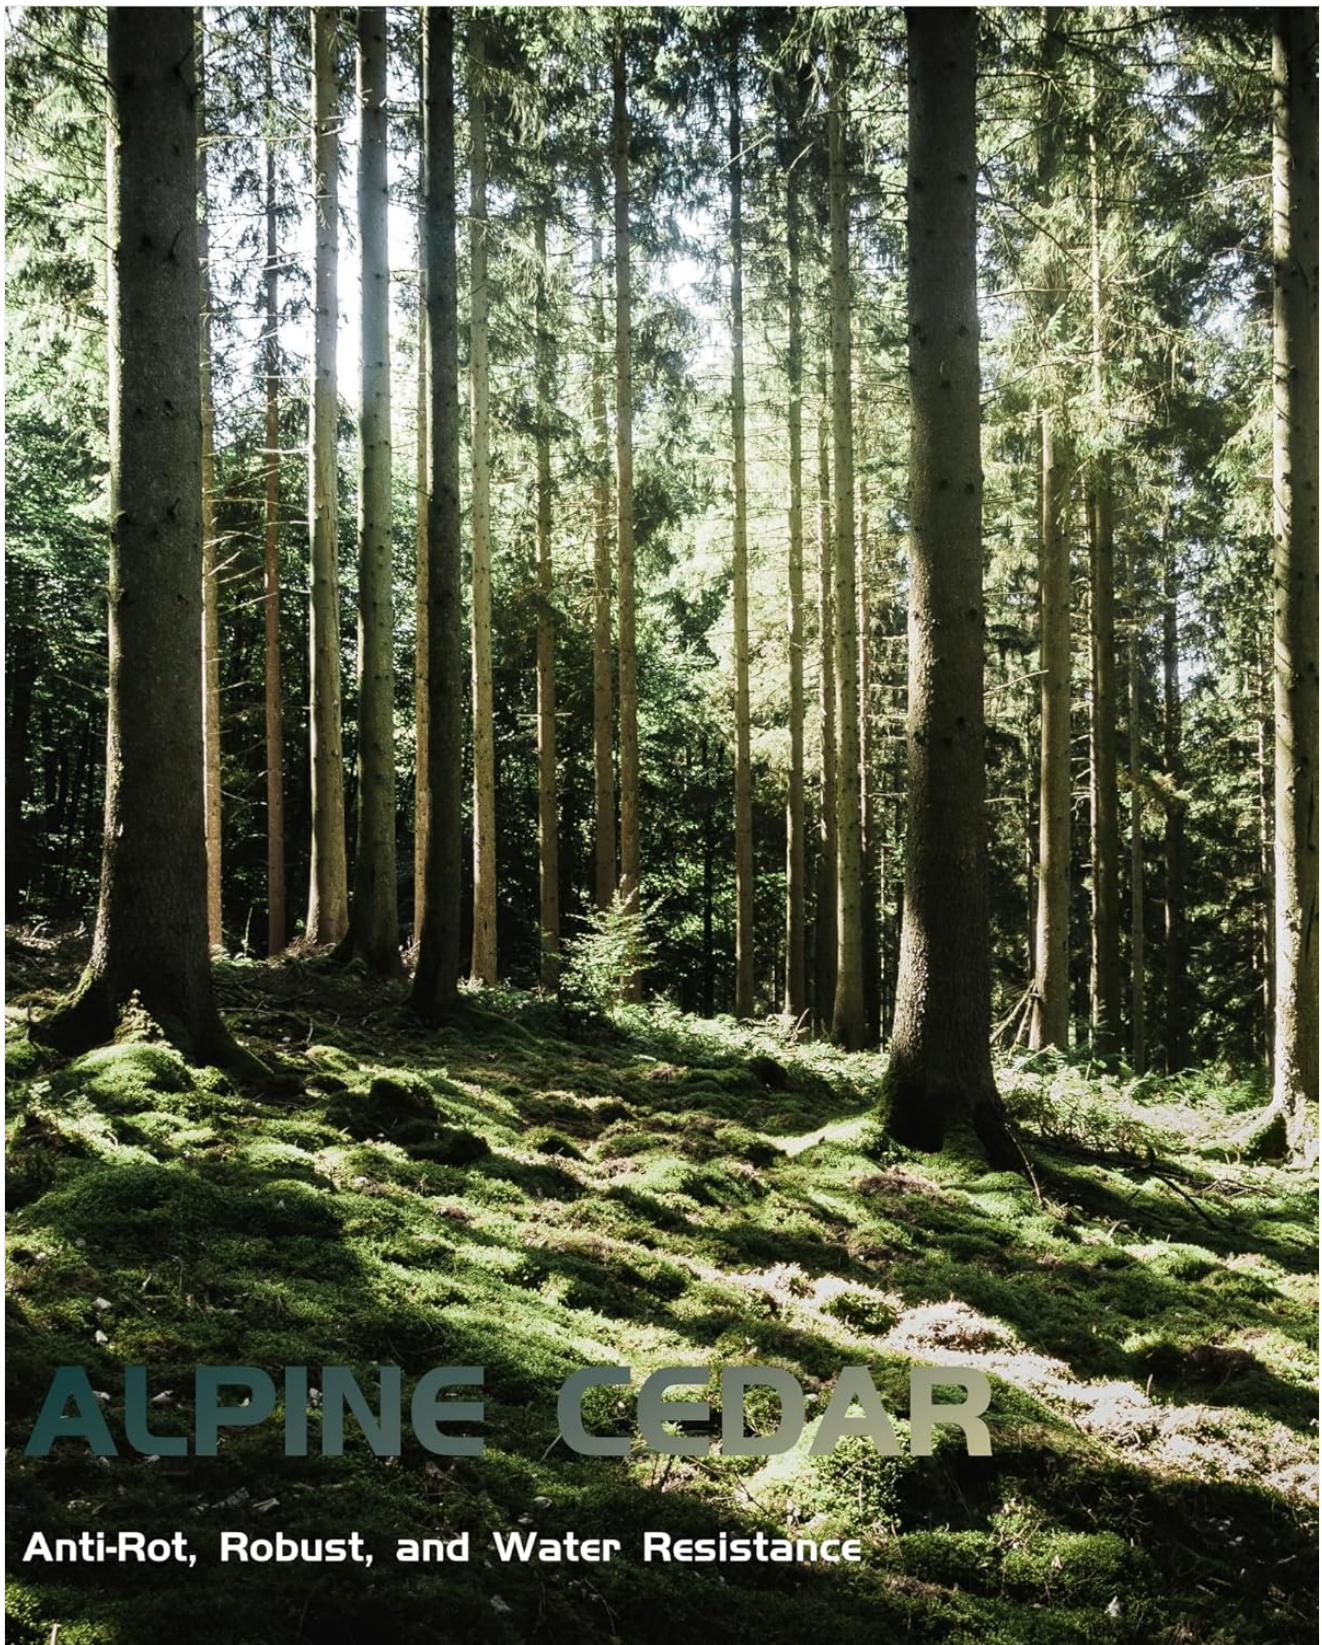


Image: A forest scene highlighting the 'Alpine Cedar' material, emphasizing its anti-rot, robust, and water-resistant properties, which contribute to the pergola's durability.

OPERATING INSTRUCTIONS

The KYBOLT pergola features a retractable sunshade canopy for adjustable shade and sun exposure.

- **To Extend the Canopy:** Gently pull the canopy fabric outwards from its retracted position. Ensure it glides smoothly along the rails until it reaches the desired extension. Secure it if there are locking mechanisms.
- **To Retract the Canopy:** Gently push the canopy fabric inwards towards the frame. Ensure it folds neatly and

smoothly along the rails.

- **Weather Precautions:** Always retract the canopy during strong winds, heavy rainfall, or snowfall to prevent damage to the fabric and the pergola structure. Prolonged exposure to extreme weather can reduce the product's lifespan.

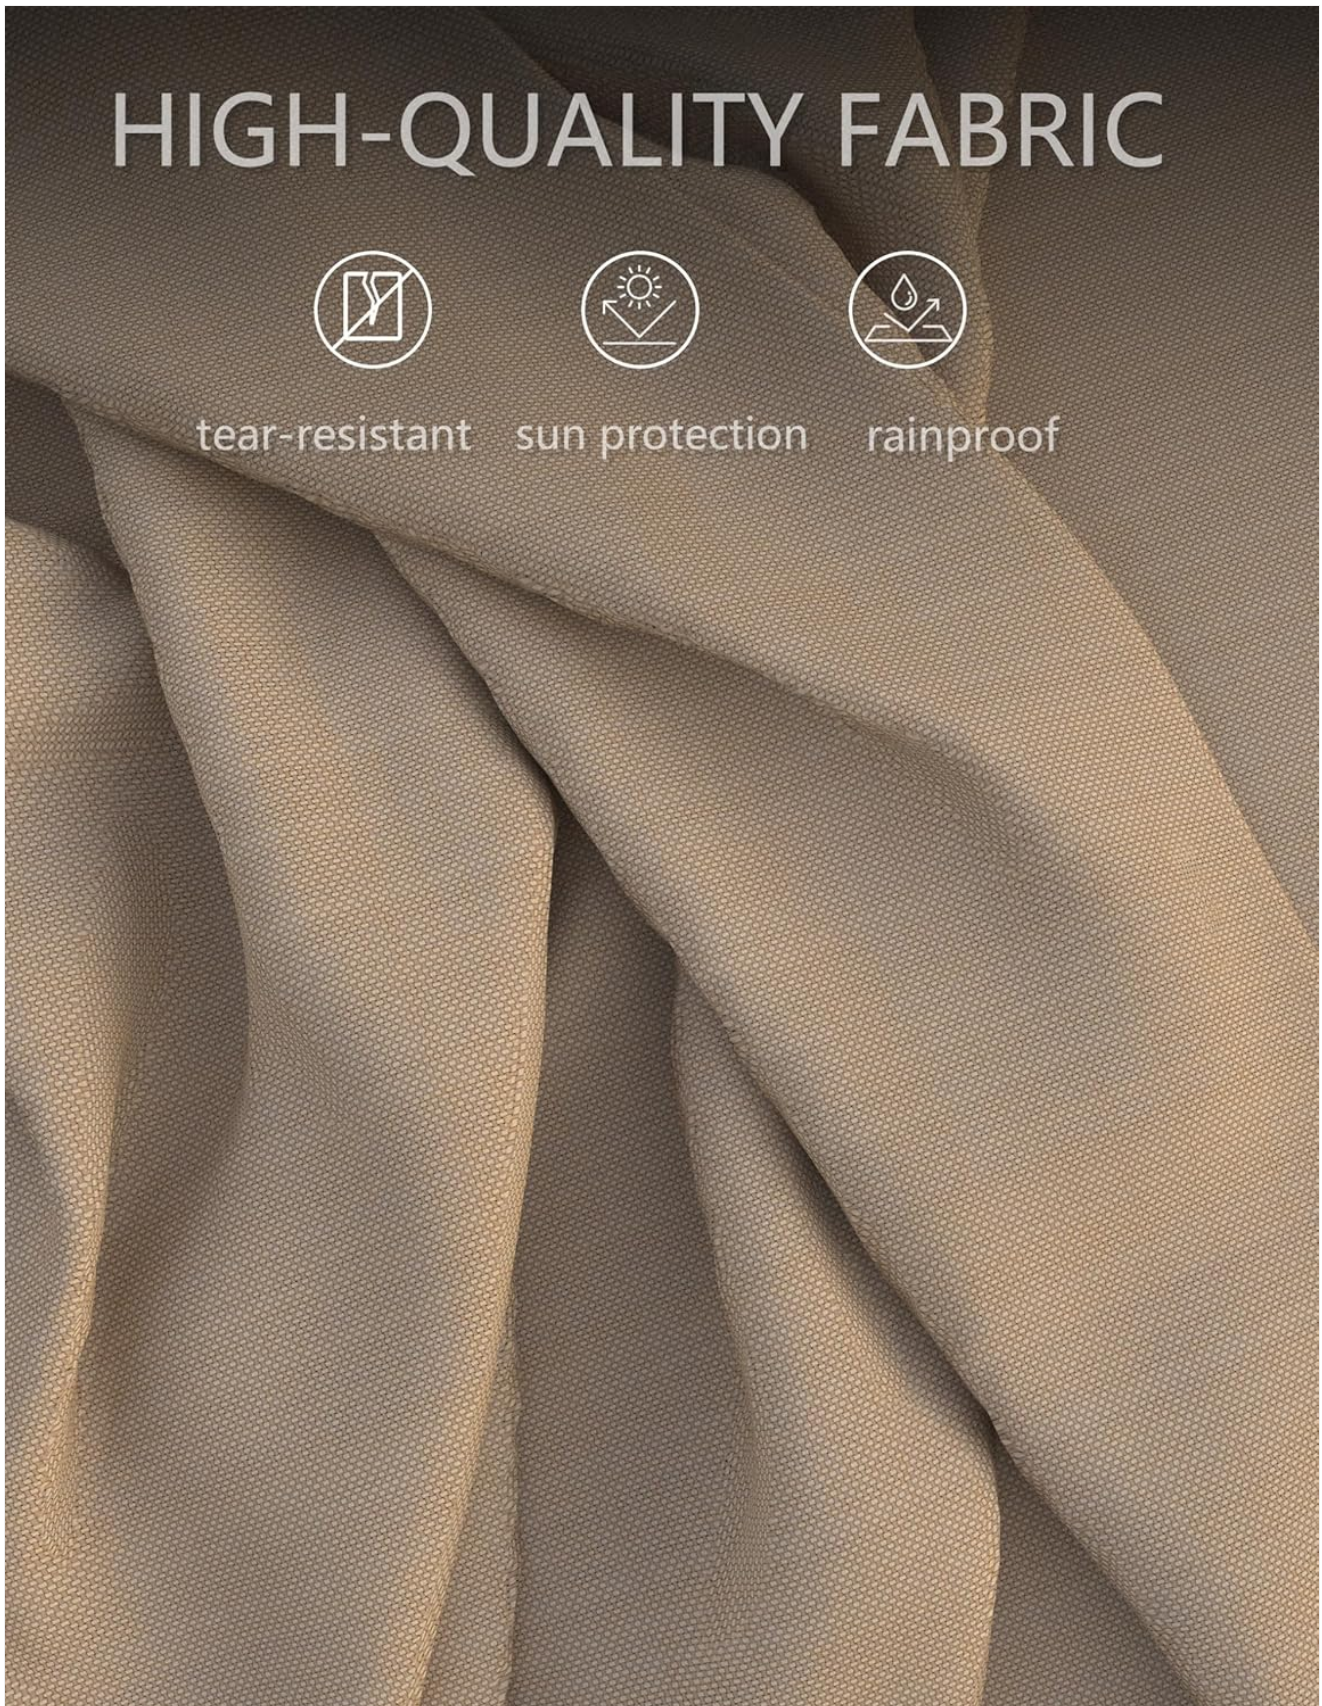


Image: A close-up of the high-quality fabric used for the retractable canopy, illustrating its tear-resistant, sun protection, and rainproof features.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your pergola.

- **Wood Frame:** The frame is made from a blend of cedar and spruce composite wood, which is naturally decay-resistant. However, periodic inspection for any signs of wear, cracking, or rot is recommended. Clean the wood with a mild soap and water solution, then rinse thoroughly. Reapply a wood sealant or stain every 1-2 years to maintain its appearance and protective qualities.
- **Canopy Fabric:** Clean the canopy fabric with a soft brush and mild soap and water. Rinse thoroughly and allow it to air dry completely before retracting or storing. Avoid harsh chemicals or abrasive cleaners.
- **Hardware:** Periodically check all bolts, screws, and connections to ensure they are tight. Tighten any loose hardware to maintain structural integrity.
- **Winter Storage:** In areas with heavy snow or prolonged freezing temperatures, it is advisable to remove and store the canopy fabric indoors to prevent damage.

TROUBLESHOOTING

If you encounter issues with your KYBOLT pergola, refer to the following common problems and solutions:

- **Canopy Not Retracting/Extending Smoothly:**
 - Check the canopy rails for obstructions or debris.
 - Ensure the fabric is properly aligned within the rails and not snagged.
 - Verify that all canopy hardware is securely fastened.
- **Pergola Feels Unstable:**
 - Re-check all frame connections and tighten any loose bolts or screws.
 - Ensure the pergola is properly anchored to the ground or deck.
 - Verify the installation surface is level.
- **Missing or Damaged Parts:**
 - Refer to the parts list in your assembly manual.
 - Contact KYBOLT customer service for assistance.

If these steps do not resolve the issue, please contact KYBOLT customer service for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	KYBOLT
Model Number	DL-KYBOLT-WOOD-PERGOLA-12206I
Material	Wood (Cedar and Spruce Composite)
Frame Material	Wood
Product Dimensions (L x W x H)	240"L x 144"W x 85.8"H (20 ft x 12 ft x 7.15 ft)

Item Weight	49 Pounds
Water Resistance Level	Water Resistant
Shape	Rectangular
Ultraviolet Light Protection	Yes
Assembly Required	Yes
UPC	198290927104

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact KYBOLT customer service directly. KYBOLT offers 24-hour customer service for any questions or concerns you may have regarding your pergola. Feel free to contact us at any time for assistance with assembly, missing parts, or operational issues.

Customer Service Contact: Please refer to the contact information provided in your product packaging or on the official KYBOLT website.