

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Frigidaire](#) /

› [Frigidaire 1.1 Cu. Ft. 1000-Watt Stainless Steel Countertop Microwave Oven \(Model EMW112OAMZ\) User Manual](#)

Frigidaire EMW112OAMZ

Frigidaire 1.1 Cu. Ft. 1000-Watt Stainless Steel Countertop Microwave Oven (Model EMW112OAMZ) User Manual

Your guide to safe and efficient operation.

1. INTRODUCTION

Thank you for choosing the Frigidaire 1.1 Cu. Ft. 1000-Watt Stainless Steel Countertop Microwave Oven, Model EMW112OAMZ. This appliance is designed for convenient and efficient meal preparation. To ensure safe and optimal performance, please read this manual thoroughly before operating your new microwave oven and retain it for future reference.



Image 1.1: Front view of the Frigidaire 1.1 Cu. Ft. 1000-Watt Stainless Steel Countertop Microwave Oven.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.
- Only use utensils that are suitable for use in microwave ovens.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- Frigidaire 1.1 Cu. Ft. 1000-Watt Stainless Steel Countertop Microwave Oven
- Glass Turntable
- Turntable Ring Assembly
- Instruction Manual (this document)

4. PRODUCT OVERVIEW

4.1 Exterior and Interior Components



Image 4.1: Interior view of the microwave oven with the door open, showing the cavity and turntable.

The microwave oven features a stainless steel exterior and a spacious interior cavity. Inside, a removable

glass turntable ensures even heating of food.

4.2 Control Panel Features

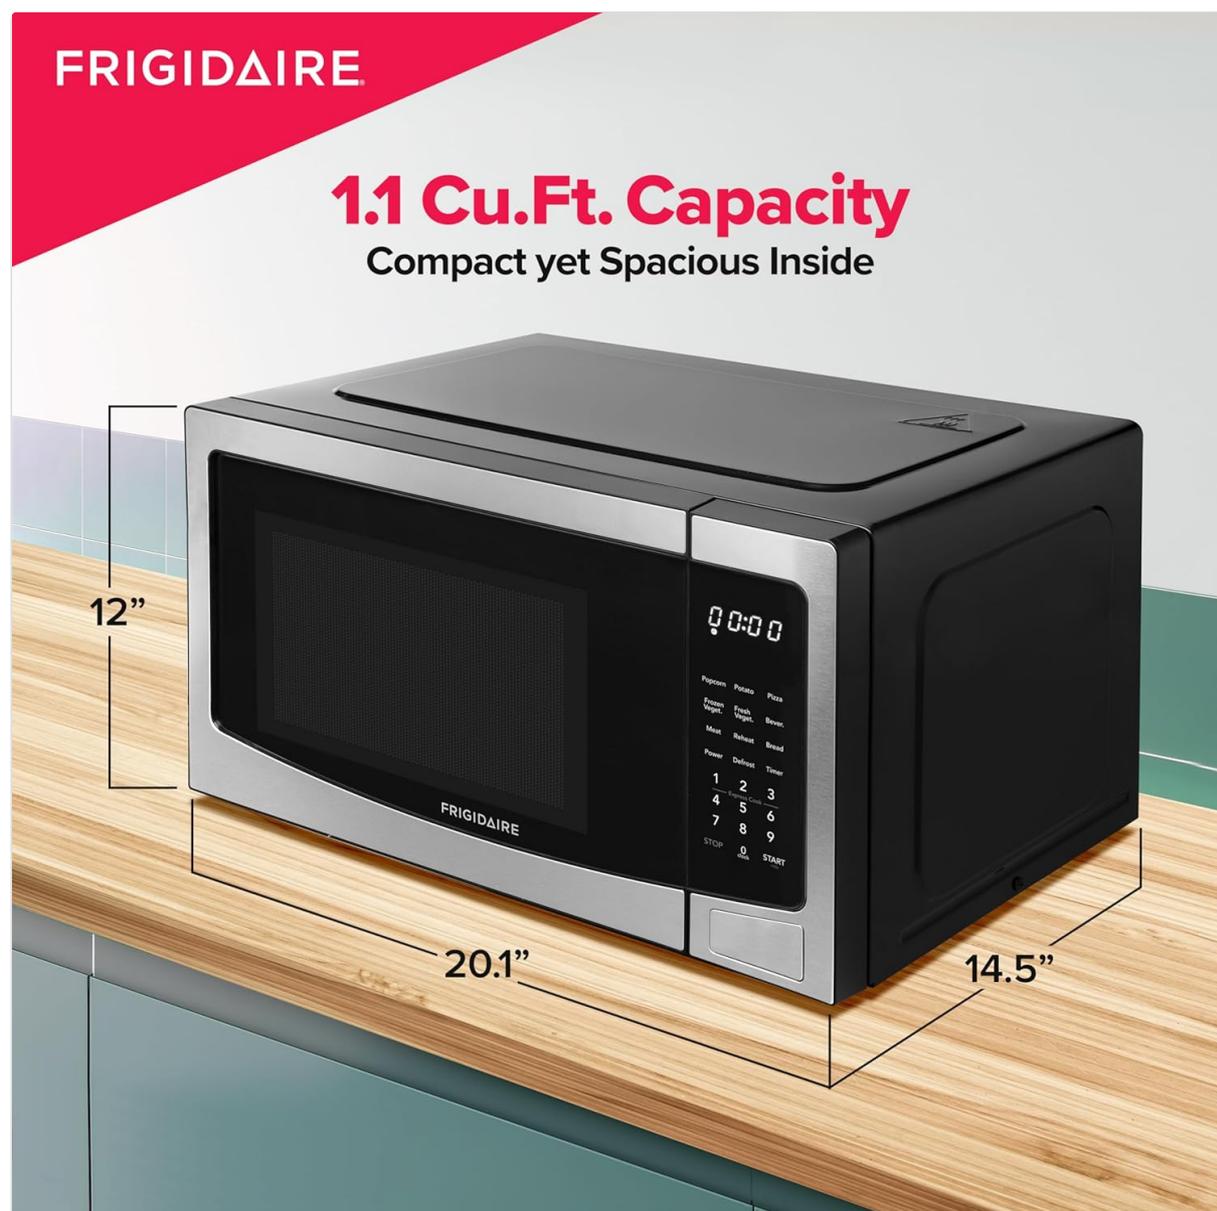


Image 4.2: Detailed view of the user-friendly digital control panel.

The control panel includes a digital LED display and various buttons for operation:

- **Menu Action Screen:** Digital LED Display for time and settings.
- **Auto Cook Menus:** 8 preset options for common foods (Popcorn, Potato, Pizza, Frozen Veggies, Fresh Veggies, Beverage, Meat, Reheat, Bread).
- **Cooking Power:** 10 adjustable power levels.
- **One Touch Express Cook:** Buttons 1-6 for quick cooking times.
- **STOP/Clock:** Stops cooking or sets the clock.
- **START/+30 Sec:** Starts cooking or adds 30 seconds to cooking time.
- **Defrost:** For defrosting food by weight or speed.
- **Timer:** Functions as a kitchen timer.

5. INSTALLATION AND SETUP

5.1 Placement

Place the microwave oven on a flat, stable surface capable of supporting its weight. Ensure adequate ventilation by leaving at least 4 inches (10 cm) of space around the sides, back, and top of the oven for proper airflow.



Image 5.1: Microwave dimensions for proper placement.

5.2 Electrical Requirements

The microwave oven requires a standard 120V, 60Hz AC outlet with a dedicated circuit. Do not use extension cords or adapters.

5.3 Turntable Installation

1. Place the turntable ring assembly into the circular indentation in the bottom of the microwave cavity.
2. Carefully place the glass turntable onto the turntable ring, ensuring it sits securely on the center hub.

6. OPERATING INSTRUCTIONS

6.1 Setting the Clock

1. Press the **STOP/Clock** button once.

2. Use the number pad to enter the current time (e.g., 1-2-3-0 for 12:30).
3. Press the **STOP/Clock** button again to confirm.

6.2 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Enter the desired cooking time using the number pad.
4. Press the **START/+30 Sec** button to begin cooking. For quick start, press **START/+30 Sec** repeatedly to add 30-second increments, or press number buttons 1-6 for 1-6 minutes of cooking.



Image 6.1: Initiating quick start cooking.

6.3 Using Auto Cook Menus

The microwave features 8 pre-programmed settings for common foods:

FRIGIDAIRE

Quick Start Cooking

Cook and Heat Meals with One Touch



Image 6.2: Visual representation of the 8 auto cook presets.

To use an auto cook menu:

1. Press the desired auto cook button (e.g., **Popcorn, Potato, Pizza, Frozen Veggies, Fresh Veggies, Beverage, Meat, Reheat, Bread**).
2. For some menus, you may need to select the quantity or weight using the number pad.
3. Press **START/+30 Sec** to begin.

6.4 Defrosting

The microwave offers defrosting options:

- **Defrost by Weight:** Press the **Defrost** button, enter the food weight using the number pad, then press **START/+30 Sec**.
- **Speed Defrost:** This feature alternates between defrost and stand times for efficient results. Refer to the control panel for specific speed defrost options if available.

6.5 Setting Power Levels

To adjust the cooking power:

1. Enter the desired cooking time.

2. Press the **Power** button.
3. Enter a number from 1 to 10 using the number pad (10 for 100% power, 1 for 10% power).
4. Press **START/+30 Sec.**

6.6 Using the Kitchen Timer

1. Press the **Timer** button.
2. Enter the desired time using the number pad.
3. Press **START/+30 Sec.** The timer will count down without microwave operation.

6.7 Child Safety Lock

To activate the child safety lock:

1. Press and hold the **STOP/Clock** button for 3 seconds. A lock indicator will appear on the display.

To deactivate the child safety lock:

1. Press and hold the **STOP/Clock** button for 3 seconds. The lock indicator will disappear.

7. CARE AND MAINTENANCE

7.1 Cleaning the Exterior

Wipe the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could scratch the stainless steel finish.

7.2 Cleaning the Interior

Clean the interior cavity with a damp cloth after each use. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean.

FRIGIDAIRE

Powerful Performance

1000W of Cooking Power



Image 7.1: The microwave's easy-clean interior and dishwasher-safe glass tray.

7.3 Cleaning the Glass Turntable

The glass turntable and turntable ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the microwave.

8. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Microwave does not start	Power cord unplugged; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure cord is plugged in; Close door securely; Check household fuse or reset circuit breaker.
Food not heating	Door not closed properly; Incorrect cooking time/power level; Food not suitable for microwave.	Close door firmly; Adjust cooking time and power level; Use microwave-safe dishes.
Turntable not rotating	Turntable not properly seated; Turntable ring dirty or damaged.	Ensure turntable and ring are correctly positioned; Clean or replace turntable ring.

Problem	Possible Cause	Solution
Unusual noise during operation	Loose turntable or foreign object in cavity.	Check turntable placement; Remove any foreign objects.
Child lock engaged	Child safety lock is active.	Press and hold STOP/Clock for 3 seconds to deactivate.

9. SPECIFICATIONS

Feature	Specification
Brand	Frigidaire
Model Number	EMW112OAMZ
Capacity	1.1 Cubic Feet
Wattage	1000 Watts
Voltage	1000 Volts (Operating Voltage)
Product Dimensions (D x W x H)	16 x 21.25 x 11.8 inches
Item Weight	22 pounds (approx. 10 Kilograms)
Installation Type	Countertop
Color	Stainless Steel
Special Feature	Child Safety Lock
Included Components	Microwave, Glass Turntable

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Frigidaire website. Keep your purchase receipt as proof of purchase for any warranty claims.

	<p>Frigidaire 2.2 Cu. Ft. Built-In Microwave - Specifications and Installation</p> <p>Detailed specifications and installation guide for the Frigidaire 2.2 Cu. Ft. Built-In Microwave, available in Black Stainless Steel and Stainless Steel. Includes product features, dimensions, internal specifications, and electrical requirements.</p>
	<p>Frigidaire Professional Built-In Microwave Oven with Air Fry - Use & Care Manual</p> <p>This Use & Care manual provides essential information for operating your Frigidaire Professional Built-In Microwave Oven with Air Fry, including safety guidelines, operation instructions, cleaning tips, and troubleshooting for models like PMBD3081SS.</p>
	<p>Frigidaire 1.7 Cu. Ft. Over-The-Range Microwave (FMOS1746BS) Specifications and Installation</p> <p>Detailed specifications and installation guidelines for the Frigidaire 1.7 Cu. Ft. Over-The-Range Microwave, model FMOS1746BS, in Stainless Steel.</p>
	<p>Frigidaire Microwave Oven: Comprehensive Use & Care Guide</p> <p>Explore the Frigidaire microwave oven's features, safety guidelines, operating instructions, and maintenance tips. This official Use & Care manual ensures optimal performance and longevity for your appliance.</p>
	<p>Frigidaire Gallery GRSS2352AF 22.3 Cu. Ft. 33" Stainless Steel Side-By-Side Refrigerator Specifications</p> <p>Detailed specifications and features for the Frigidaire Gallery GRSS2352AF, a 22.3 cu. ft. 33-inch standard depth side-by-side refrigerator in stainless steel. Includes dimensions, certifications, electrical information, and installation clearances.</p>
	<p>Frigidaire Microwave Oven Use & Care Manual</p> <p>Comprehensive guide for using, caring for, and maintaining your Frigidaire microwave oven, including safety instructions, operation details, troubleshooting, and cleaning tips. Model A06823463.</p>