

[Manuals.plus](#) /

› [World Tech Toys](#) /

› World Tech Toys Ninja Turtles Leonardo Motion-Sensing Flying Toy User Manual

World Tech Toys 36457

World Tech Toys Ninja Turtles Leonardo Motion-Sensing Flying Toy User Manual

Model: 36457

INTRODUCTION

Welcome to the World Tech Toys Ninja Turtles Leonardo Motion-Sensing Flying Toy user manual. This guide provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new flying toy. Please read this manual thoroughly before first use and retain it for future reference.

This officially licensed Teenage Mutant Ninja Turtles Leonardo flying orb ball is designed for interactive play, featuring motion-sensing technology for hand-controlled flight. Its dual-rotor system ensures stable flight, and its durable, lightweight construction is suitable for indoor and outdoor use.

WHAT'S IN THE BOX

Upon opening the package, ensure all components are present:

- 1x Leonardo Motion-Sensing Flying Toy
- 1x USB Charging Cable
- 1x Internal Rechargeable Battery (pre-installed)
- 2x Spare Rotors (blades)



WHAT'S IN THE BOX



USB CABLE



EXTRA BLADES



Image: Contents of the package, including the Leonardo flying toy, USB charging cable, and two spare rotor blades.

SETUP

Charging the Toy

1. Locate the USB charging port on the flying toy.
2. Connect the small end of the provided USB charging cable to the toy's charging port.
3. Connect the standard USB end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
4. The toy's indicator light will illuminate during charging and turn off or change color when fully charged.
5. Charging typically takes approximately 20-30 minutes for a full charge.



**QUICK & EASY
TO CHARGE**



**USB CABLE
INCLUDED**



**NEVER WORRY ABOUT
BUYING BATTERIES AGAIN**

USB CHARGING

Rechargeable with
any USB adapter

Image: The USB charging cable connected to the flying toy, illustrating the charging process.

Important: Always use the provided USB charging cable. Do not overcharge the battery.

OPERATING INSTRUCTIONS

First Flight

1. Ensure the toy is fully charged.
2. Locate the power switch on the toy and slide it to the "ON" position. The propellers will begin to spin.
3. Hold the toy upright and gently release it into the air. It will automatically ascend.
4. To control the toy, place your hand underneath it. The motion sensors will detect your hand and cause the toy to ascend. Move your hand to guide its direction.
5. To land the toy, allow it to descend naturally or gently catch it from below. Avoid grabbing the propellers while they are spinning.

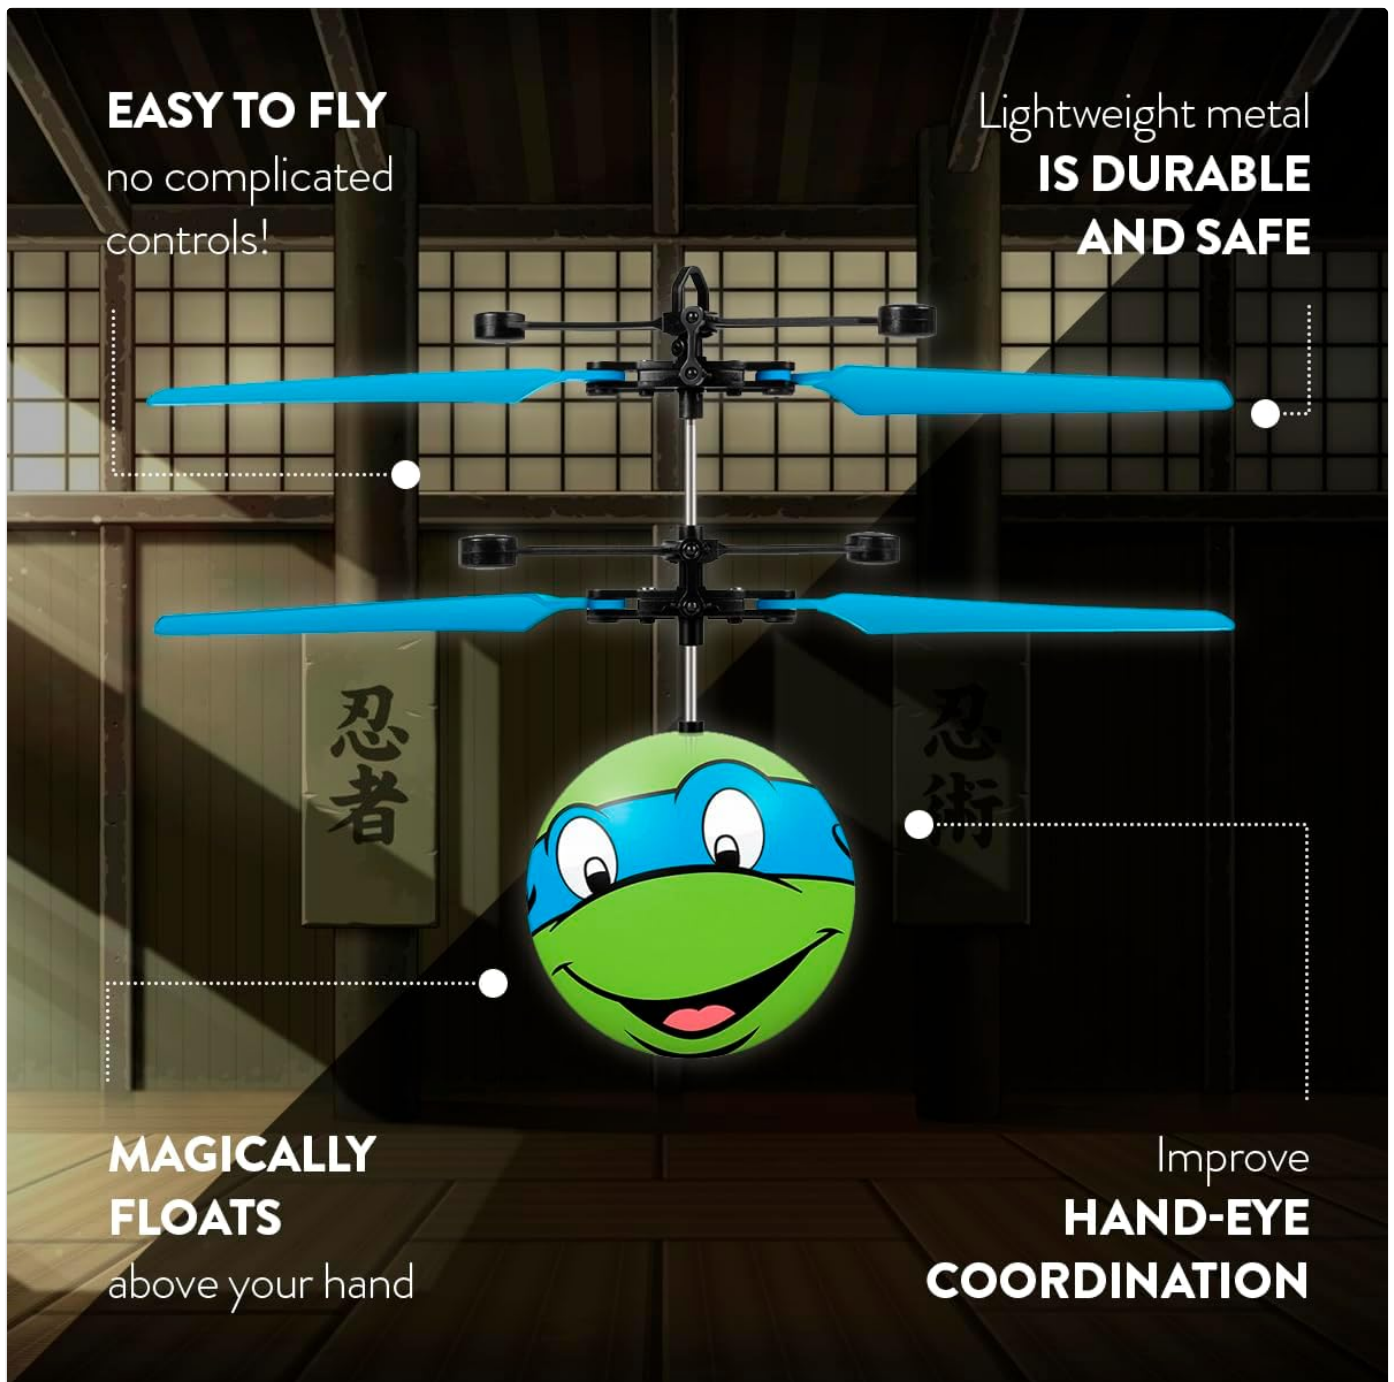


Image: The Leonardo flying toy in action, demonstrating how it floats above a hand using motion-sensing technology.

Safety Precautions

- Recommended for ages 6 and up. Adult supervision is advised.
- Do not operate near faces, hair, or loose clothing.
- Keep fingers and other objects away from spinning propellers.
- Avoid flying in strong winds or near water.
- Do not modify or disassemble the toy.
- If the toy becomes damaged, discontinue use immediately.

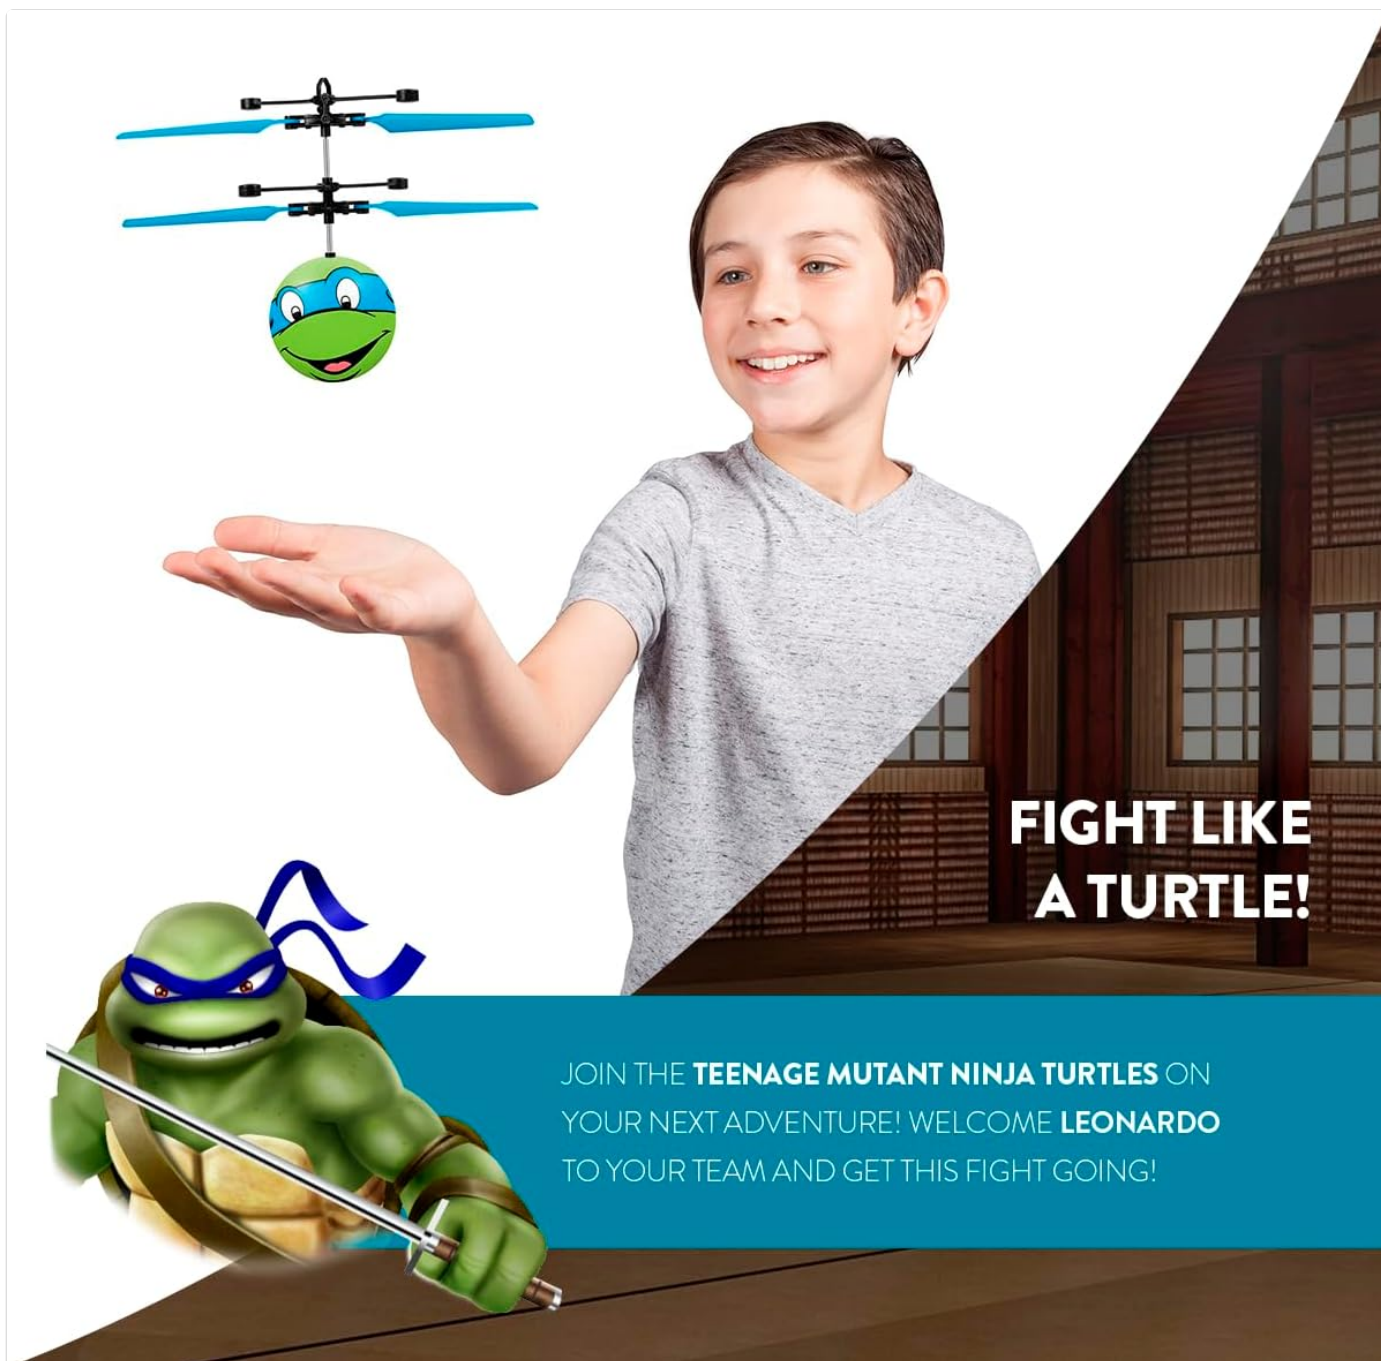


Image: A child playing with the Leonardo flying toy, illustrating the interactive and engaging nature of the product.

MAINTENANCE

Cleaning

Wipe the toy with a clean, dry cloth. Do not use water or cleaning solutions, as this may damage the electronic components.

Propeller Replacement

If a propeller becomes damaged, it can be replaced using the spare rotors provided. Gently pull off the damaged propeller and push on a new one, ensuring it is securely attached.

Storage

When not in use, store the toy in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the power switch is in the "OFF" position before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not fly or flies weakly.	Low battery.	Charge the toy fully using the USB cable.
Toy is unstable or crashes frequently.	Damaged propellers or obstruction.	Check propellers for damage and replace if necessary. Ensure no hair or debris is caught in the rotors.
Motion sensor not responding.	Obstruction or insufficient light.	Ensure the sensor area on the bottom of the toy is clear. Operate in a well-lit area.
Toy does not turn on.	Battery is completely drained or power switch is off.	Ensure the power switch is "ON". Charge the toy for at least 30 minutes.

SPECIFICATIONS

- **Model Name:** TMNTHeli-P
- **Model Number:** 36457
- **Brand:** World Tech Toys
- **Power Source:** Battery Powered (Lithium-Ion Polymer)
- **Charging:** USB Charging
- **Material:** Plastic
- **Item Weight:** 4 ounces
- **Item Dimensions:** 2 x 4.5 x 2 inches
- **Recommended Age:** 6+ years
- **GTIN/UPC:** 810086394579

PRODUCT VIDEO DEMONSTRATION

Your browser does not support the video tag.

Video: Official product demonstration of the Ninja Turtles Motion Sensing Flying Toy, showcasing its features and how to operate it.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact World Tech Toys customer service. Refer to the product packaging or the official World Tech Toys website for contact details.

Note: Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question