

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [saschedross](#) /

> [saschedross USB Cable Instruction Manual for OCOOPA Diveblues ZLS-118S Hand Warmer](#)

### saschedross USB Cable for ZLS-118S

# saschedross USB Cable Instruction Manual for OCOOPA Diveblues ZLS-118S Hand Warmer

## INTRODUCTION

This manual provides essential information for the proper use and care of your saschedross USB cable. This cable is specifically designed as a replacement charging cable for OCOOPA Diveblues ZLS-118S, ZLS118S, and Classic 118s rechargeable hand warmers. Please read these instructions carefully to ensure optimal performance and longevity of your product.



This image displays the saschedross USB cable, featuring a standard USB-A connector and a reversible USB-C connector, designed for charging compatible devices.

## PRODUCT FEATURES

- High-quality construction for reliable power delivery.
- Connector Type: USB-A Male to USB-C Male.
- Cable Length: 3.0 feet (approximately 0.91 meters).
- Color: Black.
- Compatible with OCOOPA Diveblues ZLS-118S, ZLS118S, and Classic 118s Hand Warmers.

## SETUP INSTRUCTIONS

Follow these steps to connect your USB cable for charging:

1. Identify the USB-A end (the rectangular connector) and the USB-C end (the smaller, oval-shaped connector) of the cable.
2. Insert the USB-A end into a compatible power source, such as a USB wall adapter, a computer's USB port, or a power bank.

3. Insert the USB-C end into the charging port of your OCOOPA Diveblues ZLS-118S hand warmer.
4. Ensure both connections are firm and secure to establish a proper charging connection.

## OPERATING INSTRUCTIONS

Once the cable is correctly connected to both the power source and your OCOOPA hand warmer, the device should automatically begin charging. Please refer to your specific hand warmer's user manual for details on charging indicators (e.g., LED lights) and expected charging times.

## CARE AND MAINTENANCE

- Keep the cable clean and dry. Use a soft, dry cloth to wipe off any dust or dirt.
- Avoid bending, twisting, or kinking the cable sharply, especially near the connectors, to prevent internal damage.
- Store the cable in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- Do not pull the cable by the cord itself; always grasp the connector when plugging or unplugging.

## TROUBLESHOOTING

### Cable Not Charging

- **Check Connections:** Ensure both the USB-A end and the USB-C end are fully and securely plugged into their respective ports.
- **Verify Power Source:** Confirm that the USB power source (wall adapter, computer port) is functional and providing power. Try a different power source if available.
- **Inspect Ports:** Check the charging port on your hand warmer and the USB ports for any debris, dust, or damage that might obstruct the connection.
- **Test with Another Cable/Device:** If possible, test the hand warmer with a different compatible cable, or test this cable with another compatible device, to determine if the issue lies with the cable, the hand warmer, or the power source.

## TECHNICAL SPECIFICATIONS

Specification	Detail
Brand	saschedross
Connector Type	USB-A Male to USB-C Male
Cable Type	USB
Cable Length	3.0 feet (approx. 0.91 meters)
Color	Black
Compatible Devices	OCOOPA Diveblues ZLS-118S, ZLS118S, Classic 118s Hand Warmers
Manufacturer	Shenzhen Waweis Technology Co., Ltd

## **WARRANTY AND SUPPORT**

For information regarding product warranty, returns, or technical support, please refer to the original product packaging or contact the manufacturer, saschedross, directly through their official support channels. Keep your purchase receipt for warranty claims.