

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Casaottima](#) /

› [Casaottima 52-Inch Tall Dresser with Charging Station Instruction Manual \(Model B10021601001\)](#)

Casaottima B10021601001

Casaottima 52-Inch Tall Dresser with Charging Station

Model: B10021601001 | **Brand:** Casaottima

INTRODUCTION

Thank you for choosing the Casaottima 52-Inch Tall Dresser with Charging Station. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new dresser. Please read these instructions carefully before beginning assembly and retain them for future reference.



A full view of the assembled Casaottima dresser, showcasing its light grey fabric drawers, white frame, and integrated charging station on top.

SAFETY INFORMATION

- **Read All Instructions:** Ensure you understand all assembly and usage instructions before proceeding.
- **Adult Assembly Required:** This product requires adult assembly. Keep small parts away from children during assembly.

- **Anti-Tip Device:** For safety, it is highly recommended to secure the dresser to a wall using an anti-tip device (if included) to prevent accidental tipping, especially in households with children or pets.
- **Charging Station Safety:**
 - Do not overload the charging station.
 - Use only with devices that meet the specified voltage and current requirements.
 - Keep liquids away from the charging station.
 - Do not use if the power cord or outlets are damaged.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the top surface or individual drawers. Distribute weight evenly.
- **Placement:** Place the dresser on a flat, stable surface.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components
- Top Board (Engineered Wood)
- Fabric Drawers (11 total: 3 small, 8 large)
- Charging Station Unit with Power Cord
- Drawer Handles (Wooden)
- Adjustable Feet
- Assembly Hardware (screws, wrench, etc.)
- Anti-Tip Kit

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble the dresser on a soft, clean surface to prevent scratches.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them with the parts list to ensure everything is present.
2. **Assemble the Metal Frame:** Connect the metal frame components according to the diagrams provided in your specific assembly guide. Ensure all screws are tightened securely but do not overtighten.
3. **Attach the Top Board:** Secure the engineered wood top board to the assembled metal frame using the provided hardware.
4. **Install the Charging Station:** Integrate the charging station unit into the designated slot on the top board. Ensure it is flush and secure.
5. **Prepare Fabric Drawers:** For each fabric drawer, insert the rigid bottom sheet to create a stable base. Attach the wooden handles to the front of each drawer.
6. **Insert Drawers:** Slide the assembled fabric drawers into their respective slots within the metal frame. The dresser features three smaller drawers at the top and eight larger drawers below.
7. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the dresser frame. Adjust them to

ensure the dresser is level and stable on your floor.

- 8. Install Anti-Tip Kit:** Securely attach the anti-tip device to the back of the dresser and to a wall stud, following the instructions provided with the kit. This step is crucial for safety.

Product Dimensions



This diagram illustrates the overall dimensions of the dresser: 39.4 inches wide, 11.8 inches deep, and 51.5 inches tall. It also shows the dimensions of the small and large drawers.

OPERATING INSTRUCTIONS

Using the Drawers

The Casaottima dresser features 11 fabric drawers designed for organized storage. Each drawer includes a rigid bottom insert for stability. To open, gently pull the wooden handle. To close, push the drawer fully into its slot. Avoid overloading drawers to ensure smooth operation and prevent damage.

Cationic Fabric Drawer

The use of cationic fabric in drawers ensures that they are more resistant to wear and tear, making them less likely to become deformed or damaged over time.



The dresser with several drawers pulled open, revealing the spacious interior suitable for organizing various items like books, clothes, and accessories.

Using the Charging Station

The integrated charging station provides convenient power access for your electronic devices.

1. **Connect Power:** Plug the dresser's power cord into a standard wall outlet.
2. **AC Outlets:** Use the three AC outlets (125V/12A) to power devices such as lamps, laptops, or other small appliances.
3. **USB Ports:** Use the two USB ports (5V/2A) to charge smartphones, tablets, smartwatches, and other USB-powered devices.

Always ensure devices are compatible with the charging station's specifications to prevent damage.

Outlets Design



A detailed view of the integrated charging station located on the top surface of the dresser, featuring three AC power outlets and two USB charging ports. A smartphone and smartwatch are shown connected.

This image highlights the charging station's features: 2 USB ports (5V/2A), a 6.6-foot power cord, and 3 AC outlets (125V/12A).

MAINTENANCE

Cleaning

- **Top Board and Frame:** Wipe with a dry cloth to remove dust and light dirt. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Fabric Drawers:** Spot clean fabric drawers with a mild detergent and a damp cloth if necessary. Allow to air dry completely before reinserting. Do not machine wash or tumble dry. The cationic fabric is designed for resistance to wear and tear.

Built-in Charging Station

The built in charging station, equipped with 3 AC outlets, 2 USB ports, offers an incredibly convenient and versatile solution to meet all your charging needs.



2 USB Ports
5V/2A



Power Cord
6.6 Foot



3 AC Outlets
125V/12A



This image shows the texture and construction of the cationic fabric drawers, emphasizing their durability and resistance to wear.

General Care

- Regularly check all screws and connections to ensure they remain tight.
- Avoid exposing the dresser to direct sunlight or extreme humidity, which can affect material integrity.
- Ensure adequate clearance around the dresser for cleaning, especially underneath.

Large Storage Space

This tv stand features 11 spacious drawers, offering ample storage space. With shelving, you can easily access items while showcasing beautiful decorations on the perfect platform.



An image showing a robot vacuum cleaner easily passing underneath the dresser, highlighting the sufficient bottom clearance for cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly or unstable.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom of the dresser. Tighten all assembly screws. Ensure the anti-tip kit is properly installed.

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Drawer overloaded; bottom insert not fully seated; frame misalignment.	Reduce drawer contents. Ensure the rigid bottom insert is fully pushed down. Check frame assembly for proper alignment.
Charging station not working.	Power cord unplugged; wall outlet not active; device incompatibility; charging station fault.	Ensure the power cord is securely plugged into a live wall outlet. Test the wall outlet with another device. Verify your device is compatible with the charging station's output. If issues persist, contact customer support.
Missing parts during assembly.	Packaging not thoroughly checked.	Double-check all packaging materials. If still missing, contact Casaottima customer support with your purchase details.

SPECIFICATIONS

- **Brand:** Casaottima
- **Model Number:** B10021601001
- **Product Dimensions (Overall):** 39.37" W x 11.81" D x 51.38" H
- **Color:** Light Grey
- **Material:** Engineered Wood (Top Board), Metal (Frame), Cationic Fabric (Drawers)
- **Number of Drawers:** 11 (3 small, 8 large)
- **Item Weight:** Approximately 37.17 Pounds
- **Assembly Required:** Yes
- **Product Care Instructions:** Wipe with Dry Cloth
- **Charging Station:**
 - 3 AC Outlets (125V/12A)
 - 2 USB Ports (5V/2A)
 - Power Cord Length: 70 inches (approx. 5.8 feet)
- **UPC:** 850062867949

WARRANTY AND SUPPORT

Casaottima stands behind the quality of its products. For any questions regarding assembly, missing parts, or product defects, please contact Casaottima customer support directly. Please have your model number (B10021601001) and purchase information ready when contacting support.

For the most up-to-date warranty information, please refer to the warranty card included with your product or visit the official Casaottima website.

