

WUNIAK T50HD

Instruction Manual

WUNIAK CASE FOR TECLAST T50HD 11 INCH TABLET

Introduction

Thank you for choosing the WUNIAK Case for your TECLAST T50HD 11 Inch Tablet. This premium leather folio stand cover is designed to provide comprehensive protection and enhanced functionality for your device. This manual will guide you through the features, setup, operation, and maintenance of your new tablet case.

Please ensure your tablet model is the TECLAST T50HD 11 Inch Tablet for optimal compatibility and fit.

Product Features

The WUNIAK tablet case offers a range of features designed for convenience and protection:

- **Compatible Model:** Specifically designed for the TECLAST T50HD 11 Inch Tablet, ensuring a precise fit and access to all ports and buttons.
- **Multi-functional Design:** Features a built-in leather hand strap for secure one-handed operation, an external elastic band, and a magnetic buckle for enhanced closure.
- **Premium Durable Material:** Constructed from high-quality durable PU leather with a soft, non-slip interior, offering full body protection against scratches, impacts, fingerprints, and dust.
- **Versatile Stand Cover:** The foldable cover provides multiple viewing angles, ideal for watching videos, typing, gaming, or learning.



The WUNIAK case in rose red, shown with a tablet inserted and propped up in stand mode, highlighting its design and functionality.



ALL-ROUND PROTECTION



Illustration demonstrating the all-round protection provided by the case, with a focus on impact resistance from drops.

Setup

To install your TECLAST T50HD 11 Inch Tablet into the WUNIAK case:

1. Gently align your TECLAST T50HD tablet with the case's interior frame.
2. Carefully insert the tablet, ensuring all corners and edges are securely seated within the protective shell. The case is designed for a snug fit to prevent accidental dislodgement.
3. Verify that all cutouts for speakers, cameras, ports, and buttons align correctly with your tablet's features.

● Full access to all features



Speaker



Cameras



Ports and Buttons

An image illustrating how the case provides full access to the tablet's speaker, camera, and ports/buttons once installed.

Operating Instructions

 
Utilize the versatile features of your WUNIAK case:

- **Using the Stand:** Fold the front cover back to create a triangular stand. This allows for two primary viewing angles:
 - *Viewing Angle (approx. 65 degrees):* Ideal for watching videos or video calls.
 - *Typing Angle (approx. 30 degrees):* Suitable for comfortable typing or drawing.
- **Using the Hand Strap:** Slide your hand through the built-in leather strap on the back of the case for a secure grip, enabling comfortable one-handed operation.


- **Magnetic Closure:** The magnetic buckle and external elastic band ensure the case remains securely closed when not in use, protecting your tablet screen.

● Two Angle View

Foldable cover offers sturdy stand for viewing typing



**65 angle
Viewing**

 

**30Typing
angle**



Visual representation of the two available viewing angles (65-degree viewing and 30-degree typing) provided by the foldable stand.

● Back Handle

Make usage more convenient
and easy to handle



An image demonstrating the integrated back handle (hand strap) for more convenient and easy handling of the tablet.

✓ Entertainment



✓ Study



✓ Parent-child companionship

✓ Work



Collage of images showing the tablet case being used in different scenarios: entertainment, study, parent-child companionship, and work, highlighting its versatility.

Maintenance

To ensure the longevity and appearance of your WUNIAK tablet case:

- **Cleaning:** Wipe the exterior with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, but avoid harsh chemicals or abrasive cleaners.
- **Drying:** Allow the case to air dry completely after cleaning. Do not expose it to direct sunlight or high heat, as this may damage the material.

- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight.
- **Avoid Sharp Objects:** Keep the case away from sharp objects to prevent scratches or punctures to the PU leather.

Troubleshooting

If you encounter any issues with your tablet case, consider the following:

- **Tablet Does Not Fit:** Double-check that your tablet is indeed the TECLAST T50HD 11 Inch model. This case is specifically designed for this model and may not fit others. Ensure the tablet is inserted correctly and fully seated.
- **Case Does Not Close Securely:** Ensure no foreign objects are lodged between the tablet and the case. The magnetic closure relies on direct contact.
- **Stand Instability:** Ensure the stand is fully unfolded and placed on a flat, stable surface. Adjust the angle slightly if needed to find the most stable position.

If problems persist, please refer to the Customer Support section.

Specifications

Attribute	Detail
Brand	WUNIAK
Compatible Devices	TECLAST T50HD 11 Inch Tablet
Model Number	T50HD
Form Factor	Folio Case
Shell Type	Soft
Material	Premium PU Leather
Color	ROSE RED
Item Weight	3.52 ounces (approx. 100 grams)
Package Dimensions	1 x 1 x 1 inches (approximate shipping dimensions)
Special Features	Built-in Hand Strap, Multi-angle Stand, Magnetic Closure, Full Access to Ports
Date First Available	May 26, 2024

Warranty Information

Specific warranty details for this product are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product packaging, the seller's website, or contact WUNIAK customer support directly.

Customer Support

If you have any questions, concerns, or require technical assistance with your WUNIAK tablet case, please do not hesitate to contact us. Our customer service team is dedicated to providing timely support and assistance.

Please refer to the contact information provided on the product packaging or the retailer's website where you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D57SQT4X>

More documents and user manuals: <https://manuals.plus/>