

Gevi SVCA0-WP0A1

Gevi Cordless Vacuum Cleaner User Manual

Model: SVCA0-WP0A1

INTRODUCTION

Thank you for choosing the Gevi Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.

PACKAGE CONTENTS


Please check the contents of your package to ensure all items are present and undamaged:

- Gevi Cordless Vacuum Cleaner (Main Unit)
- Adaptor
- Dusting Brush (2-in-1)
- Flat Suction Nozzle
- Wall Mount

SETUP AND ASSEMBLY

Follow these steps to assemble your Gevi Cordless Vacuum Cleaner:

1. **Assemble the Extension Tube:** Connect the two sections of the extension tube by aligning the connectors and pushing them firmly together until they click into place.
2. **Attach the Extension Tube to the Main Unit:** Insert the assembled extension tube into the main vacuum unit's suction port. Ensure it clicks securely.
3. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension tube. Press the release button on the tube and push the brush head in until it locks.
4. **Attach Accessories (Optional):** For handheld use or specific cleaning tasks, attach the flat suction nozzle or the 2-in-1 dusting brush directly to the main unit's suction port. Press the release button and insert the desired accessory.

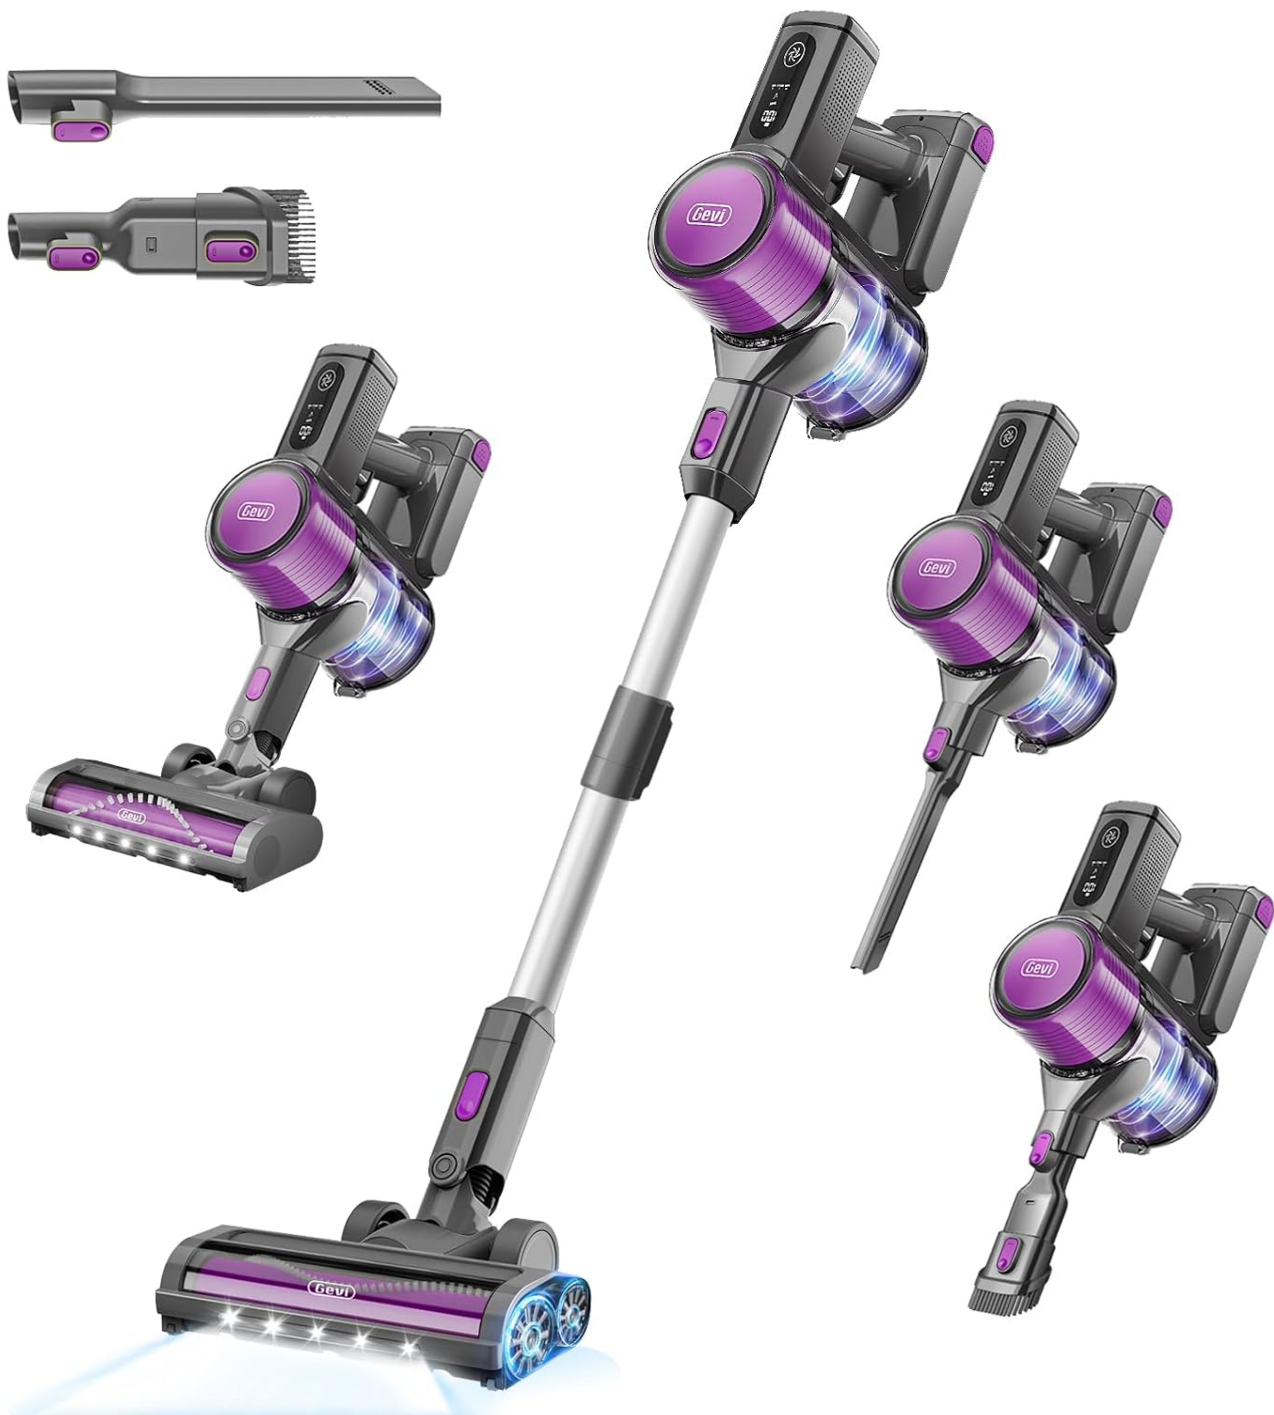

The Gevi Cordless Vacuum Cleaner can be configured as a stick vacuum or a handheld unit, utilizing various attachments for different cleaning needs.

Official video demonstrating how to assemble the accessories for the Gevi Cordless Vacuum Cleaner, including the two-section tube and various attachments.

OPERATING INSTRUCTIONS

Your Gevi Cordless Vacuum Cleaner is designed for efficient and versatile cleaning. Familiarize yourself with its features for optimal performance.

Power and Suction Modes

The intelligent interactive LED screen displays power level, brush status, and suction modes. You can easily

switch between three cleaning modes with a single finger:

- **Low Suction Mode:** Ideal for light cleaning and extending battery life (up to 45 minutes).
- **Medium Suction Mode:** Balanced power for everyday cleaning (approx. 20 minutes runtime).
- **High Suction Mode:** Maximum suction (up to 30000Pa) for deep cleaning and stubborn dirt (approx. 10 minutes runtime).



Smart Led Display



Brush Roller Tangled



Channel Blocked

LOW MIDDLE HIGH

LOW MIDDLE HIGH

Suction Modes



Speed Control

The smart LED display provides real-time information on power, brush status, and allows selection of suction modes.

Cleaning Surfaces

The vacuum is equipped with a powerful dual motor system and soft roller bristles for effective cleaning on various surfaces:

- **Hardwood Floors:** The soft roller bristles ensure gentle yet thorough cleaning, leaving floors silky smooth without scratches.
- **Carpets:** The 400W brushless motor and 50W brush head motor provide powerful suction for deep cleaning carpets, effectively picking up embedded dirt and pet hair.



Deep Clean On Carpets

Power Suction On Hard Floors



The vacuum is designed for effective deep cleaning on carpets and powerful suction on hard floors.

Versatility and Attachments

The Gevi vacuum can easily convert into a lightweight handheld vacuum for versatile cleaning:

- **Handheld Mode:** Detach the extension tube to use the main unit as a compact handheld vacuum for furniture, car interiors, or quick clean-ups.
- **Flat Suction Nozzle:** Ideal for cleaning narrow gaps, corners, and hard-to-reach areas like between sofa cushions or along baseboards.
- **2-in-1 Dusting Brush:** Perfect for cleaning delicate surfaces, upholstery, curtains, and keyboards.



Converts To A Lightweight Hand Vacuum


The vacuum easily converts to a lightweight hand vacuum for versatile cleaning tasks.

LED Headlights

The floor brush is equipped with five bright LED lights that illuminate the cleaning path, making invisible dust and pet hair visible, especially in dimly lit areas or under furniture. The ultra-wide angle illumination enhances the visible range of dust.

Impressive Lights

Illuminate Every Dirty Spot

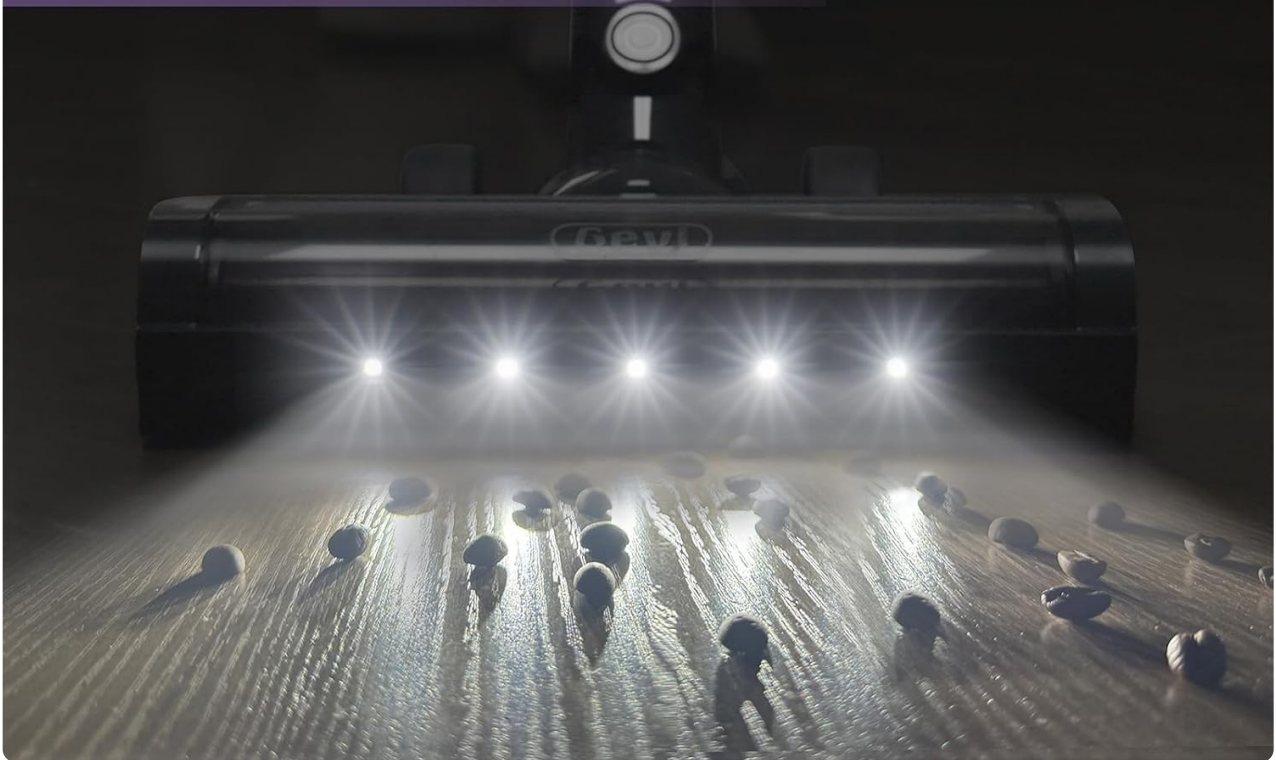

The impressive LED lights on the brush head illuminate every dirty spot, ensuring thorough cleaning.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Gevi Cordless Vacuum Cleaner.

Emptying the Dust Cup

The extra-large dust cup can be emptied with a single touch, minimizing contact with dirt. Simply press the release button on the dust cup to open the bottom flap and dispose of the contents into a trash bin.



Never Touch The Mess One Key Empty XL Dust Cup

The one-key empty feature allows for hygienic disposal of collected debris without touching the mess.

Hy-HEPA Filter Cleaning

The exclusive Hy-HEPA technology allows for easy and effective cleaning of the HEPA filter. After each use, simply twist the rotary knob on the lid of the dust cup for 3 seconds. This action helps to dislodge dust from the HEPA filter, extending its lifespan and maintaining suction efficiency.

HEPA CLEANING

BEFORE

AFTER

3 Seconds to Extend LifeSpan

The Hy-HEPA cleaning function helps maintain filter efficiency and extends its lifespan.

General Cleaning and Storage

- Wipe the exterior of the vacuum with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Regularly check the brush roller for tangled hair or debris and remove as necessary.
- Store the vacuum in a cool, dry place. The included wall mount can be used to store the vacuum and its accessories, saving space.

TROUBLESHOOTING

If you encounter issues with your Gevi Cordless Vacuum Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely inserted into the main unit.
Low suction power	Dust cup is full, filter is clogged, or nozzle/tube is blocked.	Empty the dust cup. Clean the HEPA filter using the Hy-HEPA function. Check and clear any blockages in the nozzle, tube, or brush head.
Brush roller not spinning	Brush roller is tangled with hair/debris or motor is obstructed.	Turn off the vacuum and remove any tangled hair or debris from the brush roller. Ensure no obstructions are preventing its rotation.
Short battery runtime	Battery not fully charged or operating in high suction mode.	Ensure the battery is fully charged. Use low or medium suction mode for longer runtime.

If the problem persists after attempting these solutions, please contact Gevi customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Gevi
Model Name	SVCA0-WP0A1
Special Feature	Spotless Cleaning, Lightweight, Cordless, Headlight, HEPA
Filter Type	HEPA Filter
Capacity	0.6 Liters
Wattage	400 watts
Runtime	Up to 45 minutes
Recommended Uses	Home, Hard Floor, Carpet, Pet Hair
Form Factor	Stick
Color	Purple
Product Dimensions	7.5"L x 10"W x 43"H
Noise Level	78 dB
Item Weight	6.83 pounds

Feature	Detail
Number of Speeds	3
Control Method	Touch / Push Button
Battery Type	Lithium Ion (Rechargeable, included)

WARRANTY AND SUPPORT

Gevi values your satisfaction. Every product purchased via official or authorized channels is entitled to a **12-month warranty** and **lifetime technical support**. If you encounter any issues with your Gevi Cordless Vacuum Cleaner, please feel free to contact Gevi customer support for assistance. For support, please visit the official Gevi website or refer to the contact information provided with your product packaging.