

Amazon Basics B0D59Q7FS6

Amazon Basics Portable and Flexible Tripod User Manual

Model: B0D59Q7FS6

1. INTRODUCTION

Thank you for choosing the Amazon Basics Portable and Flexible Tripod. This manual provides essential information for the safe and effective use of your new tripod. Please read it thoroughly before operation and retain it for future reference.

This tripod is designed for versatility, offering adjustable height and compatibility with both smartphones and cameras, making it ideal for various content creation needs.

2. SAFETY INFORMATION

- Do not overload the tripod beyond its specified weight capacity.
- Ensure all locking mechanisms are securely fastened before mounting a device.
- Avoid placing the tripod on unstable or uneven surfaces.
- Keep the tripod away from extreme temperatures, direct sunlight, and moisture.
- Do not attempt to modify or disassemble the tripod.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Amazon Basics Portable and Flexible Tripod
- Smartphone holder attachment
- Bluetooth remote shutter
- Carrying bag

4. SETUP

4.1 Unfolding the Tripod

1. Place the tripod on a flat, stable surface.
2. Gently extend the three legs outwards until they are fully splayed and stable.

4.2 Adjusting Height

The tripod features multiple adjustable sections for height customization. Locate the locking clasps on the central column. Open the clasps, extend the desired section to your preferred height, and then securely close the clasps to lock it in place. Repeat for all sections as needed.

4.3 Attaching a Device

- **For Smartphones:** Attach the smartphone holder to the tripod's screw mount by twisting it clockwise until secure. Insert your smartphone into the holder, ensuring it is firmly gripped.
- **For Cameras:** If using a camera, unscrew the smartphone holder from the tripod's mount. Carefully screw your camera onto the tripod's universal 1/4-inch screw mount by twisting it clockwise until it is securely attached.

4.4 Pairing the Bluetooth Remote Shutter

1. Ensure the Bluetooth remote shutter is charged (if applicable) and powered on.
2. Activate Bluetooth on your smartphone or camera.
3. Search for available devices and select the tripod's remote (usually named 'AB Shutter3' or similar).
4. Once paired, the remote can be used to trigger your device's camera shutter.

5. OPERATING

5.1 Using the Remote Shutter

The Bluetooth remote shutter allows you to capture photos or start/stop video recording from a distance. Press the appropriate button on the remote (typically marked with camera or video icons) to activate the shutter function on your paired device.

5.2 Positioning the Tripod

Adjust the angle of your device by loosening the knob on the tripod head, positioning your device as desired, and then tightening the knob to secure it. The flexible legs allow for various setups, including wrapping around objects for unique angles or stabilizing on uneven terrain.

6. MAINTENANCE

- **Cleaning:** Wipe the tripod with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, collapse the tripod to its most compact size and store it in the provided carrying bag in a cool, dry place, away from direct sunlight.
- **Inspection:** Periodically check all screws and locking mechanisms to ensure they are tight and functioning correctly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tripod is unstable.	Legs not fully extended or locked; uneven surface.	Ensure legs are fully extended and all clasps are locked. Move to a flat, stable surface.
Device not secure in holder.	Holder not tightened; device too large/small.	Tighten the holder's screw mount. Ensure your device fits within the holder's adjustable range.
Bluetooth remote not pairing.	Remote not powered on; Bluetooth off on device; remote battery low.	Ensure remote is on. Turn on Bluetooth on your device. Charge/replace remote battery.

8. SPECIFICATIONS

- **Model:** B0D59Q7FS6
- **Brand:** Amazon Basics

- **Manufacturer:** Amazon Basics
- **First Available:** May 27, 2024
- **Compatibility:** Smartphones, Cameras (with 1/4-inch screw mount)
- **Features:** Adjustable height, flexible legs, Bluetooth remote shutter

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the Amazon Basics official website or contact Amazon customer service directly. Keep your purchase receipt for warranty claims.