

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› [VINABTY Voice Remote Control User Manual for Hisense 4K UHD Smart Google TVs](#)

VINABTY 112695533

VINABTY Voice Remote Control User Manual

For Hisense 4K UHD Smart Google TVs

1. PRODUCT OVERVIEW

This manual provides instructions for the VINABTY Voice Remote Control, designed as a replacement for various Hisense 4K UHD Smart Google TV models. It offers essential functions including power, input selection, volume control, channel navigation, and voice search capabilities.





Image 1.1: Front view of the VINABTY Voice Remote Control, displaying all buttons including power, input, Google Assistant, navigation, volume, channel, and streaming service shortcuts.

Key Features:

- **Voice Search:** Integrated Google Assistant button for voice commands.
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix, Prime Video, YouTube, Disney+, Tubi, and Peacock.
- **Standard TV Controls:** Power, Input, Volume, Channel, Home, Back, Mute, and Menu functions.

2. COMPATIBILITY

This VINABTY Voice Remote Control is compatible with a wide range of Hisense 4K UHD Smart Google TV models. Please verify your TV model number against the list below to ensure compatibility.



Replace Voice Remote Control fit for Hisense 4K UHD Smart Google TV

43A65K 50A65K 55A65K 65A65K 75A65K 85UX 43A7N 50A7N 75A6H 43A53FUA
55U7G 75U7H 43A68H 43A6H 50A6H 55A7N 65A7N 55U78H 65A65H 75U65H

Image 2.1: The VINABTY remote control displayed with a Hisense TV, illustrating its compatibility with various Hisense 4K UHD Smart Google TV models.

Compatible Hisense TV Models:

- 43A65K
- 50A65K
- 55A65K
- 65A65K
- 75A65K
- 85UX
- 43A7N
- 50A7N
- 55A7N
- 65A7N
- 55U7G
- 75U7H
- 43A53FUA
- 43A68H
- 43A6H
- 50A6H
- 55U78H
- 65A65H
- 75A6H
- 75U65H
- 85U7H
- 85A66GUA

- 65U7G
- 75U6H
- 55U8H
- 65A6H
- 55U7H
- 75U68H
- 50A53FUA
- 50A66GUA
- 55A53FUA
- 55A66GUA
- 65A53FUA
- 65A66GUA
- 65A68H
- 65U65H
- 75U7G
- 43A65H
- 50A65H
- 50U6H
- 55A65H
- 55A6H
- 55U65H
- 50A62GUA
- 43A53EUA
- 50A68H
- 55A68H
- 55U68H
- 55U6H
- 55U75H
- 75U8H
- 65U68H
- 65U6H
- 65U75H
- 65U78H
- 65U7H
- 65U8H
- 70A56EUA
- 75A53FUA
- 75A62GUA
- 75A65H
- 75A68H
- 75U75H
- 75U78H
- 75A76K

- 55A76K

3. SETUP

3.1. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

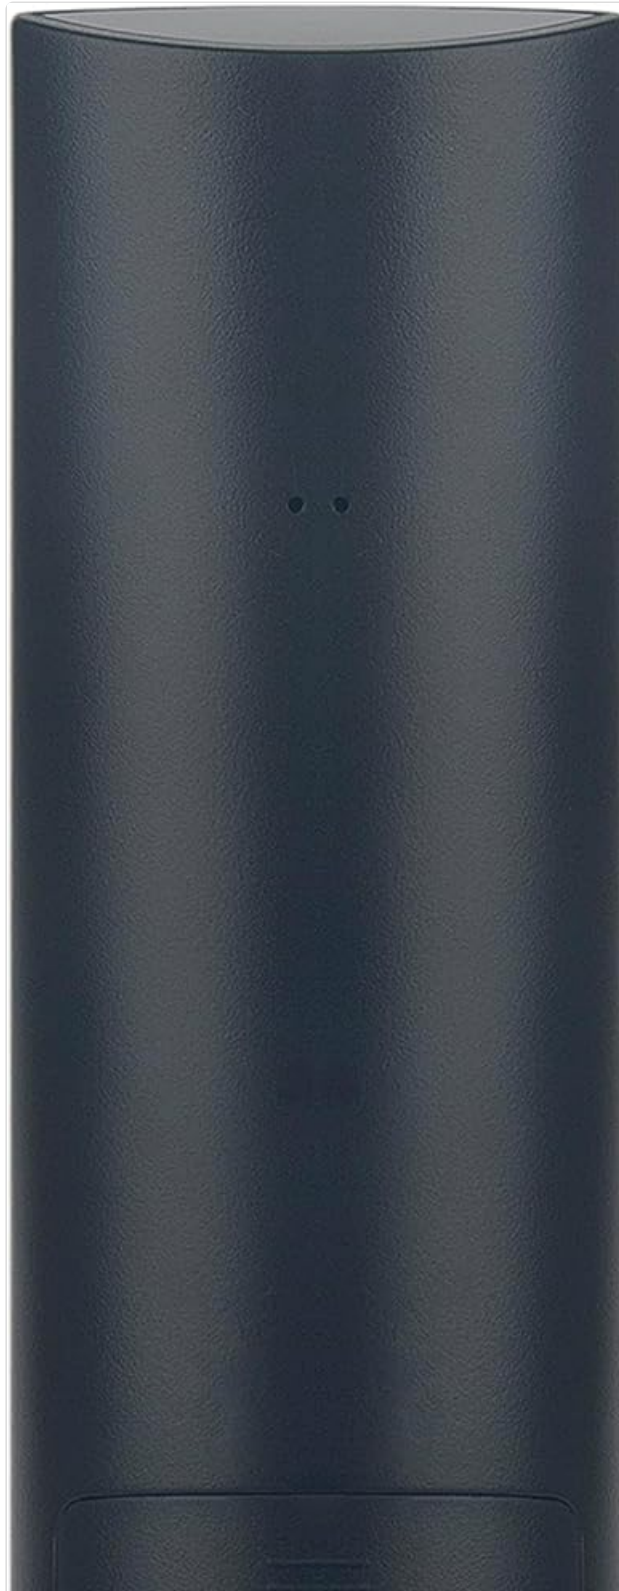




Image 3.1: Back view of the remote control, illustrating the battery compartment for AAA batteries.

3.2. Pairing the Remote Control

This voice remote control requires pairing with your Hisense Smart Google TV to enable voice functions and ensure full compatibility. The remote should work for basic functions (power, volume, channel) immediately after battery installation, but pairing is necessary for voice commands.

1. Ensure your Hisense TV is powered on.
2. On your TV, navigate to the **Settings** menu.
3. Select **Remotes & Accessories** or a similar option.
4. Choose **Pair new device** or **Add accessory**.
5. Follow the on-screen instructions. You may need to press and hold specific buttons on the VINABTY remote (e.g., the **Home** and **Back** buttons simultaneously, or the **Google Assistant** button) until an indicator light flashes or the TV detects the remote.
6. Once the remote appears in the list of available devices on your TV screen, select it to complete the pairing process.
7. A confirmation message should appear on your TV when pairing is successful.

4. OPERATING INSTRUCTIONS

4.1. Basic TV Control

- **Power Button** (⏻): Press to turn the TV on or off.
- **Input Button**: Press to cycle through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **Volume Up/Down** (VOL ▲/▼): Adjusts the TV volume.
- **Mute Button** (⏻): Mutes or unmutes the TV audio.
- **Channel Up/Down** (CH ▲/▼): Changes TV channels.

4.2. Navigation and Menu Access

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and on-screen selections.
- **OK Button:** Confirms a selection or opens a menu item.
- **Home Button (🏠):** Returns to the TV's main home screen.
- **Back Button (←):** Returns to the previous screen or menu.
- **Menu Button (☰):** Accesses additional options or context-sensitive menus.
- **123 Button:** May bring up a virtual number pad or additional functions depending on the TV model.

4.3. Using Voice Search (Google Assistant)

The remote features a dedicated Google Assistant button for voice commands.





Image 4.1: The remote control with the Google Assistant button and a microphone icon, indicating voice search functionality.

1. Press the **Google Assistant Button** (multicolored circle icon).
2. Speak clearly into the microphone located at the top of the remote.
3. Examples of commands:
 - "Open Netflix"
 - "Search for action movies"
 - "What's the weather like?"
 - "Turn up the volume"

4.4. Streaming Service Shortcuts

Directly access your favorite streaming applications by pressing the dedicated buttons:

- **NETFLIX**
- **prm video** (Prime Video)
- **YouTube**
- **Disny** (Disney+)
- **tubi**
- **peacock**

5. MAINTENANCE

5.1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries.

5.2. Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote's electronics.

6. TROUBLESHOOTING

6.1. Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** For basic IR functions, ensure there is a clear line of sight between the remote and the TV's IR receiver.
- **Re-pair Remote:** If the remote was previously paired and stopped working, try re-pairing it with your TV (refer to Section 3.2).
- **Obstructions:** Remove any objects that might be blocking the signal between the remote and the TV.

6.2. Voice Control Not Working

- **Pairing Status:** Voice control requires the remote to be successfully paired via Bluetooth. Confirm the remote is paired in your TV's settings.
- **Microphone Obstruction:** Ensure the microphone at the top of the remote is not covered.
- **Speak Clearly:** Speak directly into the microphone in a clear, moderate tone.
- **Internet Connection:** Voice search functionality often requires an active internet connection on your TV.

6.3. Specific App Buttons Not Working

- **App Installation:** Ensure the corresponding app is installed and updated on your Hisense Smart Google TV.
- **Internet Connection:** Streaming apps require an active internet connection.

7. SPECIFICATIONS

| Feature | Specification |
|-----------------------|----------------------------------|
| Model Number | 112695533 |
| Product Dimensions | 6.4 x 2 x 0.7 inches |
| Item Weight | 2.08 ounces |
| Battery Type | 2 x AAA batteries (not included) |
| Special Feature | Voice Search (Google Assistant) |
| Color | Black |
| Max Supported Devices | 1 (Television) |



6.5 inch



Image 7.1: The remote control with its approximate dimensions: 6.5 inches in length and 1.57 inches in width.

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your VINABTY Voice Remote Control, please contact the

manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase.