

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VEVOR](#) /

› [VEVOR Commercial 1000W Cotton Candy Machine Instruction Manual](#)

VEVOR Cotton Candy Machine Commercial

VEVOR Commercial 1000W Cotton Candy Machine Instruction Manual

Brand: VEVOR | Model: Cotton Candy Machine Commercial

1. INTRODUCTION

Thank you for choosing the VEVOR Commercial 1000W Cotton Candy Machine. This electric floss maker is designed for efficient and easy cotton candy production, suitable for various events from home parties to commercial use. Featuring a durable stainless steel bowl, precise temperature control, and user-friendly operation, this machine ensures a delightful experience. Please read this manual thoroughly before operation to ensure safe and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always connect the machine to a grounded electrical outlet.
- Do not immerse the machine's base in water or any other liquid.
- Keep hands and foreign objects away from the spinning head during operation.
- Ensure proper ventilation when operating the machine.
- Supervise children closely when the machine is in use.
- Turn off and unplug the machine before cleaning or maintenance.
- Use only recommended sugars or hard candies.
- Do not operate the machine if the power cord or plug is damaged.
- ETL/CE certification ensures greater safety during use.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present and in good condition:

- 1 x Cotton Candy Machine Base
- 1 x Stainless Steel Candy Bowl
- 1 x Sugar Scoop
- 1 x Carbon Brush
- 1 x Power Cord
- 1 x Fuse (spare)
- 1 x Instruction Manual



Image: VEVOR Cotton Candy Machine components, showing the main unit, stainless steel bowl, sugar scoop, and instruction manual.

4. SETUP INSTRUCTIONS

- 1. Unpack Components:** Carefully remove all items from the packaging.
- 2. Attach Stainless Steel Bowl:** Place the large stainless steel bowl onto the main machine base. Ensure it is securely latched on both sides to prevent movement during operation.
- 3. Connect Power:** Plug the power cord into the machine's power inlet and then into a standard 110V grounded electrical outlet.
- 4. Initial Cleaning:** Before first use, wipe down the stainless steel bowl and sugar head with a damp cloth and then dry thoroughly.



Image: Visual guide demonstrating the four-step assembly process for the cotton candy machine.

Setup Video Guide

Your browser does not support the video tag.

Video: A detailed guide on unpacking, assembling, and preparing the cotton candy machine for first use.

5. OPERATING INSTRUCTIONS

- 1. Power On and Preheat:** Turn on the 'Power' switch and the 'Heat' switch. Adjust the temperature knob to the desired setting (Min to Max). Allow the machine to preheat for 2-3 minutes. The voltage meter will indicate the current voltage.
- 2. Add Sugar:** Once preheated, use the sugar scoop to pour your preferred flossing sugar, hard candy, or fruit cubes directly into the center spinning head. Do not overfill.
- 3. Collect Cotton Candy:** As the sugar melts and spins into floss, use a cotton candy stick to collect the floss by rotating it around the inside of the bowl. Move the stick in a circular motion to build up the cotton candy cone.
- 4. Continuous Operation:** The 1000W motor allows for up to 1-hour continuous operation without blockage, ensuring rapid production of up to 6 cones per minute.



Image: The control panel of the cotton candy machine, highlighting the temperature control and power switches for easy operation.



Image: A visual breakdown of the four simple steps to create delicious cotton candy.

Operation Video Guide

Your browser does not support the video tag.

Video: Demonstration of the VEVOR Cotton Candy Machine in action, showing the process of making cotton candy.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your cotton candy machine.

- 1. After Use:** Turn off both 'Power' and 'Heat' switches and unplug the machine.
- 2. Bowl Cleaning:** Unlatch and remove the stainless steel bowl. Wash it with warm, soapy water. Rinse thoroughly and dry completely.
- 3. Sugar Head Cleaning:** For quick cleaning, while the machine is still warm (but turned off), pour a small amount of warm water into the sugar head. The spinning action will help dislodge residual sugar. Turn off the machine and carefully wipe the sugar head with a dry cloth. Ensure all sugar residue is removed.
- 4. Exterior Cleaning:** Wipe the exterior of the machine base with a damp cloth. Do not use abrasive cleaners.
- 5. Storage:** Store the machine in a clean, dry place. The bowl can be inverted over the base for compact storage.

Cleaning Video Guide

Your browser does not support the video tag.

Video: This video demonstrates the cleaning process for the cotton candy machine, including how to clean the bowl and sugar head.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on	Not plugged in; Power switch off; Blown fuse	Ensure power cord is securely plugged in; Turn on 'Power' switch; Check and replace fuse if necessary.
Sugar not spinning into floss	Insufficient preheating; Incorrect temperature setting; Sugar head clogged	Allow machine to preheat for 2-3 minutes; Adjust temperature to a higher setting; Clean sugar head thoroughly.
Cotton candy is hard or brittle	Temperature too high	Lower the temperature setting slightly.
Excessive sugar residue in bowl	Overfilling sugar head; Insufficient cleaning	Add smaller amounts of sugar; Clean the bowl and sugar head regularly.

8. PRODUCT SPECIFICATIONS

Product Dimensions: 20.39 x 20.39 x 16.34 inches

Item Weight: 17.04 pounds

Manufacturer: VEVOR

ASIN: B0D59VBJ7K

Item Model Number: Cotton Candy Machine Commercial

Power: 1000W

Candy Bowl Capacity: 3.5 Ounces

Temperature Range: 244.9°F/118.3°C to 439.2°F/226.2°C

Date First Available: May 27, 2024



SPECIFICATIONS

Item Model Number: **MHTJXM01H**

Color: **Red**

Power: **1000W**

Candy bowl capacity: **3.5 Ounces**

Temp Range: **244.9°F~439.2°F / 118.3°C~226.2°C**

Product Weight: **17 lbs / 7.73 kg**

Product Size: **20.4x20.4x16.3 inch / 518x518x415 mm**

1 x **Cotton Candy Machine**

1 x **Sugar Scoop**

1 x **Carbon Brush**

1 x **Power cord**

1 x **Fuse**

1 x **Instruction Manual**

Image: A graphic illustrating the key specifications and physical dimensions of the cotton candy machine.

9. WARRANTY AND SUPPORT

The VEVOR Cotton Candy Machine is designed and manufactured to high-quality standards, ensuring reliable performance. This product is ETL/CE certified, guaranteeing compliance with safety and quality regulations.

For technical support, warranty information, or any inquiries regarding your product, please visit the official VEVOR support website: www.vevor.com/support

Please retain your purchase receipt as proof of purchase for any warranty claims.