

Alohappy 69" Fluted TV Stand

Alohappy 69" Fluted TV Stand Instruction Manual

Model: 69" Fluted TV Stand (ASIN: B0D5B6B65V)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Alohappy 69" Fluted TV Stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference. Ensure all components are present and undamaged before proceeding.

SAFETY INFORMATION

- Ensure proper assembly to prevent tipping.
- Keep away from children to avoid injury from sharp edges or heavy weight.
- Do not exceed the weight limit of 150 lbs (68 kg) on the top surface.
- Always lift the unit with assistance when moving to prevent injury or damage.

PACKAGE CONTENTS

Your Alohappy 69" Fluted TV Stand package includes all necessary parts and hardware for assembly, along with this user manual. Please verify that all components are present and in good condition before starting assembly. Refer to the included parts list for detailed identification of each piece.

SETUP AND ASSEMBLY

Assembly of the Alohappy 69" Fluted TV Stand is designed to be straightforward with step-by-step instructions and numbered parts. An estimated assembly time is approximately 30 minutes. It is recommended to have a second person assist with assembly for ease and safety.

Assembly Guide Video

Your browser does not support the video tag.

This video provides a step-by-step visual guide for the complete assembly process of the Alohappy 69-inch Fluted TV

Stand.

Visual Assembly Aids



This image displays the overall dimensions of the Alohappy 69-inch Fluted TV Stand, including length, depth, and height, along with suggested TV sizes up to 75 inches.



**Stable
Structure**



**Ample Storage
Space**



Easy to clean



Stylish Design

An overview highlighting the smooth curved edges, six solid wood legs for stability, and the ample storage space provided by the drawers and shelves.



Cable Management Hole

- 2 cable holes are located on the bottom of the TV cabinet, and the messy wires are hidden to make the space more tidy



Quality Materials

- MDF Boards
- Solid wood legs
- Metal drawer slide



Adjustable legs

- TV cabinet can adapt to different materials of flooring

Close-up of the cable management holes located at the back for organizing wires and the adjustable middle support legs designed for stability on uneven surfaces.

OPERATING INSTRUCTIONS

The Alohappy 69" Fluted TV Stand features flexible sliding doors and ample storage to organize your media devices and accessories.

Sliding Doors

The slatted sliding doors glide smoothly along the console, allowing you to easily access or conceal the storage compartments. These doors can be positioned to cover any section of the stand, offering versatile display and storage options.

Your browser does not support the video tag.

A short video demonstrating the smooth operation and design of the sliding tambour doors on the Alohappy 69-inch Fluted TV Stand.

Storage and Organization

- **Drawers:** Two integrated drawers provide concealed storage for smaller items.
- **Adjustable Shelves:** Six storage shelves are adjustable, allowing you to customize the space for various media devices, books, or decorative items.
- **Cable Management:** Two cable management holes are located at the bottom of the TV stand to help keep wires tidy and out of sight.

Flexible Sliding Doors Design Various Display Modes



This image illustrates the versatility of the sliding doors, showing different ways to arrange them to access or conceal storage compartments.



Ample Bottom Space

- Enable the sweeping robot to work smoothly



Spacious Tabletop

- Size of Tabletop:
Fits Your TV Up to 75"



Ample Storage Space

- 2 Storage Drawers
- 6 Storage Shelves:
Removable & Adjustable

Detailed view of the interior storage, including two drawers and six adjustable shelves, along with the clearance underneath for robot vacuums.

MAINTENANCE

To maintain the appearance and longevity of your Alohappy 69" Fluted TV Stand, follow these simple care instructions:

- Wipe surfaces with a dry cloth to remove dust and debris.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Protect the surface from direct sunlight and extreme temperature changes to prevent warping or fading.
- Promptly clean up any spills to prevent staining.

TROUBLESHOOTING

If you encounter any issues with your TV stand, please refer to the following common solutions:

- **Missing Parts:** If any parts are missing upon unboxing, please contact customer support with your purchase details.
- **Stability Issues:** Ensure all screws and fasteners are tightened securely. Use the adjustable middle support legs to level the stand on uneven floors.
- **Difficulty with Assembly:** Re-check the assembly video and step-by-step manual. Ensure all parts are oriented correctly. Do not force components together.
- **Sliding Doors Sticking:** Check for any obstructions in the sliding tracks. Ensure the tracks are clean and free of debris.

SPECIFICATIONS

Feature	Detail
Brand	Alohappy
Color	Oak
Material	Engineered Wood, Metal, Solid Wood Legs and Handles
Product Dimensions (D x W x H)	15.7" x 69" x 17.7"
Recommended Uses	TV, DVDs, Video Games, CDs
Number of Drawers	2
Number of Shelves	6 (Adjustable)
Door Style	Sliding Doors
Maximum Weight Capacity (Top)	150 lbs (68 kg)
Assembly Required	Yes (Detailed, step-by-step instructions included)

WARRANTY AND SUPPORT

For any questions, concerns, or to report missing/damaged parts, please contact Alohappy customer support. Keep your proof of purchase for warranty claims, if applicable. Specific warranty details may be provided with your product packaging or on the manufacturer's website.

For further assistance, please visit the [Alohappy Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D5B6B65V>

More documents and user manuals: **<https://manuals.plus/>**