

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mellerware](#) /

› [Mellerware Mixy! 1.5L Glass Blender Instruction Manual](#)

Mellerware ES9120090L

Mellerware Mixy! 1.5L Glass Blender Instruction Manual

Model: ES9120090L

INTRODUCTION

Thank you for choosing the Mellerware Mixy! 1.5L Glass Blender. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Mellerware Mixy! blender is designed to prepare smoothies, sauces, and various blended mixtures with its powerful 1500W motor and durable components.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the blender.
- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the container while blending to prevent severe injury and damage to the blender.
- Do not operate the blender with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Supervise children closely when the appliance is in use.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always operate the blender with the lid in place.
- Exercise caution when handling the sharp blades.

PRODUCT COMPONENTS

- Motor Base (Stainless Steel)
- 1.5L Glass Jar
- 6-Blade Stainless Steel Assembly
- Lid with Anti-Splash Feature
- Control Dial (2 Speeds + Turbo/Pulse)



Figure 1: The Mellerware Mixy! Blender with its glass jar filled with fresh fruits, ready for blending. The stainless steel base features a control dial.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wash the glass jar, lid, and blade assembly in warm soapy water. Rinse thoroughly and dry. The glass jar is dishwasher safe. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
3. **Assemble Blades:** Ensure the 6-blade assembly is securely attached to the bottom of the glass jar.
4. **Place Jar on Base:** Position the glass jar onto the motor base, ensuring it is correctly seated and locked into place for safe operation. The blender features a safety lock mechanism.

5. **Power Connection:** Plug the power cord into a suitable electrical outlet (240 Volts).



Figure 2: A close-up view of the 6 high-performance stainless steel blades within the glass jar, highlighting their design for efficient blending.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Cut ingredients into appropriate sizes for blending. Do not overfill the 1.5L glass jar beyond the maximum fill line.
2. **Add Ingredients:** Place ingredients into the glass jar. For best results, add liquids first, then soft ingredients, followed by harder ingredients and ice.
3. **Secure Lid:** Place the lid firmly onto the glass jar. Ensure the anti-splash lid is properly seated.
4. **Select Speed:** Turn the control dial to select one of the two available speeds (1 or 2). The dial features an LED light indicator.
5. **Use Turbo/Pulse Function:** For short bursts of maximum power, such as crushing ice or achieving a finer blend, turn the dial to the "P" (Pulse/Turbo) setting. Release the dial to stop.
6. **Blending:** Allow the blender to operate until desired consistency is achieved. Avoid continuous operation for more than 60 seconds to prevent overheating.
7. **Finish:** Once blending is complete, turn the control dial to the "0" (Off) position and unplug the

appliance.

8. **Pour:** Carefully remove the lid and pour your blended mixture.



Figure 3: The blender in action, demonstrating its capability to create smooth beverages and effectively crush ice using its powerful motor and blade system.



Figure 4: The 1.5L glass jar filled with ice cubes, illustrating the blender's capacity and readiness for ice crushing tasks.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Mellerware

Mixy! Blender.

1. **Unplug:** Always ensure the blender is unplugged from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the glass jar from the motor base. Disassemble the blade assembly from the jar.
3. **Clean Jar and Lid:** Wash the glass jar and lid with warm, soapy water. They are also dishwasher safe. The glass jar is heat resistant up to 80°C.
4. **Clean Blades:** Exercise extreme caution when cleaning the sharp stainless steel blades. Use a brush to remove food residue.
5. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not use abrasive cleaners or immerse the base in water.
6. **Dry:** Ensure all parts are completely dry before reassembling or storing the blender.



Figure 5: The glass jar, shown being poured, is compatible with dishwashers and resistant to heat up to 80°C, simplifying cleaning and maintenance.



Termoresistente

Figure 6: Ingredients in the blender jar, illustrating its heat-resistant properties, suitable for various blending tasks.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Jar not correctly seated; Overload protection activated.	Ensure power cord is securely plugged in. Check if the glass jar is properly locked onto the motor base. Unplug, remove some ingredients, wait 15 minutes for motor to cool, then try again.
Ingredients are not blending smoothly.	Too little liquid; Too many ingredients; Ingredients too large.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use the Pulse function for short bursts.

Problem	Possible Cause	Solution
Blender leaks from the bottom of the jar.	Blade assembly not tightened; Seal ring missing or damaged.	Ensure the blade assembly is securely tightened to the jar. Check if the seal ring is correctly in place and undamaged. Replace if necessary.
Burning smell from motor.	Overloading; Prolonged continuous operation.	Immediately turn off and unplug the blender. Reduce ingredients. Allow the motor to cool down completely before resuming use. Avoid continuous operation for more than 60 seconds.

SPECIFICATIONS

Feature	Detail
Brand	Mellerware
Model Number	ES9120090L
Color	Black
Capacity	1.5 Liters
Power	1500 Watts
Voltage	240 Volts
Material	Stainless Steel (Base), Glass (Jar)
Number of Speeds	2 + Turbo/Pulse
Special Features	Removable blade, Ergonomic handle, Turbo boost, Safety lock, Multiple speed
Components Included	1.5L Glass Carafe
Product Dimensions (D x W x H)	24 x 34 x 17.5 centimeters

WARRANTY AND SUPPORT

This product is covered by a standard return policy, allowing for refund or replacement within 30 days of purchase. For specific warranty details, please refer to the documentation provided with your purchase or contact the seller directly.

For technical support, spare parts, or service inquiries, please contact Mellerware customer service or the authorized retailer where the product was purchased. Mellerware aims to provide quality products and support to enhance your home life.

Seller: [Taurus Group](#)

