

Xqisit B0D5BHV7P9

XQISIT Wireless USB-C Power Bank User Manual

Model: B0D5BHV7P9

INTRODUCTION

Thank you for choosing the XQISIT Wireless USB-C Power Bank. This portable power bank is designed to provide convenient and efficient charging for your mobile devices, featuring both USB-C wired charging and MagSafe-compatible wireless charging. With a 5000 mAh capacity, it ensures your devices stay powered throughout the day. Please read this manual carefully before using the product to ensure safe and optimal performance.

SAFETY INSTRUCTIONS

- Do not expose the power bank to extreme temperatures, direct sunlight, or fire.
- Do not immerse the power bank in water or other liquids.
- Avoid dropping, hitting, or disassembling the device.
- Keep out of reach of children.
- Use only certified charging cables and adapters.
- If the power bank swells, emits an odor, or becomes excessively hot, discontinue use immediately.
- Dispose of the power bank responsibly according to local regulations.

PACKAGE CONTENTS

- XQISIT Wireless USB-C Power Bank (5000 mAh)
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW



Figure 1: XQISIT Wireless USB-C Power Bank in use, magnetically attached to a smartphone.

The XQISIT Wireless USB-C Power Bank features a sleek, compact design. It includes a USB-C port for input and output,

a power button, and LED indicator lights to show the battery level. The magnetic surface on one side allows for secure attachment to MagSafe-compatible devices for wireless charging.

SETUP

Initial Charging of the Power Bank

1. Connect the provided USB-C cable to the USB-C port on the power bank.
2. Connect the other end of the USB-C cable to a compatible USB wall adapter (not included).
3. The LED indicator lights will illuminate to show the charging status. A full charge is indicated when all LEDs are solid.
4. For optimal performance, fully charge the power bank before first use.

OPERATING

Wired Charging (USB-C)

1. Connect one end of your device's charging cable to your device.
2. Connect the other end of the charging cable to the USB-C port on the power bank.
3. Press the power button on the power bank to initiate charging if it does not start automatically.

Wireless Charging (MagSafe Compatible)

1. Ensure your device is compatible with MagSafe or Qi wireless charging. For MagSafe, ensure your device has a MagSafe ring or compatible case.
2. Align your device's wireless charging area with the magnetic surface of the power bank. The magnets will help snap it into place for MagSafe-compatible devices.
3. Press the power button on the power bank to activate wireless charging if it does not start automatically.
4. The charging indicator on your device will confirm that charging has begun.

Checking Battery Level

Press the power button once. The LED indicator lights will illuminate to show the remaining battery capacity:

- 4 LEDs: 75-100%
- 3 LEDs: 50-75%
- 2 LEDs: 25-50%
- 1 LED: 0-25% (Recharge soon)

MAINTENANCE

- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- If not used for extended periods, charge the power bank at least once every three months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging.	Cable not connected properly; faulty cable/adaptor; power bank fully charged.	Ensure cable is securely connected. Try a different cable or wall adapter. Check LED indicators.
Device not charging from power bank.	Power bank battery low; power bank not turned on; device not compatible (wireless); improper alignment (wireless); faulty cable.	Recharge power bank. Press power button. Ensure device supports wireless charging. Realign device on charging pad. Try a different cable.
Slow charging.	Using a low-power adapter/cable; device drawing high power; environmental factors.	Use a higher-wattage USB-C PD adapter. Ensure cable supports fast charging. Avoid charging in very hot environments.

SPECIFICATIONS

- **Model:** B0D5BHV7P9
- **Battery Capacity:** 5000 mAh
- **Input (USB-C):** 5V/2A, 9V/2A (Typical)
- **Output (USB-C):** 5V/2.4A, 9V/2.22A, 12V/1.67A (Typical, PD 20W Max)
- **Wireless Output:** 5W/7.5W/10W/15W (Max 15W, 7.5W for iPhone)
- **Dimensions:** Refer to product packaging
- **Weight:** Refer to product packaging

Note: Specifications are typical values and may vary slightly.

WARRANTY AND SUPPORT

Warranty Information

This XQISIT product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your package or visit the official XQISIT website for detailed warranty terms and conditions. The warranty typically covers defects in materials and workmanship under normal use.

Customer Support

For technical support, troubleshooting assistance, or warranty claims, please contact XQISIT customer service. Contact information can usually be found on the product packaging, the official XQISIT website, or through your retailer.

Website: www.xqisit.com (Example link, actual link may vary)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question