

Moulinex DD672B10

Moulinex Quickchef+ Immersion Blender DD672B Instruction Manual

Model: DD672B10 | Brand: Moulinex

1. INTRODUCTION

The Moulinex Quickchef+ Immersion Blender is designed for optimal blending power and efficiency. Equipped with advanced Powelix blade technology and a powerful 1000W motor, it delivers incredibly uniform results up to 30% faster than traditional 2-blade technology. This versatile appliance features a silent mode, 20 variable speeds, and a turbo function, making it ideal for a wide range of culinary tasks.

The package includes the QuickChef+ immersion blender, an 800 ml measuring cup, and a 500 ml chopper attachment.

2. SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions before using this appliance.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
- Blades are sharp. Handle with care when cleaning.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- Do not blend hot liquids without allowing them to cool slightly to prevent splashing and burns.
- Ensure the appliance is properly assembled before use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your Moulinex Quickchef+ Immersion Blender:

- **Motor Unit:** The main body containing the motor and control buttons.
- **Immersion Blender Foot:** Stainless steel shaft with Powelix blades for blending.
- **Whisk Attachment:** For whipping cream, beating eggs, etc.
- **Chopper Attachment (500 ml):** For chopping herbs, nuts, meat, and other ingredients.
- **Measuring Cup (800 ml):** For blending and measuring ingredients.



Figure 1: Moulinex Quickchef+ Immersion Blender with its various attachments including the motor unit, immersion foot, whisk, chopper, and measuring cup.



Figure 2: Detail of the Powelix blade technology on the immersion blender foot, designed for efficient and fast blending.



Figure 3: The overall dimensions of the Moulinex Quickchef+ Immersion Blender, measuring 41.5 cm in height and 7 cm in width.

4. SETUP AND ASSEMBLY

The Moulinex Quickchef+ is designed for easy assembly and disassembly. Follow these steps to prepare your blender for use:

- 1. Attaching the Immersion Blender Foot:** Align the motor unit with the immersion blender foot and twist until it clicks securely into place.
- 2. Attaching the Whisk:** Insert the whisk into the whisk adapter, then attach the adapter to the motor unit by twisting until it locks.
- 3. Attaching the Chopper:** Place the blade into the chopper bowl, add ingredients, then secure the chopper lid. Attach the motor unit to the chopper lid by twisting until it locks.

Video 1: Demonstration of assembling the Moulinex Quickchef+ Immersion Blender with its various attachments, including the chopper and whisk.

5. OPERATING INSTRUCTIONS

Your Moulinex Quickchef+ offers precise control for various blending needs:

- Variable Speed Control:** The blender features 20 variable speeds. Adjust the speed dial on the top of the motor unit to select your desired blending intensity. You can change speeds during operation.
- Turbo Mode:** For maximum power and quick results, press and hold the Turbo button. This provides an instant boost for tougher ingredients.
- Silent Mode:** Activate the silent mode for a quieter blending experience, ideal for early mornings or late nights. This setting reduces noise levels compared to the Turbo speed.

MANOPOLA PER REGOLARE FACILMENTE LA VELOCITÀ



Figure 4: The easy-to-use speed dial allows for precise control over 20 variable speeds, with a dedicated Turbo setting for maximum power.

MODALITÀ SILENZIOSA



Figure 5: The Silent Mode button provides a quieter operation, enhancing comfort during use.

Video 2: Product demonstration video showing the immersion blender in action, blending ingredients in the measuring cup.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your appliance:

- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water.
- **Removable Parts:** The immersion blender foot, whisk, chopper bowl, and measuring cup are dishwasher-safe. Alternatively, they can be washed by hand with warm, soapy water.
- **Blades:** Exercise extreme caution when cleaning the blades due to their sharpness.

Video 3: This video demonstrates the easy assembly and disassembly of the blender's parts, highlighting how simple it is to clean the removable components.

7. TROUBLESHOOTING

If you encounter any issues with your Moulinex Quickchef+, refer to the following common problems and

solutions:

- **Appliance does not turn on:** Ensure the appliance is correctly plugged into a working power outlet. Check if all attachments are securely locked into place.
- **Motor stops during operation:** The appliance may have overheated. Unplug it and let it cool down for at least 30 minutes before resuming use. Reduce the load or processing time.
- **Poor blending results:** Ensure you are using the correct speed setting for your ingredients. Add more liquid if the mixture is too thick. Do not overfill the container.
- **Excessive vibration or noise:** Check that all parts are correctly assembled and securely attached. Reduce the amount of ingredients being processed.

If the problem persists, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Moulinex
Model Number	DD672B10
Color	Grey
Dimensions (L x W x H)	40 x 7 x 7 cm
Weight	810 grams
Capacity (Chopper)	500 Milliliters
Capacity (Measuring Cup)	800 Milliliters
Voltage	230V
Automatic Shut-off	Yes
Number of Speeds	20
Special Features	Silent Mode
Material	Polypropylene
Included Components	Chopper attachment, 800 ml measuring cup

9. WARRANTY AND SUPPORT

Your Moulinex Quickchef+ Immersion Blender comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, spare parts, or any other inquiries, please visit the official Moulinex website or contact their customer service department. Keep your proof of purchase for warranty claims.

