

PacuM HS-KSW550

PacuM HS-KSW550 Coin Counter and Sorter Instruction Manual

Efficient and Accurate Value Counting Machine

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your PacuM HS-KSW550 Coin Counter and Sorter. Please read this manual thoroughly before use and retain it for future reference. This machine is designed to accurately count, sort, and calculate the total value of various coin denominations.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the voltage specified on the machine (220V 50Hz).
- Do not operate the machine with a damaged cord or plug.
- Keep hands and loose clothing away from moving parts during operation.
- Do not attempt to open or repair the machine yourself. Refer all servicing to qualified personnel.
- Keep the machine away from water or other liquids.
- Unplug the machine from the power outlet when not in use or before cleaning.

PACKAGE CONTENTS

Verify that all items are present in the package:

- PacuM HS-KSW550 Coin Counter and Sorter x 1
- Power Cord x 1
- User Manual x 1

PRODUCT OVERVIEW

The PacuM HS-KSW550 is designed for efficient counting, sorting, and value calculation of various coin denominations. Familiarize yourself with the machine's components:



Figure 1: Front View of the Coin Counter. This image displays the main unit with its central display panel and coin collection drawers arranged around the base. The display shows "COIN SORTER" indicating its primary function.



Figure 2: Control Panel and Display. A closer look at the machine's interface, showing the digital display with "0.00" and indicators for various coin denominations. Below the display are control buttons for operation, including '+', '-', 'SET', 'PRINT', 'START/STOP', and 'CLEAR'.



Figure 3: Rear View and Information Label. This image shows the back of the coin counter, including the power input, power switch, and a label detailing error messages and basic specifications like voltage (220V 50Hz) and country of manufacture.

SETUP

1. **Unpacking:** Carefully remove the coin counter from its packaging, ensuring all protective materials are removed.
2. **Placement:** Place the machine on a stable, level, and dry surface to prevent vibrations and ensure accurate counting.
3. **Connect Power:** Connect the provided power cord to the machine's power input socket located at the rear. Then, plug the other end into a suitable electrical outlet (220V 50Hz).
4. **Coin Drawers:** Ensure all coin collection drawers are correctly inserted into their respective slots around the base of the machine. Each drawer is typically designated for a specific coin denomination.

OPERATING INSTRUCTIONS

The PacuM HS-KSW550 can sort mixed coins, count their total value, and count the quantity of each denomination.

1. **Power On:** Flip the power switch located at the rear of the machine to the 'ON' position. The display will illuminate and typically show a default currency or '0.00'.
2. **Load Coins:** Place a batch of mixed coins into the coin hopper at the top of the machine. Do not overfill the hopper, as this can lead to jams or inaccurate counts.
3. **Start Counting:** Press the 'START' button on the control panel. The machine will begin processing the coins, feeding them from the hopper and sorting them into the appropriate drawers.
4. **Sorting:** Coins will be automatically sorted into their respective denomination drawers. The machine will simultaneously count the quantity and calculate the total value.
5. **Display Information:** During and after counting, the display will show the total value counted and the quantity of each denomination.
6. **Stop Counting:** Press the 'STOP' button to pause or end the counting process at any time.
7. **Clear Data:** Use the 'CLEAR' button to reset the count for a new batch of coins or to clear previous results.
8. **Retrieve Coins:** Once counting is complete, carefully remove the coin drawers to collect the sorted coins. Ensure the machine is not actively counting before removing drawers.

Note: The PacuM HS-KSW550 is designed for specific currencies. If you require the machine to handle a currency other than the default (e.g., EUR as indicated in some product descriptions), please ensure the machine is configured for your specific currency before operation. This may involve internal settings or a specific model variant purchased for that currency.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your coin counter.

- **Cleaning:** Regularly clean the coin hopper and sorting mechanisms with a soft, dry cloth. Do not use abrasive cleaners, solvents, or liquids directly on the machine.
- **Dust Removal:** Use a small brush or compressed air to remove dust and debris from internal components, especially sensors and coin pathways. Accumulation of dust can affect accuracy.
- **Drawer Cleaning:** Keep coin collection drawers clean and free of obstructions. Empty them regularly to prevent overflow.
- **Power Off:** Always power off and unplug the machine from the electrical outlet before performing any cleaning or maintenance.

TROUBLESHOOTING

Refer to the following table for common issues and their solutions. For problems not listed or if issues persist, contact customer support.

Error Message	Possible Cause	Solution
E1-E8	Coin jam or foreign object obstructing the coin path.	Carefully clear out any jammed coins or foreign objects. Ensure only appropriate coins are loaded.
E9	Counting sensor failure or obstruction.	Clean the sensor area. If the error persists, the unit may require professional repair.
EA	Motor malfunction.	Power cycle the machine. If the motor still does not operate, professional repair is needed.
EC	Main board damaged or internal wiring loose.	This indicates a serious internal issue. The machine should be returned for professional repair.

Note: The error message table is derived from the product information label (Figure 3).

SPECIFICATIONS

Due to discrepancies in provided product data, specific detailed dimensions and weight are not available in this manual. The PacuM HS-KSW550 is a robust electronic coin counter and sorter designed for efficient currency handling.

- **Model:** HS-KSW550
- **Voltage:** 220V 50Hz (as indicated on the unit)
- **Function:** Counts and sorts mixed coins, sums total value, sums quantity of each denomination.
- **Type:** Heavy Coin Counter

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D5CH7BHB>

More documents and user manuals: <https://manuals.plus/>