

KLIM KLIM Boombox

KLIM CD/Cassette Boombox with Bluetooth and AM/FM Radio Instruction Manual

Model: KLIM Boombox

1. INTRODUCTION

Thank you for choosing the KLIM CD/Cassette Boombox. This versatile audio system combines modern and classic audio playback options, including CD, cassette, Bluetooth, AM/FM radio, USB, and AUX input. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- KLIM CD/Cassette Boombox Unit
- AC Power Cable
- Remote Control (with 2 AAA batteries)
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your KLIM Boombox.



Figure 3.1: Front view of the KLIM CD/Cassette Boombox with remote control.

The unit features a top-loading CD compartment, a front-loading cassette deck, an LCD display, integrated speakers, and various control buttons. An extendable antenna is located at the rear for radio reception. Input ports for USB and AUX are also available.



Figure 3.2: Detailed view of the LCD display and speaker area.

4. SETUP

4.1 Powering the Device

Your boombox can be powered by AC electricity or batteries for portability.

- **AC Power:** Connect the included AC power cable to the AC input jack on the unit and then to a standard wall outlet.
- **Battery Power:** For portable use, open the battery compartment on the bottom of the unit and insert 6 C-size batteries (not included). Ensure correct polarity. The remote control requires 2 AAA batteries (included).



Figure 4.1: The boombox supports both AC and battery power for flexible use.

4.2 Antenna Setup

For optimal AM/FM radio reception, extend the telescopic antenna fully. Adjust its position for the clearest signal.

5. OPERATING INSTRUCTIONS

This section details how to use the various functions of your KLIM Boombox.



Figure 5.1: The boombox offers multiple playback modes for diverse audio sources.

5.1 General Controls

- **Power Button:** Turns the unit on or off.
- **Function/Mode Button:** Cycles through available modes: CD, Bluetooth, USB, AM/FM Radio, AUX, Cassette.
- **Volume Control:** Adjusts the audio output level.

5.2 CD Playback

1. Open the CD compartment lid.
2. Place a CD (audio CD or MP3/WMA CD) onto the spindle with the label side facing up.
3. Close the CD compartment lid.
4. Press the **Function/Mode** button to select CD mode. The LCD display will show 'CD'.
5. Press the **Play/Pause** button to start playback.
6. Use the **Skip Forward** or **Skip Backward** buttons to navigate between tracks.
7. Press the **Stop** button to end playback.
8. **Program Function:** In stop mode, press the **Program** button to create a custom playback sequence for up to 20 tracks.

5.3 Cassette Playback and Recording

1. Open the cassette deck door.
2. Insert a cassette tape with the open edge facing upwards.
3. Close the cassette deck door.
4. Press the **Function/Mode** button to select Cassette mode.
5. Press the **Play** button to start playback.
6. Use **Fast Forward (FFWD)** or **Rewind (REW)** buttons to quickly move through the tape.
7. Press the **Stop/Eject** button to stop playback and eject the tape.

Recording to Cassette

The boombox supports recording from the built-in microphone.



Figure 5.2: The boombox allows for high-quality sound recording to cassette using its built-in microphone.

1. Insert a blank cassette tape.
2. Press the **Record (REC)** button. The Play button will also engage automatically.
3. Speak into the built-in microphone or play audio from another source (e.g., radio, CD) if the unit is in that mode.
4. Press the **Stop** button to end recording.

5.4 AM/FM Radio

1. Extend the telescopic antenna.
2. Press the **Function/Mode** button to select AM or FM Radio mode. The LCD display will show the frequency.
3. Use the **Tuning** knob or buttons to scan for stations.
4. Adjust the antenna position for optimal reception.

5.5 Bluetooth Connectivity

1. Press the **Function/Mode** button to select Bluetooth mode. The LCD display will show 'BT' and flash, indicating it's ready for pairing.
2. On your external device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'KLIM Boombox' from the list of devices.
4. Once paired, the 'BT' indicator on the boombox will stop flashing. You can now stream audio wirelessly.

5.6 USB Playback

1. Insert a USB flash drive into the USB port.
2. Press the **Function/Mode** button to select USB mode. The LCD display will show 'USB'.
3. The unit will automatically begin playing compatible audio files (MP3/WMA).
4. Use the **Play/Pause**, **Skip Forward**, and **Skip Backward** buttons to control playback.

5.7 AUX Input

1. Connect an external audio device (e.g., MP3 player, phone) to the AUX input jack using a 3.5mm audio cable (not included).
2. Press the **Function/Mode** button to select AUX mode. The LCD display will show 'AUX'.
3. Control playback and volume directly from your connected external device.

5.8 Remote Control

The included remote control allows convenient operation from a distance of up to 20 feet. Ensure the remote's batteries are correctly installed (2 AAA batteries).

- **Power:** Turn the unit on/off.
- **Function:** Change playback modes.
- **Volume +/-:** Adjust volume.
- **Mute:** Mute/unmute audio.
- **Play/Pause, Stop, Skip:** Control CD/USB playback.
- **EQ:** Adjust equalizer settings (if available).
- **Number Buttons:** Direct track selection for CD/USB.

5.9 Headphone Jack

Connect standard 3.5mm headphones to the headphone jack for private listening. When headphones are connected, the main speakers will be muted.

6. MAINTENANCE

Proper care ensures the longevity of your boombox.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD/Cassette Care:** Handle CDs by their edges. Keep cassette tapes away from strong magnetic fields. Clean the CD lens and cassette head periodically with appropriate cleaning kits.
- **Battery Replacement:** If using battery power, replace all batteries when the sound becomes distorted or the unit stops functioning. Remove batteries if the unit will not be used for an extended period.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	AC cable disconnected; Batteries depleted or incorrectly inserted.	Check AC cable connection; Replace batteries, ensuring correct polarity.
No sound	Volume too low; Mute activated; Incorrect mode selected; Headphones connected.	Increase volume; Deactivate mute; Select correct mode; Disconnect headphones.
CD/Cassette not playing	Disc/tape inserted incorrectly; Disc/tape damaged or dirty; CD compartment/cassette door not closed.	Reinsert disc/tape correctly; Clean or replace disc/tape; Ensure compartment/door is fully closed.
Poor radio reception	Antenna not extended or positioned incorrectly; Weak signal area.	Extend and adjust antenna; Try moving the unit to a different location.
Bluetooth pairing issues	Boombox not in pairing mode; Device too far; Previous connection interfering.	Ensure boombox is in BT mode and flashing; Move device closer; Turn off Bluetooth on other nearby devices.
Remote control not working	Batteries depleted or incorrectly inserted; Obstruction between remote and unit.	Replace remote batteries; Remove any obstructions; Ensure direct line of sight.

8. SPECIFICATIONS

- **Product Dimensions:** 8.5 x 8.39 x 4.92 inches
- **Item Weight:** 3.3 pounds (1.5 Kilograms)
- **Model Number:** KLIM Boombox
- **Batteries (Remote):** 2 AAA batteries (included)
- **Batteries (Unit):** 6 C-size batteries (not included)
- **Bluetooth Version:** 5.1


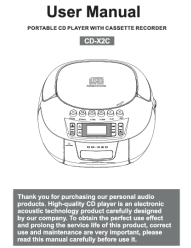 

- **Speaker Output:** 3W dual speakers
- **Supported Media:** Audio CD, MP3/WMA CD, Cassette Tape, USB (MP3/WMA), AM/FM Radio, AUX Input




9. WARRANTY AND SUPPORT

KLIM is committed to your satisfaction. Your KLIM CD/Cassette Boombox comes with a**5-year coverage**. For any questions, technical assistance, or warranty claims, please contact our **24/7 customer support**. For more information and support resources, please visit the official[KLIM Store](#).

© 2025 KLIM Technologies. All rights reserved.

Related Documents - KLIM Boombox

 <p>KLIM BOOMBOX</p> <p>USER MANUAL - MANUEL D'UTILISATION BENÜTZERHANDBUCH - MANUALE - MANUAL</p>	<p>KLIM Boombox User Manual: Features, Setup, and Operation</p> <p>Comprehensive user manual for the KLIM Boombox, covering safety warnings, controls, specifications, setup, CD playback, Bluetooth connectivity, FM radio, AUX input, USB playback, and troubleshooting.</p>
 <p>User Manual</p> <p>PORTABLE CD PLAYER WITH CASSETTE RECORDER</p> <p>CD-X2C</p> <p>Thank you for purchasing our personal audio products. High-quality CD player is an innovative, accurate technology product carefully designed by our company. To obtain the perfect use effect, and prolong the service life of this product, correct use and maintenance are very important. Please read this manual carefully before use it.</p>	<p>User Manual for CD-X2C Portable CD Player with Cassette Recorder</p> <p>This user manual provides comprehensive instructions for operating the CD-X2C portable CD player with cassette recorder, including function descriptions, operation guides for CD, AUX, and tape modes, radio operation, sleep mode, specifications, safety instructions, and warranty information.</p>
 <p>KLIM BOOMBOX B4</p> <p>USER MANUAL - MANUEL D'UTILISATION BENÜTZERHANDBUCH - MANUALE - MANUAL</p>	<p>KLIM Boombox B4 User Manual</p> <p>User manual for the KLIM Boombox B4, covering safety warnings, controls, features, first use, CD and Bluetooth modes, radio and AUX input, headphones and USB modes, and remote control operation.</p>

	<p>Philco PBC2010BT Bluetooth CD Boombox Owner's Manual</p> <p>Comprehensive owner's manual for the Philco PBC2010BT Bluetooth CD Boombox with Cassette & AM/FM Radio. Includes safety instructions, features, operation guides for CD, cassette, Bluetooth, and radio, troubleshooting, specifications, and warranty information.</p>
	<p>Vivitar V60098BT Wireless CD Retro Boombox User Manual</p> <p>User manual for the Vivitar V60098BT Wireless CD Retro Boombox, detailing its features, operation, safety precautions, troubleshooting, and warranty information.</p>
	<p>MEDION LIFE P66538 (MD 44538) Quick Start Guide</p> <p>This document provides a quick start guide for the MEDION LIFE P66538 (MD 44538) retro boombox, covering setup, operation, and safety information.</p>

Documents - KLIM – KLIM Boombox



KLIM BOOMBOX

USER MANUAL - MANUEL D'UTILISATION
BENUTZERHANDBUCH - MANUALE - MANUAL

[KLIM Boombox User Manual: Features, Setup, and Operation](#)

Comprehensive user manual for the KLIM Boombox, covering safety warnings, controls, specifications, setup, CD playback, Bluetooth connectivity, FM radio, AUX input, USB playback, and troubleshooting.

lang:en score:54 filesize: 8.11 M page_count: 34 document date: 2021-02-02



KLIM BOOMBOX B4

USER MANUAL - MANUEL D'UTILISATION
BENUTZERHANDBUCH - MANUALE - MANUAL

[KLIM Boombox B4 User Manual](#)

User manual for the KLIM Boombox B4, covering safety warnings, controls, features, first use, CD and Bluetooth modes, radio and AUX input, headphones and USB modes, and remote control operation.

lang:en score:42 filesize: 5.49 M page_count: 40 document date: 2021-08-10



KLIM BOOMBOX B3

USER MANUAL - MANUEL D'UTILISATION
BENUTZERHANDBUCH - MANUALE - MANUAL

[\[pdf\] User Manual Instructions Specifications Warranty](#)

MAN Boombox B3 Manual MULTI 20210226 v18 cdr Luis Work klim boombox b3 USING THE CD PLAYER Step 1 Open the compartment 2 Place inside and close 3 Press MODE select mode 4 PLAY PAUSE There are no user serviceable parts unit dismantling it will void your warranty If you face any issues with device please MULT klimtechs 2021 08

KLIM BOOMBOX B3 USER MANUAL - MANUEL D UTILISATION
BENUTZERHANDBUCH - MANUALE - MANUAL INDEX ENG ... are at your disposal every day and our specialists always reply within 24 hours. Remember that your KLIM Boombox is covered by a dependable 5-year warranty. **2 CONTROLS AND SPECIFICATIONS LOCATION ...**

lang:en score:39 filesize: 6.89 M page_count: 34 document date: 2021-02-26



KLIM Boombox Radio z odtwarzaczem CD. Radio FM, odtwarzacz CD, Bluetooth, MP3, USB, AUX + Akumulatory w zestawie + Tryby przewodowy i bezprzewodowy + Kompaktowy i wytrzymały + Nowa wersja + Czerwony
Indeks: 636659 Producent: KLIM kod producenta: M83

Cena: 306.27 zł

Opis

KLIM Boombox Radio z odtwarzaczem CD. Radio FM, odtwarzacz CD, Bluetooth, MP3, USB, AUX + Akumulatory w zestawie + Tryby przewodowy i bezprzewodowy + Kompaktowy i wytrzymały + Nowa wersja + Czerwony
Producent: KLIM

Wytrzymały boombox KLIM wyróżnia się nie tylko kompaktowym designem, ale także funkcjonalnością. Nowa wersja, oczekiwania nawet najbardziej wymagających użytkowników. Z odtwarzaczem CD, Bluetooth, MP3, USB i AUX, ten mini-słuchawki umożliwia łatwe podłączenie i odtwarzanie muzyki, zapewniając świetną jakość dźwięku w każdym miejscu.

Dzięki wytrzymałemu szkieletowi i możliwości korzystania z trybów przewodowego i bezprzewodowego, KLIM Boombox Radio z odtwarzaczem CD to nieodłączny gadżet dla miłośników muzyki i podróży. Sprawa odtwarzania muzyki z dowolnego miejsca w dowolnym miejscu dzięki Bluetooth, głośnikowi i słuchawkom. Czerwony kolor dodaje mu nowoczesny wygląd i styl.

Parametry


Stan	Nowy
------	------

[\[pdf\]](#)

KLIM Boombox Radio z odtwarzaczem CD FM odtwarzacz Bluetooth MP3 USB AUX Akumulatory w zestawie Tryby przewodowy i bezprzewodowy Kompaktowy wytrzymały Nowa wersja Czerwony Sklep internetowy stylem pl klim boombox radio cd fm bluetooth mp3 usb aux akumulatory tryby bezprzewodowy upload files product kompaktowy wytrzymały nowa czerwony 636659 |||


KLIM Boombox Radio z odtwarzaczem CD. Radio FM, odtwarzacz CD, Bluetooth, MP3, USB, AUX Akumulatory w zestawie Tryby przewodowy i bezprzewodowy Kompaktowy i wytrzymały Nowa wersja Czerwony Indeks: 636659 Producent: KLIM Kod producenta: k83 Cena: 306.27 zł Opis KLIM Boombox Radio z odtwarz...

 lang:pl score:39 filesize: 286.8 K page_count: 1 document date: 2025-01-30

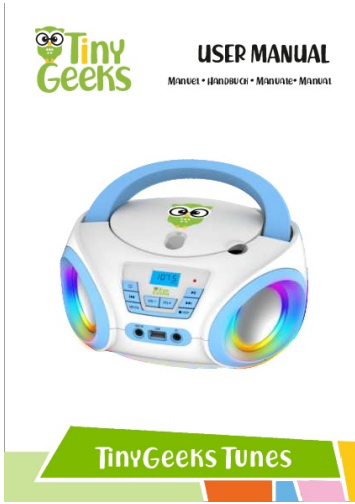

[pdf] User Manual Instructions Specifications

MAN TinyGeeks Tunes Manual MULTI 20220302 v22 cdr Luis Work TINYGEEKS TUNES MANUAL User Manuals tinygeeks manual v 1657085208 cdn shopify s files 1 0609 2868 8377 ||| Manuel Handbuch Manuale Manual TinyGeeks Tunes INDEX ENGLISH Safety warnings 2 Controls and ... fr Hilfe. Unsere Spezialisten antworten immer innerhalb von 24 Stunden. Und vergiss nicht, dass die KLIM Boombox von einer zuverlässigen 5-Jahres-Garantie abgedeckt ist. 19 AVVERTENZE DI SICUREZZA ... lang:en score:27 filesize: 9.47 M page_count: 34 document date: 2022-03-02

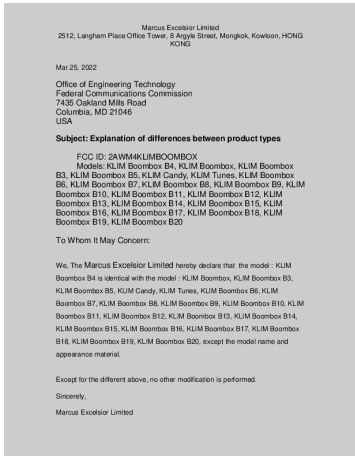 


[pdf]

Date gretchen Difference Description Marcus Excelsior Limited KLIMBOOMBOX 2AWM4KLIMBOOMBOX klimboombox Marcus Excelsior Limited 2512, Langham Place Office Tower, 8 Argyle Street, Mongkok, Kowloon, HONG K ... 1046 USA Subject: Explanation of differences between product types FCC ID: 2AWM4KLIMBOOMBOX Models: KLIM Boombox B4, KLIM Boombox, KLIM Boombox B3, KLIM Boombox B5, KLIM Candy, KLIM Tunes, KLIM Boombo... lang:en score:24 filesize: 12.35 K page_count: 2 document date: 2022-03-29



[pdf] Agent Authorization

 PLEASE PRINT ON COMPANY LETTERHEAD MiCOM Labs Inc QMS Agent Authorization Marcus Excelsior Limited KLIMBOOMBOX 2AWM4KLIMBOOMBOX klimboombox Marcus Excelsior Limited 2512, Langham Place Office Tower, 8 Argyle Street, Mongkok, Kowloon, HONG KONG Agent Authorization Company: Marcus Excelsior Limited Address: 2512, Langham Place Office Tower, 8 Argyle Street, Mongkok, Kowloon, HONG KONG Product Name: KLIM Boombox Model Number s : KLIM Boomb... lang:en score:24 filesize: 12.88 K page_count: 1 document date: 2022-03-29

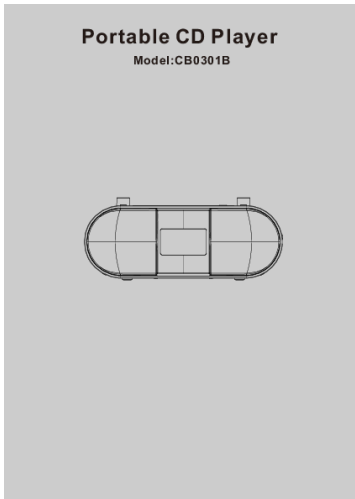


Portable CD Player CB0301B User Manual

User manual for the Portable CD Player Model CB0301B, detailing its features, controls, operation for CD, Bluetooth, Radio, and Aux input, along with safety warnings and FCC compliance. lang:en score:22 filesize: 2.91 M page_count: 9 document date: 2022-03-30

Portable CD Player

 Model:CB0301B



[\[pdf\]](#) User Manual

LP1022 80 REV1 cdr Administrator User Manual CD Player Portable FM Radio with Dual Stereo Sound System Rechargeable Bluetooth Boombox Remote Control Playback R RW MP3 Support USB AUX in Headphone Output Electronics B1Fb6R Pm0L m media amazon images I |||

Portable CD Player Model:CB0301B SAFETY WARNINGS Do not block the air vent to allow enough ventil ... ed preset. AUXILIARY PORT IN Step 1:Connect a 3.5mm cable not included to the aux port on the **klim boombox**. Step2:Connect the other end to the out put auxiliary port on your device such as an M...

lang:en **score:22** filesize: 3.73 M page_count: 8 document date: 2022-01-07