

[Manuals.plus](#) /

› [HULALA HOME](#) /

› HULALA HOME Dining Chair with Casters (Model DCMJ1011) Instruction Manual

HULALA HOME DCMJ1011

HULALA HOME Dining Chair with Casters (Model DCMJ1011) Instruction Manual

INTRODUCTION

Welcome to your new HULALA HOME Dining Chair with Casters. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your chair. Please read these instructions thoroughly before beginning assembly or using the product to ensure a long-lasting and satisfactory experience.

IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before assembly and initial use.
- Keep all packaging materials, especially plastic bags, away from children to prevent suffocation hazards.
- Ensure all bolts and screws are securely tightened before using the chair. Periodically re-tighten all fasteners to maintain stability.
- Do not stand on the chair. It is designed for seating purposes only.
- Do not exceed the maximum weight capacity of 250 pounds (113 kg).
- Use the chair on level and stable surfaces only to prevent tipping.
- Avoid exposing the chair to direct sunlight, extreme temperatures, or high humidity, as this may cause damage to the materials.

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact HULALA HOME customer support immediately.

- Chair Frame (1)
- Seat Cushion (1)
- Backrest (1)
- Legs with Casters (4)
- Hardware Pack (includes bolts, washers, and Allen wrench)
- Removable Slipcover (1)

SETUP AND ASSEMBLY

Assembly is required for this dining chair. Please follow these steps carefully to ensure correct and safe construction.

Step 1: Prepare Components

Unpack all components from the box and lay them out on a clean, soft, non-abrasive surface (such as a carpet or blanket) to prevent scratching or damage during assembly.

Step 2: Attach Legs to Chair Frame

Align each leg with the designated mounting points on the underside of the chair frame. Insert the provided bolts with washers through the holes and hand-tighten them. Do not fully tighten any bolts until all four legs are loosely attached.



This image illustrates the solid wood legs equipped with caster wheels, designed for smooth movement, and the unique roll armrests. Ensure the legs are securely attached to the chair frame during assembly.

Step 3: Secure All Connections

Once all legs are loosely attached, use the provided Allen wrench to fully tighten all bolts. Ensure each connection is firm and secure. Verify that the chair is stable and does not wobble.

Step 4: Apply Slipcover

Carefully place the removable slipcover over the assembled chair frame. Adjust the slipcover to ensure it fits snugly and aligns properly with the chair's contours, covering all upholstered sections.

OPERATING INSTRUCTIONS

Your HULALA HOME Dining Chair is designed for comfort and convenience in various indoor settings.

Using the Casters

The hooded caster wheels allow for easy movement of the chair across smooth, level floor surfaces. To move the chair, gently push or pull it to your desired location. Avoid sudden, forceful movements or dragging the chair over uneven surfaces to prevent damage to the casters or flooring.

Comfort and Support

The chair features a roll arm design and a gracefully curved backrest, providing comfortable support for extended periods. It is suitable for dining, reading, or general seating in various rooms.

Gracefully Curved Backrest



Unique Roll Armrests

Solid Wood Legs



This image demonstrates the versatility of the dining chair, showcasing its use in different indoor environments such as a dining room, living room, and kitchen.

MAINTENANCE

Proper care and maintenance will extend the life and appearance of your dining chair.

Cleaning the Slipcover

The chair is equipped with a convenient removable slipcover for easy cleaning. To clean, carefully remove the slipcover from the chair. Refer to the care label attached to the slipcover for specific washing instructions. Generally, machine washing with cold water on a gentle cycle and tumble drying on low heat is recommended. Avoid using bleach or harsh detergents.

Used in Various Settings

Added with attractive classic design, this chair is suitable for all style living spaces.



Living Room



Dining Room



Kitchen



This image emphasizes the removable slipcover feature, illustrating how it can be easily removed for cleaning, with a washing machine in the background.

General Care

Regularly dust the chair frame and legs with a soft, dry cloth. For spills on the frame or legs, wipe immediately with a damp cloth and dry thoroughly. Periodically check all bolts and screws and tighten them if they have loosened over time to ensure continued stability and safety.

TROUBLESHOOTING

If you encounter any issues with your dining chair, refer to the following common problems and solutions:

Chair is Unstable or Wobbly

- **Solution:** Ensure all assembly bolts are fully tightened. Check that the chair is placed on a level and even surface. If the issue persists, disassemble the chair and carefully reassemble it, ensuring all parts are correctly aligned and tightened.

Casters Not Rolling Smoothly

- **Solution:** Inspect the caster wheels for any debris such as hair, lint, or small objects that may be caught. Clean the wheels as needed. Ensure the floor surface is clean and free of obstructions.

Slipcover Does Not Fit Correctly

- **Solution:** Remove the slipcover and reapply it, ensuring it is properly aligned with the chair's shape and contours. Smooth out any wrinkles or bunched fabric for a neat fit.

SPECIFICATIONS

Attribute	Value
Brand	HULALA HOME
Model Number	DCMJ1011
Color	Beige
Material	Engineered Wood (Frame), Upholstered Fabric (Cover)
Product Dimensions (D x W x H)	27"D x 26"W x 40"H
Item Weight	22 Pounds
Maximum Weight Recommendation	250 Pounds
Assembly Required	Yes
Included Components	Caster, Removable Slipcover
Back Style	Curved Back
Leg Style	Straight Leg with Casters



HULALA
HOME

Traditional Dining Chair

Offer Support for Back, Hips, and Thighs

This image provides a detailed diagram of the chair's dimensions, including height (40"), width (26"), depth (27"), seat height (19.5"), and backrest height (22"), along with the maximum weight capacity of 250 lbs.

WARRANTY AND SUPPORT

For any questions, concerns, missing parts, or support needs regarding your HULALA HOME Dining Chair, please contact HULALA HOME customer service. Specific warranty details may vary; please refer to your purchase documentation or contact the retailer for information.

You can also visit the official HULALA HOME Store for additional product information and support:

[HULALA HOME Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D5CW8WYF>

More documents and user manuals: <https://manuals.plus/>