

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Replacement Remote Control User Manual for Memorex MLT5552, MLT4352, MLT3252 HD TVs

ECONTROLLY MB2759

ECONTROLLY Replacement Remote Control User Manual

For Memorex MLT5552, MLT4352, MLT3252 HD TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY replacement remote control, designed for seamless compatibility with Memorex MLT5552, MLT4352, and MLT3252 HD TV models. This remote offers direct functionality without the need for complex programming.



Image 1.1: The ECONTROLLY replacement remote (left) compared to the original Memorex remote (right), demonstrating similar design and button layout for easy transition.

2. SETUP

2.1 Battery Installation

To begin using your remote control, install two AAA 1.5V batteries (not included) into the battery compartment. Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open.
3. Insert two AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Image 2.1: View of the remote's battery compartment, illustrating the correct orientation for AAA battery insertion.

2.2 Initial Use

This ECONTROLLY replacement remote control is pre-programmed and does not require any additional setup or coding. Once batteries are installed, it is ready for immediate use with compatible Memorex MLT5552, MLT4352, and MLT3252 HD TVs.

3. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your Memorex HD TV. Refer to the image below for button identification and their primary functions.





Image 3.1: Front view of the remote control, highlighting the arrangement of all functional buttons.

3.1 Key Functions Overview

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV audio.
- **0-9 (Number Buttons):** Selects channels directly.
- **ABC/DEF/GHI/JKL/MNO/PQR/STU/VWX/YZ-:** Alphanumeric input for certain functions (e.g., smart TV features, text input).
- **F1/3D/DASH:** Special function buttons, may vary by TV model.
- **EPG (Electronic Program Guide):** Displays the program guide.
- **INFO:** Displays current channel and program information.
- **SMART S / SMART P:** Accesses smart TV features or picture modes.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., stereo, SAP).
- **MENU:** Opens the TV's main menu.
- **EXIT:** Exits the current menu or screen.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels up or down.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **CH.LISP / FAV / WIDE / CC:** Special function buttons for channel list, favorites, screen aspect ratio,

and closed captions.

- **Media Control Buttons (PLAY, PAUSE, STOP, PREV, NEXT, REV, FWD, ROTATE):**Controls media playback functions.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's appearance and functionality, clean it regularly with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new AAA 1.5V batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure the remote is pointed directly at the TV.
- **Limited range or intermittent response:**
 - Replace batteries.
 - Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the IR signal.
- **Specific buttons not working:**
 - Some buttons may have functions specific to certain TV models or modes. Verify the TV's manual for specific button functionalities.
 - Clean the remote control, as dirt or debris might be obstructing button contacts.

6. SPECIFICATIONS

Feature	Detail
Brand	ECONTROLLY
Model Number	MB2759
Compatible Devices	Memorex MLT5552, MLT4352, MLT3252 HD TVs
Product Dimensions	7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
Item Weight	2.3 ounces (65 grams)

Power Source	2 x AAA 1.5V Batteries (not included)
Special Feature	No programming required





Image 6.1: Remote control dimensions, showing approximate width and length.

7. SUPPORT

For further assistance or inquiries regarding your ECONTROLLY replacement remote control, please refer to the seller's support channels on the platform where the product was purchased. Ensure you have your product model number (MB2759) and purchase details available when contacting support.