

[Manuals.plus](#) /

› [Jocca](#) /

› Jocca Ice Maker User Manual

Jocca 2378

Jocca Ice Maker User Manual

MODEL: 2378

1. INTRODUCTION

Thank you for purchasing the Jocca Domestic Ice Maker. This appliance is designed to provide a convenient and efficient way to produce ice cubes for your home. Please read this manual carefully before operating the ice maker to ensure proper use, optimal performance, and safety. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not immerse the power cord, plug, or any part of the appliance in water or other liquids.
- Ensure the voltage of the appliance matches your local power supply.
- Keep the appliance away from heat sources and direct sunlight.
- Always unplug the appliance when not in use, before cleaning, or before adding/removing parts.
- This appliance is for domestic use only. Do not use it outdoors.
- Supervise children to ensure they do not play with the appliance.
- Only use potable water in the ice maker.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Jocca Ice Maker.



Figure 3.1: Front view of the Jocca Ice Maker. This image shows the compact design, the transparent lid, and the control panel on top.



Figure 3.2: Close-up of the control panel. It features indicators for 'Ice Full', 'Add Water', 'Small Ice', 'Large Ice', and buttons for 'ON/OFF' and 'SELECT' ice size.



Figure 3.3: The included ice scoop, designed for easy retrieval of ice cubes from the basket.

4. SETUP

4.1 Unpacking

1. Carefully remove the ice maker from its packaging.
2. Remove all packing materials, including any tape or protective films.
3. Check the contents to ensure all parts are present: ice maker unit, ice basket, and ice scoop.

4.2 Placement

Place the ice maker on a flat, stable surface, away from direct sunlight and other heat sources (e.g., oven, stove, refrigerator). Ensure there is at least 15 cm (6 inches) of clearance around the sides and back for proper ventilation.



Figure 4.1: Side view of the ice maker, highlighting the ventilation fan. Adequate clearance around this area is crucial for efficient operation.

4.3 Initial Cleaning

Before first use, clean the interior of the ice maker:

1. Open the transparent lid and remove the ice basket.
2. Clean the interior with a soft cloth dampened with warm water and a mild detergent. Rinse thoroughly.
3. Wipe the exterior with a soft, damp cloth.
4. Allow the unit to air dry completely before use.

5. OPERATING INSTRUCTIONS

5.1 Filling the Water Reservoir

1. Ensure the drain plug at the bottom of the unit is securely closed.

2. Open the transparent lid and remove the ice basket.
3. Pour potable water into the water reservoir up to the MAX fill line. Do not overfill.
4. Replace the ice basket and close the lid.

5.2 Powering On and Selecting Ice Size

1. Plug the ice maker into a grounded electrical outlet.
2. Press the 'ON/OFF' button to turn on the appliance. The 'POWER' indicator will illuminate.
3. Press the 'SELECT' button to choose your desired ice cube size: 'SMALL' or 'LARGE'. The corresponding indicator light will illuminate.

5.3 Ice Production Cycle

The ice maker will begin its first ice-making cycle. Each cycle takes approximately 6-12 minutes, producing 9 ice cubes per cycle. The first few batches of ice may be smaller or irregular due to air in the system. Discard the first 2-3 batches of ice.



Figure 5.1: View of the ice basket inside the ice maker, showing freshly produced ice cubes.

5.4 Indicators

- **'ADD WATER' Indicator:** This light will illuminate when the water reservoir is low. The ice maker will stop production. Refill the reservoir to resume operation.
- **'ICE FULL' Indicator:** This light will illuminate when the ice basket is full. The ice maker will stop production. Remove ice from the basket to resume operation.

5.5 Using the Ice Scoop

Use the provided ice scoop to remove ice from the basket. Do not use your hands or other utensils to avoid contamination or damage to the unit.

6. MAINTENANCE AND CLEANING

6.1 Daily Cleaning

1. Unplug the ice maker.
2. Remove the ice basket and empty any remaining ice.
3. Drain any remaining water from the reservoir by opening the drain plug at the bottom of the unit.
4. Wipe the interior with a soft cloth and warm water.
5. Wipe the exterior with a soft, damp cloth.

6.2 Self-Cleaning Function

The Jocca Ice Maker is equipped with a self-cleaning system. Refer to your specific model's instructions for activating this feature. Typically, it involves filling the reservoir with water and a small amount of vinegar or a specialized cleaning solution, then initiating a cleaning cycle via the control panel.

6.3 Storage

If the ice maker will not be used for an extended period:

1. Perform a thorough cleaning as described above.
2. Ensure the unit is completely dry before storing.
3. Store the ice maker in a cool, dry place, away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not working	No power; 'ADD WATER' or 'ICE FULL' indicator on.	Check power connection; Add water; Remove ice.
Ice cubes are too small or cloudy	Water temperature too high; First few cycles; Mineral buildup.	Use colder water; Discard first batches; Perform self-cleaning/descaling.
'ADD WATER' indicator is on, but reservoir is full	Water sensor dirty or obstructed.	Clean the water sensor located in the reservoir.

Problem	Possible Cause	Solution
Unusual noise during operation	Normal operation sounds (compressor, water pump); Unit not level.	Ensure unit is on a level surface; If noise is excessive, contact support.

8. SPECIFICATIONS

Feature	Detail
Model Number	2378
Dimensions (L x W x H)	32f. x 31an. x 25al. centimeters (approx. 32 x 31 x 25 cm)
Weight	6.5 kg
Ice Production Capacity	Up to 12 kg in 24 hours
Ice Production Cycle	6-12 minutes per cycle (9 cubes)
Water Reservoir Capacity	1.3 Liters
Voltage	230 Volts
Material	Plastic

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Jocca customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Jocca website or contact their customer support line.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D5D9C929>

More documents and user manuals: <https://manuals.plus/>