

TURNMEON GJ-24WPG32-US1-1

TURNMEON Halloween Witches Legs Candy Bowl with Orange Lights and Timer

Model: GJ-24WPG32-US1-1

INTRODUCTION

Thank you for choosing the TURNMEON Halloween Witches Legs Candy Bowl. This product is designed to enhance your Halloween decorations with its unique witches' legs design, integrated orange LED lights, and a convenient timer function. This manual provides detailed instructions for assembly, operation, and care to ensure safe and enjoyable use.

SAFETY INFORMATION

Please read and follow these safety guidelines carefully before using the product:

- Use according to general electrical safety guidelines.
- Keep away from water and flammable materials.
- Do not overload electrical outlets.
- Securely fasten in windy conditions if used outdoors.
- Do not allow children to play with the display.

PACKAGE CONTENTS

Verify that all components are present before assembly:

- 1x Cauldron with "Happy Halloween" text
- 2x Plastic Witches Leg Tubes (multi-segment)
- 2x Wooden Witch Feet
- 1x String of 30 Orange LED Lights (pre-installed or separate)
- 1x Battery Box (requires 2 AA batteries, not included)

SETUP AND ASSEMBLY

Follow these steps to assemble your Halloween Witches Legs Candy Bowl:

1. **Install Batteries:** Open the battery compartment on the underside of the cauldron. Insert 2 AA batteries (not included), ensuring correct polarity. Close the compartment securely.

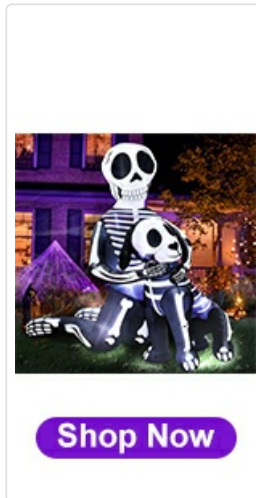


Image: Installing batteries into the cauldron's battery box.

2. **Assemble Leg Tubes:** Connect the plastic segments of each witches leg tube one by one until they form two complete legs.
3. **Set Up String Lights:** If not pre-installed, carefully thread the 30 orange LED string lights into the assembled leg tubes. Ensure the lights are evenly distributed within the tubes.
4. **Connect Tubes to Cauldron:** Insert the top end of each assembled leg tube into the designated holes on the underside of the cauldron. Push firmly until secure.
5. **Connect Tubes to Feet:** Insert the bottom end of each assembled leg tube into the holes on the wooden witch feet. Ensure the feet are stable and facing forward.

EASY TO INSTALL AND REMOVE



Install The Tube One By One.



Set Up The String Lights And Plug Them Into The Tube.



Connect The Tube To The Cauldron.



Connect The Tube To The Shoe For Installation.



You're All Set To Start Using It.

Image: Detailed assembly steps for the witches legs candy bowl.

Your Witches Legs Candy Bowl is now assembled and ready for use. You can fill the cauldron with candy or other decorative items.

STYLE OF HALLOWEEN CANDY BOWL DECORATIONS

Style1



**Suitable For Halloween
Decorations For Fireplace,
Table And Indoor Ect
Shrink Leg Height 16.5 Inch**

Style2



**Suitable For Halloween Decorations
For Porches, Entryways, Or
Gardens Outdoor Ect
Shrink Leg Height 2 Ft**

Image: The assembled Witches Legs Candy Bowl with lights on, ready for display.

OPERATING INSTRUCTIONS

The orange LED lights are controlled by a switch located on the battery box. This switch has three positions: ON, OFF, and TIMER.

- **ON:** Slide the switch to the "ON" position to keep the lights continuously illuminated.
- **OFF:** Slide the switch to the "OFF" position to turn off the lights.
- **TIMER:** Slide the switch to the "TIMER" position to activate the automatic timer function.



Image: Battery box switch settings for ON, OFF, and TIMER functions.

TIMER FUNCTION

When the switch is set to the "TIMER" position, the lights will operate on a 24-hour cycle:

- The lights will stay on for 6 hours.
- After 6 hours, the lights will automatically turn off for 18 hours.
- This 6-hour on, 18-hour off cycle will repeat daily until the switch is changed or batteries are depleted.

To reset the timer, simply switch the unit to OFF and then back to TIMER at your desired start time.

MAINTENANCE

To ensure the longevity of your Halloween Witches Legs Candy Bowl:

- Clean the product with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store in a cool, dry place when not in use.
- Remove batteries if the product will not be used for an extended period to prevent leakage.


TROUBLESHOOTING

If the lights do not turn on:

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.

- Ensure the switch is set to either "ON" or "TIMER" position.
- Verify that the string lights are properly connected within the leg tubes.

SPECIFICATIONS

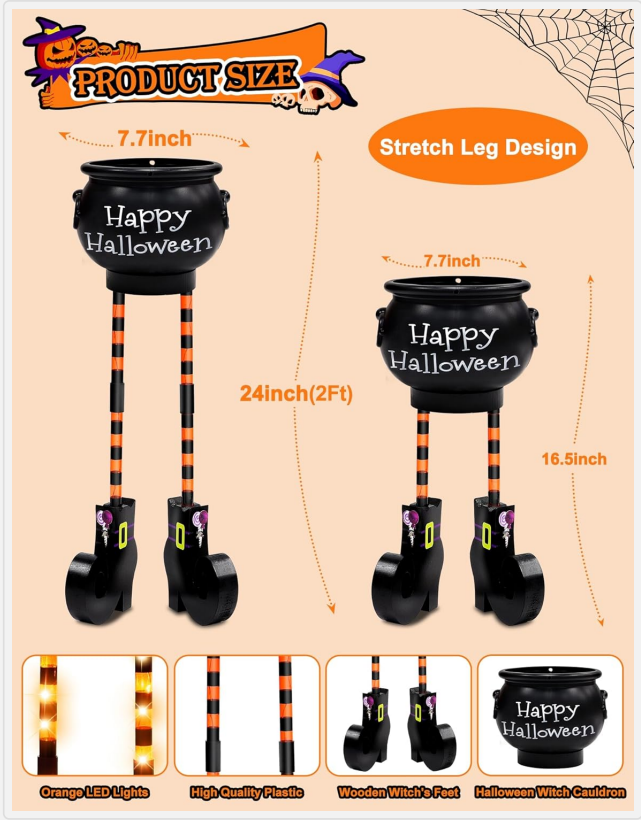Feature	Detail
Model Number	GJ-24WPG32-US1-1
Dimensions (Approx.)	<p>2 Ft (24 inches) tall (stretched leg design), Cauldron diameter 7.7 inches</p>  <p>Image: Product dimensions diagram.</p>
Weight	1.96 pounds
Material	Plastic (legs, cauldron), Wood (feet)
Light Type	LED String Lights
Number of LEDs	30
Light Color	Orange
Power Source	2 AA Batteries (not included)
Voltage	3 Volts
Timer Function	6 hours ON / 18 hours OFF cycle

PRODUCT VIDEO

Watch this video for a visual guide on the assembly and features of the TURNMEON Halloween Witches Legs Candy Bowl.

Your browser does not support the video tag.

Video: Assembly and features of the TURNMEON Halloween Witches Legs Candy Bowl.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the retailer where the product was purchased. Keep your purchase receipt for proof of purchase.