

Haier HW70-BP14929-S

Haier HW70-BP14929-S I-Pro Series 3 Slim Washing Machine User Manual

Model: HW70-BP14929-S

1. INTRODUCTION

Thank you for choosing the Haier HW70-BP14929-S I-Pro Series 3 Slim Washing Machine. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or in the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that are soiled with flammable substances.
- Keep the area around the appliance clear of combustible materials.
- Do not operate the appliance if it is damaged or malfunctioning.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your washing machine.

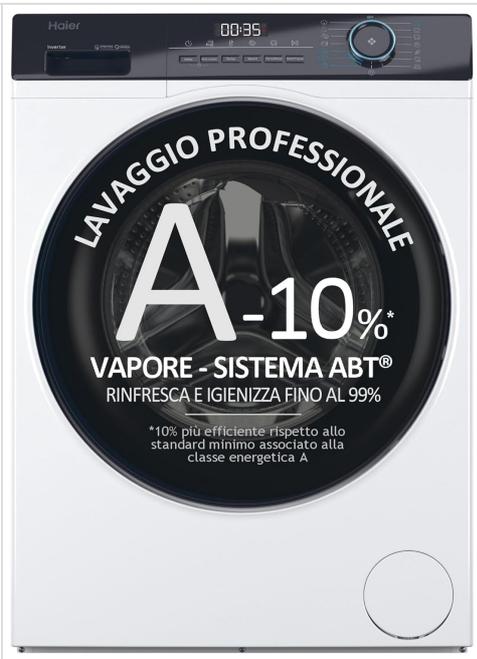


Figure 3.1: Front view of the Haier HW70-BP14929-S washing machine, highlighting its A-10% energy efficiency and key features like steam and ABT system.



Figure 3.2: The washing machine with its front-loading door open, revealing the spacious drum for easy loading and unloading of laundry.



Figure 3.3: Side profile of the Haier HW70-BP14929-S washing machine, showing its slim

design suitable for various spaces.



Figure 3.4: Rear view of the Haier HW70-BP14929-S washing machine, indicating connection points for water inlet and drainage, and the power cable.

Components:

- Control Panel: For program selection and settings.
- Detergent Dispenser: For laundry detergent and fabric softener.
- Drum: Stainless steel drum for washing clothes.
- Door: Front-loading door with safety lock.
- Power Cable: For electrical connection.
- Water Inlet Hose: For connecting to the water supply.
- Drain Hose: For water drainage.

4. INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

Installation Steps:

1. **Unpacking:** Carefully remove all packaging materials and transport bolts from the rear of the machine. Keep the bolts for future transport if needed.
2. **Positioning:** Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and connections.
3. **Leveling:** Adjust the leveling feet at the bottom of the machine until it is perfectly stable and level. Use a spirit level to verify.
4. **Water Connection:** Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks.
5. **Drainage:** Securely place the drain hose into a standpipe or over the edge of a sink, ensuring it is not kinked or blocked.
6. **Electrical Connection:** Plug the power cable into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230V).
7. **First Use:** Before washing clothes, run an empty cycle with a small amount of detergent to clean the

drum and internal components.

5. OPERATING INSTRUCTIONS

Your Haier washing machine offers various programs and features for optimal laundry care.

Control Panel:

The intuitive touch control panel allows for easy program selection and customization. The display shows the remaining time for the cycle.

Key Features:

- **Antibacterial Treatment (ABT):** Haier's exclusive ABT treatment protects the most sensitive areas of the washing machine, such as the detergent drawer and door seal, from mold and bacteria buildup, ensuring a hygienic wash.
- **Refresh Technology:** This micro-steam technology removes odors, fine dust, and allergens from fabrics, reduces wrinkles, and softens textiles. It's ideal for refreshing clothes without a full wash cycle.
- **Delay Start:** Program your wash cycle to start at a later time, up to 24 hours, to suit your schedule.
- **High Efficiency:** Designed for energy and water saving, contributing to lower utility bills.
- **XXL Drum (525mm):** The large drum capacity (7 kg) and design enhance washing performance and care for your garments.



Figure 5.1: An illustration of Haier's Refresh Technology, demonstrating how micro-steam penetrates fabrics to remove odors, fine dust, and allergens, while reducing wrinkles.



Figure 5.2: Visual comparison highlighting the 525mm XXL drum, which improves laundry care and cleaning performance by 18% and 20% respectively, in a compact space.

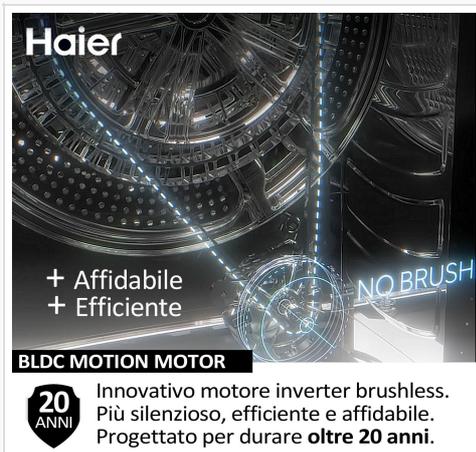


Figure 5.3: Close-up of the washing machine drum showcasing the ABT (Antibacterial Treatment) and Dual Spray system, designed to keep the machine hygienic and prevent mold and bacteria buildup.



Figure 5.4: Detailed view of the washing machine drum's interior texture, designed for gentle yet effective washing.



Figure 5.5: Image showing clothes placed inside the washing machine drum, illustrating the loading capacity.

Washing Programs:

The washing machine comes with 3 standard programs. Refer to the control panel for specific program details and additional options.

- Select the appropriate program based on fabric type and soil level.
- Add detergent and fabric softener to the dispenser.

- Load laundry into the drum, ensuring not to overload.
- Close the door securely and press the Start button.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Detergent Dispenser:** Periodically remove and clean the detergent dispenser to prevent residue buildup.
- **Drum Cleaning:** Run a drum clean cycle (if available) or an empty hot wash cycle with a washing machine cleaner monthly.
- **Door Seal:** Wipe the door seal after each wash to remove lint and moisture, preventing mold growth.
- **Filter Cleaning:** Check and clean the drain pump filter regularly to prevent blockages.

7. TROUBLESHOOTING

Before contacting customer service, try these solutions for common issues.

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected	Check power supply; Close door firmly; Select a program and press Start
Water not filling	Water tap closed; Inlet hose kinked	Open water tap; Straighten inlet hose
Water not draining	Drain hose kinked/blocked; Drain filter clogged	Straighten/clear drain hose; Clean drain filter
Excessive vibration/noise	Machine not level; Transport bolts not removed; Overloaded drum	Adjust leveling feet; Remove transport bolts; Reduce laundry load
Unpleasant odor	Residue buildup; Mold in door seal	Run drum clean cycle; Clean door seal and detergent dispenser

8. SPECIFICATIONS

Technical details of the Haier HW70-BP14929-S washing machine.

Feature	Specification
---------	---------------

Feature	Specification
Manufacturer	Haier
Model Number	HW70-BP14929-S
Product Dimensions (D x W x H)	48 x 60 x 85 cm
Weight	61 Kilograms
Capacity	7 Kilograms
Maximum Spin Speed	1400 RPM
Installation Type	Freestanding
Special Features	Remaining Time Display, High Efficiency, Delay Start, Hygiene Steam
Color	White
Control Type	Touch
Number of Standard Programs	3
Door Opening	Front Loader
Voltage	230 Volts
Material	Steel
Scope of Delivery	Power Cable
Energy Efficiency Class	A
First Available	June 8, 2024
Recommended Applications	For household use, delicate laundry, and antibacterial treatment

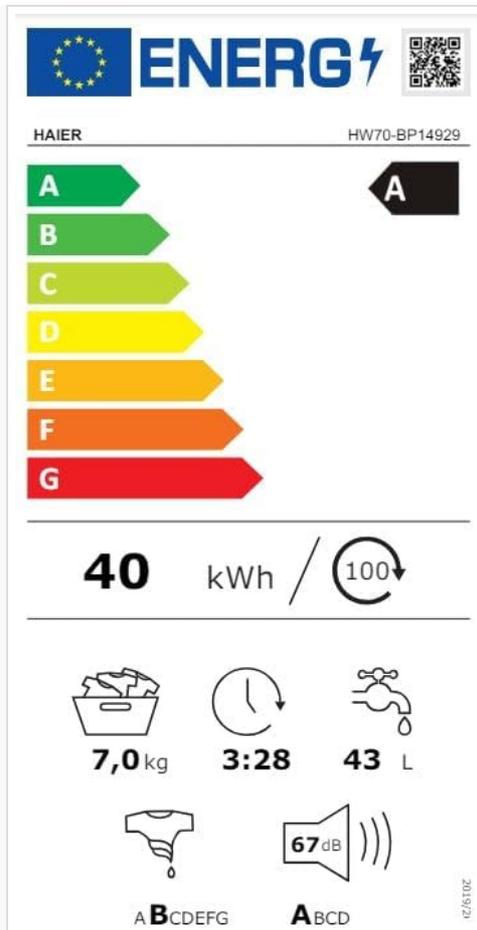


Figure 8.1: The official energy label for the Haier HW70-BP14929-S washing machine, indicating its Class A energy rating, 7.0 kg capacity, 40 kWh/100 cycles energy consumption, 43 liters water consumption, and 67 dB noise level during spin.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Haier website. Keep your purchase receipt as proof of purchase.

© 2024 Haier. All rights reserved.

Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2019/2014 DER KOMMISSION zur Energieeffizienzkennzeichnung von Haushaltswaschmaschinen und Haushaltswaschtrocknern

Name oder Handelsmarke des Lieferanten: Haier

Anschrift des Lieferanten: Haier Iberia EPREL public contact, Torre Llevant, Passeig Zona Franca 105, 1st floor, 08039 Barcelona, ES

Modellnummer: WFD0-BP14929

Allgemeine Produktparameter:

Parameter	Wert	Parameter	Wert
Nennkapazität ¹⁾ kg	7,0	Abmessungen in cm	Höhe 85 Breite 60 Tiefe 42
Energieeffizienzklasse ²⁾ (EFL)	40,8	Energieeffizienzklasse ³⁾	A
Wassereffizienz ⁴⁾ (EFL)	1,031	Spülleistung (L/hg) ⁵⁾	5,0
Energieverbrauch in kWh pro Betriebszyklus für das Programm „eco 60°C“ bei einer Kombination aus Voll- und Teillastung. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.	0,403	Wasserverbrauch in Litern pro Betriebszyklus für das Programm „eco 60°C“ bei einer Kombination aus vollständiger Beladung und Teillastung. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Histogramm des Wassers ab.	42
Höchste Temperatur innerhalb der Betriebsbereiches (°C)	Nennkapazität: 30 Halbe Nennkapazität: 26 Voll- last der Nennkapazität: 25	Gewichtete Restfeuchte ⁶⁾ (%)	53,5
Schleudereffizienz ⁷⁾ (EFL)	Nennkapazität: 1,330 Halbe Nennkapazität: 1,330 Voll- last der	Schleudereffizienzklasse ⁸⁾	B

[pdf]

Produktdatenblatt Waschmaschine HW70 BP14929 S online kaufen LIDL

gcp235822d93f964804a80eee5611bf9218 lidl es assets |||

Produktdatenblatt DELEGIERTE VERORDNUNG EU 2019/2014 DER KOMMISSION zur Energieverbrauchskennzeichnung von Haushaltswaschmaschinen und Haushaltswaschtrocknern

Name oder Handelsmarke des Lieferanten: Haier
 Anschrift des Lieferanten: Haier Iberia EPREL public contact, Torre Llevant, Passeig Zona ...

lang:de score:23 filesize: 52.6 K page_count: 2 document date: 2024-07-31