

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Riversong](#) /

› [Riversong AirFly L2 True Wireless Stereo Earbuds User Manual](#)

Riversong AirFly L2

Riversong AirFly L2 True Wireless Stereo Earbuds User Manual

Model: AirFly L2 (EA238)

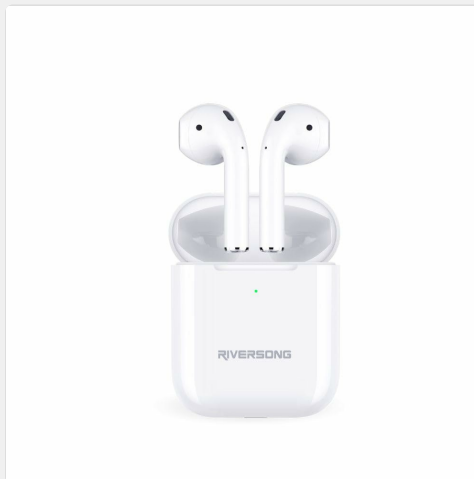


Image: Riversong AirFly L2 True Wireless Stereo Earbuds and their charging case.

1. INTRODUCTION

Thank you for choosing the Riversong AirFly L2 True Wireless Stereo (TWS) Earbuds. These earbuds are designed to provide a high-quality audio experience with the convenience of wireless connectivity. Featuring deep bass, clear treble, sensitive touch controls, and a sweat-resistant microphone, they are suitable for various activities, including making calls and enjoying music. The charging case supports both Type-C and wireless charging for enhanced flexibility.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Riversong AirFly L2 True Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Type-C Charging Cable
- User Manual



Image: The Riversong AirFly L2 earbuds and their charging case, typically found in the product package.

3. PRODUCT DIAGRAM

Familiarize yourself with the components of your AirFly L2 earbuds:



Image: An exploded view illustrating the internal components of a Riversong AirFly L2 earbud, including the driver, battery, and circuit board.

1. **Touch Control Area:** For managing playback, calls, and voice assistant.
2. **Microphone:** For hands-free calls.
3. **Charging Contacts:** For charging the earbuds inside the case.
4. **LED Indicator:** Shows charging status and pairing mode.
5. **Charging Case:** Stores and charges the earbuds.
6. **Type-C Charging Port:** For wired charging of the case.

4. SETUP

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

- **Charging the Earbuds:** Place the earbuds into the charging case. They will automatically begin charging. The LED indicators on the earbuds will show their charging status.
- **Charging the Case (Wired):** Connect the provided USB Type-C cable to the charging port on the case and to a USB power adapter (not included). The case's LED indicator will show charging progress.
- **Charging the Case (Wireless):** Place the charging case on a compatible wireless charging pad. The case's LED indicator will show charging progress.

A full charge takes approximately 2 hours. The earbuds provide up to 30 hours of total playtime with multiple charges from the case.

4.2 Pairing with a Device

To connect your AirFly L2 earbuds to your smartphone or other Bluetooth-enabled device:

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, and their LED indicators will flash.
3. On your device, go to Bluetooth settings and enable Bluetooth.
4. Search for available devices and select "Riversong AirFly L2" from the list.
5. Once connected, the earbud LEDs will stop flashing, indicating successful pairing.

The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Open the charging case, or long-press the touch control area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or long-press the touch control area on both earbuds for 5 seconds.

5.2 Touch Controls

The AirFly L2 earbuds feature sensitive touch controls. Specific functions may vary slightly depending on your device and application.

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Triple Tap (Left/Right)	Activate Voice Assistant (Siri, Google Assistant)
Long Press (2 seconds)	Reject Incoming Call

5.3 Calling

The built-in microphone allows for hands-free calling.

- **Answer/End Call:** Single tap either earbud.
- **Reject Call:** Long press either earbud for 2 seconds.

5.4 Music Playback

Enjoy high-quality audio with deep bass and clear treble.

- **Play/Pause:** Single tap either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.

6. MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The earbuds are water-resistant. Avoid submerging them in water or exposing them to heavy rain. Dry them thoroughly if they get wet.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds and case frequently. Charge them regularly.

7. TROUBLESHOOTING

If you encounter issues with your AirFly L2 earbuds, try the following solutions:

- **Earbuds not pairing:**
 - Ensure both earbuds are charged.
 - Turn off Bluetooth on your device, then turn it back on.
 - Forget/delete "Riversong AirFly L2" from your device's Bluetooth list and try pairing again.
 - Place earbuds back in the case, close the lid, wait a few seconds, then open to re-enter pairing mode.
- **No sound from one earbud:**
 - Ensure both earbuds are charged.
 - Place both earbuds back in the charging case, close the lid, and then take them out again.
 - Try resetting the earbuds (refer to the full product manual for specific reset instructions if available).
- **Charging case not charging:**
 - Check the Type-C cable connection and ensure the power adapter is working.
 - If using wireless charging, ensure the case is correctly positioned on the charging pad.
- **Touch controls not responding:**
 - Ensure your fingers are clean and dry.
 - Restart the earbuds by placing them in the case and taking them out again.

8. SPECIFICATIONS

Feature	Detail
Brand	Riversong
Model Name	AirFly L2 (EA238)
Color	White
Ear Placement	In Ear
Headphones Form Factor	In Ear
Impedance	140 Ohm
Noise Control	None
Frequency Response	20 Hz - 20,000 Hz
Sensitivity	88 dB
Headphone Jack	No Jack
Included Components	Wireless Charging Case
Age Range Description	Adult
Number of Items	1
Manufacturer	Riversong
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.2
Style	Classic
Carrying Case Color	White
Unit Count	1 Count
Audio Driver Type	Dynamic Driver
Special Features	Wireless Charging
Material	Plastic
Specific Uses For Product	Business
Recommended Uses For Product	Making calls
Compatible Devices	Laptops, Tablets, Smartphones, Smart Speakers, and other Bluetooth-enabled devices
Cable Feature	Without Cable
Water Resistance Level	Water Resistant
Electric	No

Feature	Detail
Ear Tip Form	Circular Tip
Control Type	Voice Control
Control Method	Touch
Controller Type	Touch
Battery Charge Time	2 hours



Image: Riversong AirFly L2 earbuds showcasing key features like 30H playtime, Type-C connector, Bluetooth 5.3 (note: specifications state 5.2), ENC, HD sound, and comfort-fit design.

9. WARRANTY AND SUPPORT

Warranty: This product comes with a limited warranty. Please refer to your purchase documentation or contact your retailer for specific warranty terms and conditions.

Support: For technical assistance or customer service inquiries, please contact the retailer where you purchased the product or visit the official Riversong website for support resources.