

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool ART3672 Built-in Double Door Refrigerator User Manual](#)

Whirlpool ART3672

Whirlpool ART3672 Built-in Double Door Refrigerator User Manual

Model: ART3672

1. INTRODUCTION

Thank you for choosing the Whirlpool ART3672 Built-in Double Door Refrigerator. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the refrigerator and keep them for future reference.

The Whirlpool ART3672 is a 239-liter total net capacity refrigerator designed for built-in installation. It features a static cooling system, automatic defrosting for the refrigerator compartment, reversible doors, and an energy efficiency class E rating. Its interior includes durable glass shelves and a convenient bottle holder.

2. SAFETY INFORMATION

General Safety:

- Ensure the appliance is properly grounded before use.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

Disposal:

- Dispose of the appliance according to local regulations. The appliance contains refrigerant and insulating gases which require special disposal.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including protective films and tapes, from the appliance. Keep packaging materials out of reach of children.

3.2 Location and Ventilation

Install the refrigerator in a dry, well-ventilated area, away from direct sunlight and heat sources (e.g., ovens, radiators). Ensure adequate air circulation around the appliance for optimal performance and energy efficiency. The appliance is designed for built-in installation, so follow the specific instructions for integrating it into your kitchen cabinetry.



Image: Whirlpool ART3672 refrigerator seamlessly integrated into a modern kitchen cabinet, demonstrating proper built-in installation.

3.3 Leveling

Ensure the appliance is level by adjusting the front feet. A level refrigerator operates more efficiently and prevents door alignment issues.

3.4 Door Reversal

The doors of the Whirlpool ART3672 are reversible, allowing them to open from either the right or left side to suit your kitchen layout. Refer to the detailed diagrams in the separate installation guide for instructions on how to reverse the doors. This process typically involves moving hinges and door stops.

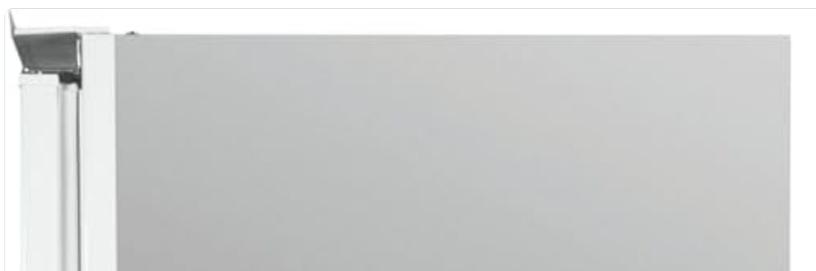






Image: Side view of the Whirlpool ART3672 refrigerator, showing its sleek profile and the hinge mechanism that allows for door reversal.

3.5 Electrical Connection

Connect the appliance to a dedicated 220 Volt, 50 Hz grounded power outlet. The refrigerator uses a Type F - 2 pin (German) plug. Do not use extension cords or adapters. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

3.6 Initial Cleaning

Before first use, clean the interior of the refrigerator with a mild detergent and warm water. Wipe dry thoroughly.

3.7 First Use

After plugging in the appliance, allow it to operate for several hours (at least 4-6 hours) before placing food inside. This ensures the interior reaches the optimal storage temperature.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The Whirlpool ART3672 features an integrated display for temperature control. Use the controls on the display to set the desired temperature for the refrigerator compartment. Refer to the display interface for specific button functions (e.g., temperature up/down, mode selection).



Image: Interior view of the Whirlpool ART3672 refrigerator, highlighting the integrated control panel for temperature adjustments and settings.

4.2 Food Storage

Organize food items to ensure proper air circulation. Store raw meats and fish on the lowest shelf to prevent dripping onto other foods. Use sealed containers for strong-smelling items. The refrigerator compartment has a net capacity of 191 liters, and the freezer compartment has a net capacity of 48 liters.



Image: Open door view of the Whirlpool ART3672 refrigerator interior, showcasing adjustable glass shelves, door balconies, and a dedicated bottle holder for organized storage.

4.3 Adjustable Shelves and Drawers

The refrigerator is equipped with four adjustable glass shelves and one vegetable drawer. These can be repositioned to accommodate items of various sizes. To adjust, carefully lift the shelf and slide it out, then reinsert it into the desired slots. The door balconies (3 total) and bottle holder provide additional storage flexibility.

4.4 Automatic Defrosting (Refrigerator)

The refrigerator compartment features an automatic defrosting system. Frost that forms on the back wall will periodically melt and drain into an evaporation tray, eliminating the need for manual defrosting of this section.

4.5 Manual Defrosting (Freezer)

As the freezer compartment uses a static cooling system, frost will accumulate over time. For optimal performance and energy efficiency, the freezer compartment should be manually defrosted when the frost layer reaches approximately 5mm (0.2 inches) thick. To defrost, remove all food, unplug the appliance, and leave the freezer door open. Place towels at the bottom to absorb melting ice. Do not use sharp objects or heating devices to speed up defrosting.

5. MAINTENANCE AND CLEANING

5.1 Cleaning the Interior

Unplug the appliance before cleaning. Clean the interior regularly with a solution of mild detergent and warm water. Avoid abrasive cleaners or solvents. Remove shelves and drawers for thorough cleaning. Rinse and dry all parts completely before returning them to the refrigerator.

5.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent. For stainless steel finishes (if applicable), use a specialized stainless steel cleaner. Ensure no water enters the control panel or electrical components.

5.3 Power Outage

In case of a power outage, keep the refrigerator and freezer doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily. Food can remain safely stored for several hours depending on the ambient temperature.

5.4 Vacation Mode

The Whirlpool ART3672 does not support a dedicated vacation function. For short absences, you can set the temperature to a slightly warmer setting. For long absences, it is recommended to empty the refrigerator, unplug it, clean it thoroughly, and leave the doors slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	Power cord unplugged; temperature setting too high; door left open; poor ventilation.	Check power connection; adjust temperature; ensure door is closed; verify ventilation.
Excessive noise	Appliance not level; objects vibrating against the unit; compressor noise (normal).	Level the appliance; remove vibrating objects; compressor noise is normal during operation.

Problem	Possible Cause	Solution
Water on floor (refrigerator)	Defrost drain blocked.	Clear the defrost drain hole at the back of the refrigerator compartment.
Excessive frost (freezer)	Freezer door not sealed properly; frequent door opening; high humidity.	Check door seal; avoid frequent door opening; manually defrost the freezer.

If the problem persists after checking these points, please contact customer service.

7. SPECIFICATIONS

Below are the key technical specifications for the Whirlpool ART3672 refrigerator:

Feature	Specification
Brand	Whirlpool
Model Name	ART3672
Appliance Placement	Built-in
Product Color	White
Total Net Capacity	239 Liters
Refrigerator Net Capacity	191 Liters
Freezer Net Capacity	48 Liters (Calculated)
Energy Efficiency Class	E
Noise Emission Class	B
Acoustic Emission	35 dB
Cooling System	Static
Refrigerator Defrost System	Automatic
Freezer Defrost System	Manual
Number of Doors	2
Door Hinge	Right (Reversible)
Shelf Material	Glass
Number of Refrigerator Shelves	4
Number of Vegetable Drawers	1
Interior Light Type	LED

Feature	Specification
Voltage	220 Volt
Plug Type	Type F - 2 pin (German)
Refrigerant	R-32 or R-290



Image: Energy efficiency label for the Whirlpool ART3672 refrigerator, indicating its Class E rating.

8. WARRANTY AND SUPPORT

8.1 Product Warranty

The Whirlpool ART3672 refrigerator comes with a warranty of **2 years for private users** and **1 year for companies**, starting from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions.

8.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact Whirlpool customer service. You can find contact information on the official Whirlpool website or in the documentation provided with your appliance. When contacting support, please have your model number (ART3672) and serial number ready.

For further information and support, visit the official [Whirlpool Store on Amazon](#).