

[Manuals.plus](#) /

› [Chefman](#) /

› Chefman MicroCrisp Countertop Microwave Oven and Convection Oven Instruction Manual

Chefman RJ55-MF-8

Chefman MicroCrisp Countertop Microwave Oven and Convection Oven

MODEL: RJ55-MF-8

Your all-in-one countertop companion for microwave speed and air fryer crisp.



Image: Chefman MicroCrisp Microwave and Convection Oven, showcasing its sleek design on a kitchen counter.

1. Introduction

Thank you for choosing the Chefman MicroCrisp Countertop Microwave Oven and Convection Oven. This appliance combines the speed of a microwave with the crisping capabilities of a convection oven, offering versatile cooking options for your kitchen. Please read this manual thoroughly before operation to ensure safe and efficient use.



Image: A spread of crispy foods including fried chicken, pizza, nachos, and popcorn, illustrating the appliance's ability to create crispy results.

2. Important Safety Instructions

WARNING: To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy, observe the following basic safety precautions:

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Do not attempt to service or repair the oven yourself. Contact qualified service personnel for examination, repair, or adjustment.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Maintain a minimum clearance of 3 inches on the other sides and any adjacent wall, and 12 inches from the top of the microwave to any upper cabinets.

3. Included Components

Your Chefman MicroCrisp Microwave Oven comes with the following components:

- Chefman MicroCrisp Countertop Microwave Oven
- Glass Turntable
- User Guide (this manual)

4. Setup and Installation

4.1 Placement

Place the microwave on a firm, level surface that is strong enough to hold the oven and the food being cooked. Ensure adequate ventilation by maintaining the recommended clearances:

- Minimum clearance of 3 inches on the other sides and any adjacent wall.
- Minimum clearance of 12 inches between the top of the microwave and any upper cabinets.

4.2 Turntable Installation

Before first use, remove all packing materials from inside the oven cavity. Install the glass turntable and turntable support as follows:

1. Place the turntable support in the circular indentation on the oven floor.
2. Place the glass turntable over the support, aligning the hub on the underside of the turntable with the turntable shaft in the oven floor. Ensure the turntable rotates freely.



Up to 17 preset options from whole chicken to popcorn.

Image: A close-up view of the Chefman MicroCrisp microwave's control panel and interior, showing the glass turntable in place.

5. Operating Instructions

5.1 Basic Microwave Operation

To cook with microwave function, place food in a microwave-safe container on the glass turntable. Close the door firmly. Use the control panel to set cooking time and power level.

5.2 Convection Crisper Function (Air Fryer)

The MicroCrisp features an integrated convection crisper for air frying. This function uses circulating hot air to cook food, providing crispy results similar to a dedicated air fryer. It is ideal for items like fries, chicken, and other foods that benefit from a crispy exterior.



Combo functions to microwave, then automatically crisp.

Image: Hands placing a pizza into the Chefman MicroCrisp microwave oven, demonstrating its capacity for convection cooking.

5.3 Dual-Phase Cooking (Micro-and-Crisp)

This unique function allows for phase cooking, combining microwave heating with convection crisping. For example, you can heat up leftover fried chicken with microwave energy and then crisp it with convection heat for optimal results.



Image: A visual representation of the dual-phase cooking process, showing how microwave and convection heat combine for thorough

cooking and crisping.

5.4 Power Levels

The microwave offers 10 power levels (1-10) for precise cooking control, suitable for tasks ranging from melting butter to fully cooking meals.



10 power levels for everything from reheating dinner to melting butter.

Image: The Chefman MicroCrisp microwave oven with its interior glowing, indicating food being cooked, highlighting its 10 power levels.

5.5 Preset Menus

The user-guided touch control panel includes 6 main preset menus for common foods, eliminating guesswork. Simply select your food type, and the oven will automatically set the optimal cooking time and function. There are up to 17 total preset options available.

- **Popcorn:** For perfectly popped popcorn.
- **Potato:** Ideal for baking potatoes.
- **Pizza:** Reheat or cook pizza slices.
- **Veggies:** Cook various vegetables.
- **Beverage:** Heat drinks.
- **Leftovers:** Efficiently reheat prepared meals.

5.6 Mute Function

To silence all microwave cooker alarms and button beeps, activate the mute option. This is useful for quiet environments or late-night use. Refer to the control panel for the specific button to activate/deactivate mute.

5.7 Timer Function

The timer function allows you to set a countdown timer independently of cooking operations. This is a simple timer and does not activate any heating elements.

5.8 Eco Mode

The Eco Mode is designed to reduce energy consumption when the microwave is not in active use. Consult the user guide for specific instructions on activating and deactivating Eco Mode.

6. Care and Maintenance

Regular cleaning will help maintain the performance and appearance of your Chefman MicroCrisp Microwave Oven.

- **Interior Cleaning:** The easy wipe-down interior allows for simple cleanup of spills and crumbs. Use a damp cloth with mild soap, then wipe with a clean, damp cloth.
- **Glass Turntable:** The glass cooking plate is dishwasher-safe for convenient cleaning.
- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.

7. Troubleshooting

If you experience issues with your microwave, refer to the following common problems and solutions:


Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Fuse blown or circuit breaker tripped; Door not closed properly.	Ensure plug is firmly in outlet; Check household fuse/circuit breaker; Close door securely.
Food not heating evenly	Food not stirred or rearranged; Incorrect power level or cooking time.	Stir or rearrange food during cooking; Adjust power level and time as needed.
Turntable not rotating	Turntable not properly placed; Obstruction under turntable.	Ensure turntable is correctly seated on its support; Remove any obstructions.
Unusual noise during operation	Loose parts; Food container touching oven walls.	Check for loose components; Ensure food container is centered and not touching sides.

If the problem persists after trying these solutions, please contact Chefman Customer Support.

8. Product Specifications

Feature	Detail
Model Number	RJ55-MF-8
Capacity	0.8 Cubic Feet
Product Dimensions (D x W x H)	16.3" x 18.5" x 11"

Feature	Detail
Item Weight	32 Pounds
Microwave Wattage	900W
Convection Oven Wattage	1800W
Voltage	120 Volts
Material	Stainless Steel
Color	Black
Special Features	Convection Crisper, 10 Power Levels, Dual-Phase Cooking, Dishwasher-Safe Parts

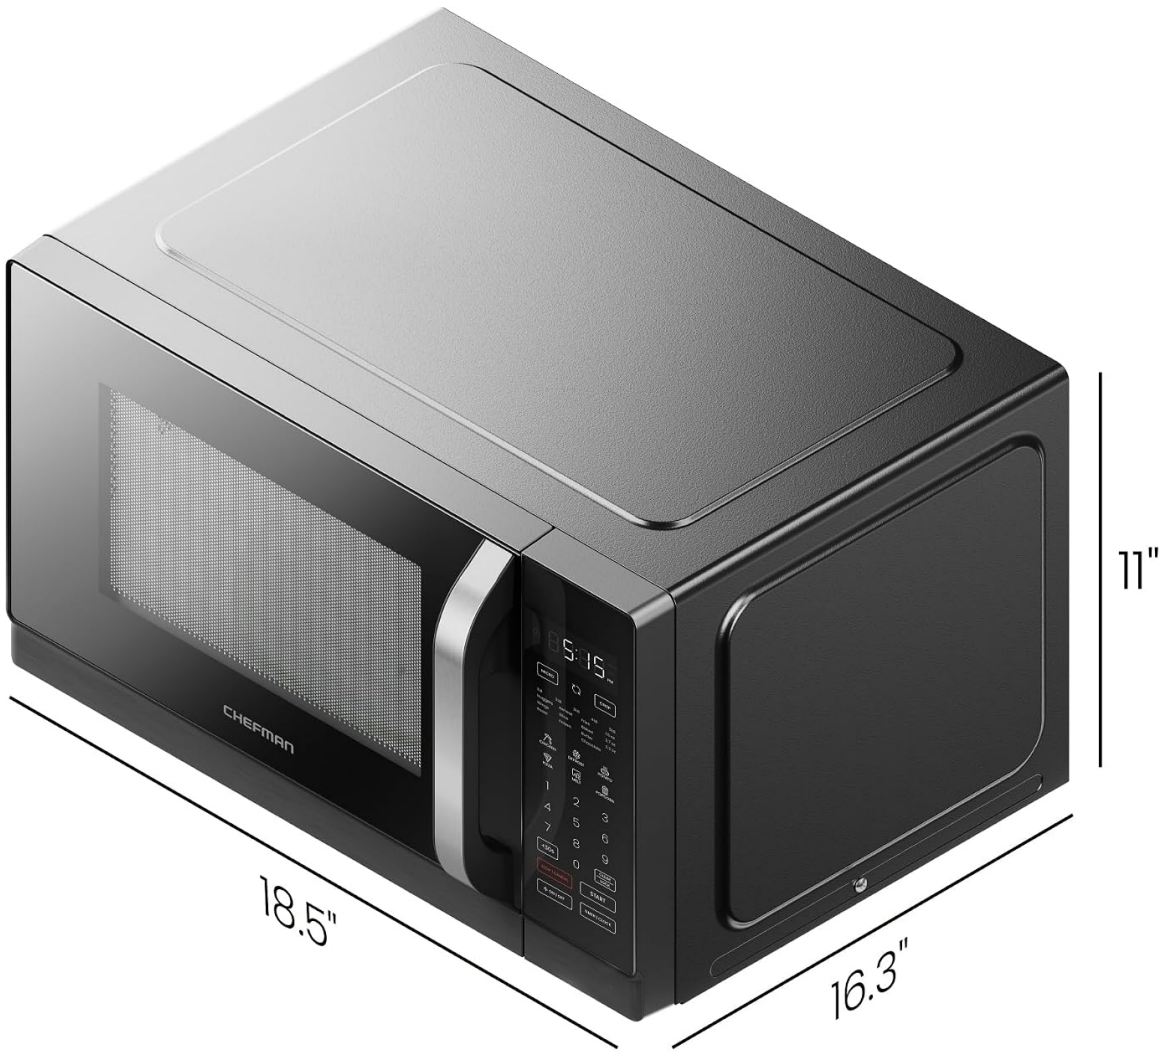

The all-in-one countertop companion.

Image: A diagram illustrating the compact dimensions (18.5" x 16.3" x 11") of the Chefman MicroCrisp microwave oven.

9. Warranty and Customer Support

Chefman provides a 1-year assurance for this product, covering defects in material and workmanship under

normal use. For warranty claims, technical assistance, or any questions regarding your Chefman MicroCrisp Microwave Oven, please refer to the contact information provided in the original product packaging or visit the official Chefman website.

For the full User Guide in PDF format, please refer to the following link [Chefman MicroCrisp User Guide \(PDF\)](#)