

CUCKOO CVC-A1410NW

CUCKOO Powerclone Cordless Vacuum Cleaner User Manual

Model: CVC-A1410NW

For Home with Charging Stand, High-Suction Cordless Stick Vacuum Cleaner for Hardwood Floor and Carpet

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

General Safety Precautions:

- Do not operate the vacuum cleaner without the dustbin and filters properly installed.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Turn off all controls before unplugging.
- Exercise extra care when cleaning on stairs.
- Do not allow children to play with the vacuum cleaner.

2. PRODUCT OVERVIEW

The CUCKOO Powerclone Cordless Vacuum Cleaner (Model: CVC-A1410NW) is designed for efficient and versatile home cleaning. It features high-suction power, a smart dust sensor, and a multi-layer filtration system to ensure a thorough clean on various surfaces.





Component	Description
Main Body	The primary unit containing the motor and dustbin.
Charging Stand	Docking station for charging and accessory storage.
Charging Adapter	Power supply for the charging stand.
Flex Extension Pipe	Flexible pipe for extended reach.
Connecting Pipe	Rigid pipe for standard upright use.
Battery	Rechargeable Lithium-Ion battery (2,000mAh).
Hybrid Brush	Versatile brush for various surfaces.
Dusting Brush	Soft brush for delicate surfaces.
Bedding Brush	Specialized brush for mattresses and upholstery.
2-in-1 Brush	Combination brush and crevice tool.
Crevice Tool	Narrow tool for tight spaces.

4. SETUP

4.1 Assembly:

1. Unpack all components from the box.
2. Attach the connecting pipe to the main body until it clicks into place.
3. Attach the main head (floor brush) to the other end of the connecting pipe.
4. Insert the battery into the designated slot on the main body until it locks.

4.2 Charging:

Before first use, fully charge the battery. The charging stand provides a convenient way to store and charge your vacuum.

 


Up to **35-Minute** Cordless Vacuuming

Extended Cleaning Time with
High-Capacity Battery



Removable Battery Design

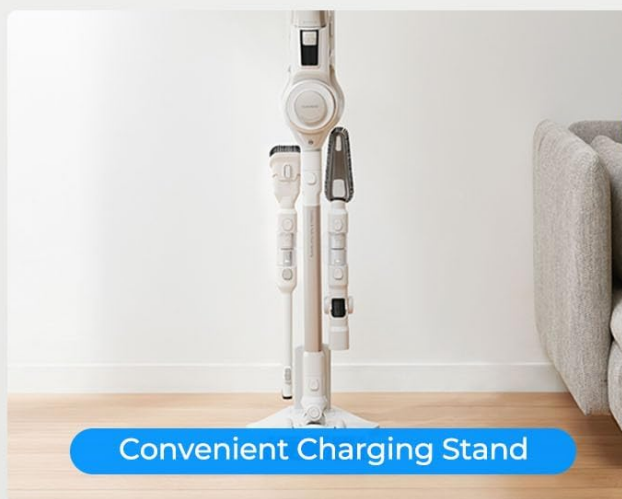

Convenient Charging Stand

Figure 4.1: Detachable battery for flexible charging and the compact charging stand.

1. Connect the charging adapter to the charging stand and plug it into a power outlet.
2. Place the assembled vacuum cleaner onto the charging stand. Ensure the charging contacts align.
3. The battery indicator lights on the main body will show the charging status. A full charge is indicated when all lights are solid.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off:

Press the power button on the handle to turn the vacuum cleaner on or off.

5.2 Suction Modes:

The vacuum cleaner features a smart dust sensor that automatically adjusts suction power. You can also manually select

suction levels.



Figure 5.1: The smart dust sensor automatically detects dust levels and adjusts suction for optimal cleaning.

Press the '+' or '-' buttons to cycle through the 5 available power levels. The display will indicate the current suction level.

5.3 Using Attachments:

The CVC-A1410NW comes with multiple attachments for various cleaning tasks. To change attachments, press the release button and swap the desired tool.



Figure 5.2: A selection of versatile attachments for comprehensive cleaning.

Examples of use:

- **Main Head:** Ideal for hardwood floors and carpets. Features LED lights to illuminate dust.
- **2-in-1 Brush:** Use the brush for dusting surfaces or retract the bristles for a wider nozzle.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **Bedding Brush:** Designed for cleaning upholstery, mattresses, and pet hair from fabrics.



Lightweight Cleaning Freedom

One-Hand Operation to Reach Every Corner

Figure 5.3: The lightweight design allows for easy one-hand operation and reaching high areas.



Maintain a Cozy, **Fur-Free** Space

Perfect for Pet-Friendly Homes



Figure 5.4: Effective at removing pet hair and dander, perfect for pet-friendly homes.

5.4 Official Product Video:

Your browser does not support the video tag.

Video 5.1: An official product video demonstrating the features and usage of the CUCKOO CVC-A1410NW Upright Powerclone Cordless Vacuum.

6. MAINTENANCE

6.1 Emptying the Dustbin:

To maintain optimal suction, empty the dustbin regularly, especially when it reaches the MAX fill line.

Easy-Empty Dustbin Design



Easily Washable for Quick Cleaning

Figure 6.1: The dustbin features a one-touch release for easy and hygienic emptying.

 
 
1. Ensure the vacuum is turned off.
2. Locate the dustbin release button (often near the handle).
3. Press the button to open the dustbin flap and empty contents into a trash can.

6.2 Cleaning the Filters:

The vacuum features a 5-layer filtration system. Regular cleaning of filters is crucial for maintaining performance and air quality.

Advanced **5-Layer** Filtration

Traps Dust, Allergens, and Microscopic Particles

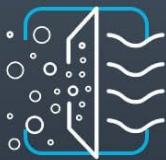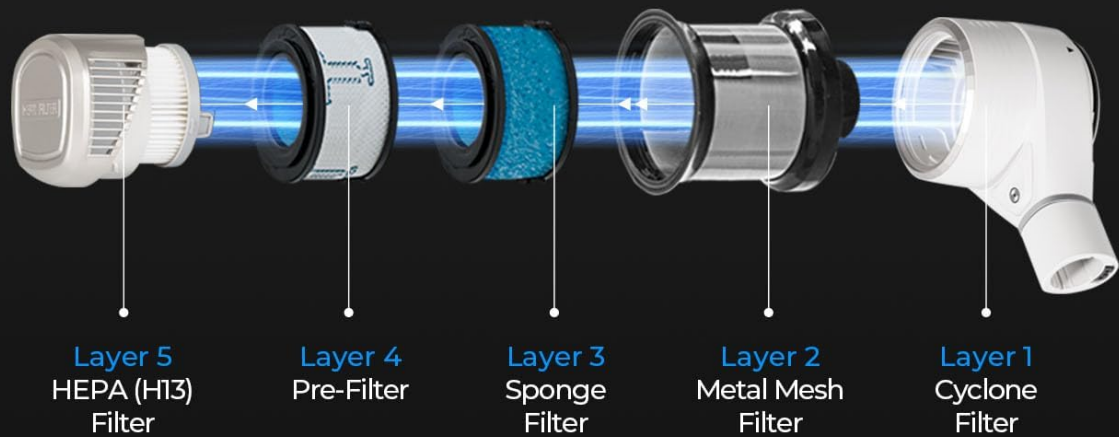

Why Good Filtration Matters?

- **Healthier Air** – Reduces allergens and pollutants
- **Cleaner Home** – Prevents dust recirculation
- **Peace of Mind** – Advanced filtration you trust

Figure 6.2: The advanced 5-layer filtration system traps dust, allergens, and microscopic particles.

Easy-Empty Dustbin Design



Easy Washable for Quick Cleaning

Figure 6.3: Filters and dustbin components are easily washable for quick cleaning.

1. Remove the dustbin and separate the filter components (Cyclone, Metal Mesh, Sponge, Pre-Filter, HEPA Filter).
2. Tap off loose dirt from the filters.
3. Rinse the washable filters under cold running water until the water runs clear.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
5. Reassemble the filters and dustbin, then reattach to the main body.

6.3 Cleaning the Brush Roll:

Periodically check the main head's brush roll for tangled hair or debris. Use scissors to cut away any tangled hair and remove it.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power.	Dustbin is full, filters are clogged, or brush roll is tangled.	Empty dustbin, clean filters, and remove debris from brush roll.
Battery runtime is short.	Battery not fully charged or operating in high power mode constantly.	Fully charge battery. Use lower power modes for longer runtime.
Vacuum head not moving smoothly.	Obstruction in the brush roll or wheels.	Check and clear any obstructions from the brush roll and wheels.

8. SPECIFICATIONS

Feature	Detail
Brand	CUCKOO
Model Name	Upright Powerclone Cordless (CVC-A1410NW)
Special Feature	Cordless, Smart Dust Sensor
Filter Type	HEPA Filter (5-Layer System)
Capacity	0.6 Liters
Wattage	140 Air Watts (Max)
Runtime	Up to 38 minutes
Battery Type	2,000mAh Detachable Lithium-Ion
Product Dimensions	10.2"L x 9.4"W x 46"H
Item Weight	6.8 pounds
Color	White
Control Method	Touch, Push Button
Number of Power Levels	5

9. WARRANTY AND SUPPORT

Warranty Information:

For detailed warranty information, please refer to the warranty card included with your product or visit the official CUCKOO website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support:

If you encounter any issues or have questions regarding your CUCKOO Powerclone Cordless Vacuum Cleaner, please contact CUCKOO customer support:

- **Website:** [CUCKOO Official Store](#)
- Refer to the product packaging or official website for phone numbers or email support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question