

ZINGBIRD Z67

ZINGBIRD Z67 Wireless Bluetooth Earbuds User Manual

Model: Z67

INTRODUCTION

This user manual provides detailed instructions for the ZINGBIRD Z67 Wireless Bluetooth Earbuds. Please read this manual carefully before using the product to ensure proper operation and to maintain the device's longevity. Keep this manual for future reference.

PRODUCT OVERVIEW

The ZINGBIRD Z67 earbuds are designed for an immersive audio experience with extended battery life and a secure fit, ideal for various activities including sports. They feature a dual LED digital display on the charging case for real-time power monitoring.



Figure 1: ZINGBIRD Z67 Earbuds and Charging Case. The image shows the open charging case with both earbuds inside, displaying a digital battery percentage of 100 on the LED screen.

80H Long Playback



Figure 2: Illustration of 80-hour long playback. The image highlights 10 hours on a single charge and 80 hours with the charging case, set against a water-like background.

Dual LED Digital Display

Monitoring the remaining power and charging status in real-time.



Charging Display
of Earbuds



Battery Display
of Case

Figure 3: Dual LED Digital Display. This image shows the charging case open with earbuds, indicating separate LED displays for earbud charging status and case battery percentage.

Immersive Stereo Sound



Figure 4: Immersive Stereo Sound. An artistic rendering depicting the internal components of an earbud, emphasizing Bluetooth 5.3 technology and sound quality, with musicians playing instruments in the background.

Designed for Sports



Figure 5: Designed for Sports. A woman wearing one earbud, illustrating the flexible ear hook design and button control. Different ear tip sizes (S, M, L) are also shown.

One-Step Pairing

Take the earbuds out of the case, auto connect your device.



Figure 6: One-Step Pairing. An image showing a smartphone's Bluetooth settings screen with "Z67" listed as connected, alongside an earbud, demonstrating the ease of connection.

PACKAGE CONTENTS

- ZINGBIRD Z67 Wireless Bluetooth Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Ear Tips (S, M, L sizes)
- User Manual

SETUP

1. Initial Charge

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB charging cable to the charging port on the case and plug the other end into a USB power adapter (not

included) or a computer's USB port. The LED display on the case will show the charging status.

2. Pairing with Your Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, computer), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices. Select "Z67" from the list.
5. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or LED indicator change).
6. If pairing fails, place the earbuds back into the case, close it, and then reopen to restart the process.

3. Wearing the Earbuds

Choose the ear tips that provide the most comfortable and secure fit. Insert the earbud into your ear canal and rotate it gently until the ear hook rests comfortably over your ear. This ensures optimal sound quality and stability, especially during physical activity.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on. Alternatively, press and hold the multi-function button on each earbud for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging. Alternatively, press and hold the multi-function button on each earbud for 5 seconds.

Music Playback

- **Play/Pause:** Single press the multi-function button on either earbud.
- **Next Track:** Double press the multi-function button on the right earbud.
- **Previous Track:** Double press the multi-function button on the left earbud.
- **Volume Up:** Triple press the multi-function button on the right earbud.
- **Volume Down:** Triple press the multi-function button on the left earbud.

Call Management

- **Answer/End Call:** Single press the multi-function button on either earbud.
- **Reject Call:** Press and hold the multi-function button on either earbud for 2 seconds.

Voice Assistant

- **Activate Voice Assistant (Siri, Google Assistant, etc.):** Press and hold the multi-function button on either earbud for 1.5 seconds.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

- Ensure charging contacts on both earbuds and case are clean and free of debris.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

Battery Care

- To prolong battery life, avoid fully discharging the earbuds and case frequently.
- Charge the device regularly, even if not in frequent use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing	Low battery; Earbuds not in pairing mode; Device Bluetooth off; Interference.	Charge earbuds and case. Place earbuds in case, close, then reopen. Ensure device Bluetooth is on. Move closer to device. Forget "Z67" on device and re-pair.
Only one earbud working	One earbud low battery; Earbuds not connected to each other.	Ensure both earbuds are charged. Place both earbuds in the case, close, then reopen to re-sync.
No sound or low volume	Device volume too low; Earbuds not properly seated; Ear tips blocked.	Increase volume on your device and earbuds. Adjust earbud position. Clean ear tips and earbud mesh.
Charging case not charging	Faulty cable/adapter; Dirty charging port.	Try a different USB cable and power adapter. Clean the charging port gently.

SPECIFICATIONS

- **Model:** Z67
- **Brand:** ZINGBIRD
- **Connectivity:** Bluetooth 5.3
- **Playtime (Earbuds):** Up to 10 hours on a single charge
- **Total Playtime (with Charging Case):** Up to 80 hours
- **Charging Case Display:** Dual LED Digital Display (Earbud charge, Case battery)
- **Water Resistance:** IPX7 (Waterproof)
- **Microphone:** Built-in
- **Design:** Ear Hook for secure fit
- **Components Included:** Wireless Earbuds, Charging Case

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact ZINGBIRD customer service directly. Details are typically available on the official ZINGBIRD website or through your point of

purchase.

Manufacturer: ZINGBIRD

Date of First Availability on Amazon.com.be: May 31, 2024

© 2024 ZINGBIRD. All rights reserved.

This manual is subject to change without notice.