

Nokia Nokia 220 4G

Nokia 220 4G User Manual

Model: Nokia 220 4G (B0D5HMXD53) | Brand: Nokia

INTRODUCTION

This user manual provides essential information for operating your Nokia 220 4G mobile phone. Please read it carefully to ensure proper use and to maximize the features of your device.

The Nokia 220 4G is a modern keypad phone designed for reliable communication and entertainment, featuring 4G connectivity, a built-in UPI app, wireless FM radio, MP3 player, Bluetooth, and a USB Type-C port.



Image: The Nokia 220 4G phone, showcasing its front display and keypad alongside its textured rear panel.

WHAT'S IN THE BOX

- Handset
- Battery
- Charger (Type C)
- Quick Start Guide

GETTING STARTED: SETUP

1. Inserting the SIM Card and Battery

Your Nokia 220 4G supports dual SIM cards. Ensure the phone is powered off before inserting or removing SIM cards or the battery.

1. Remove the back cover by gently prying it from the notch at the bottom.
2. Insert the SIM card(s) into the designated slots with the gold contacts facing down.
3. Insert the battery, aligning the contacts.
4. Replace the back cover, pressing firmly until it clicks into place.

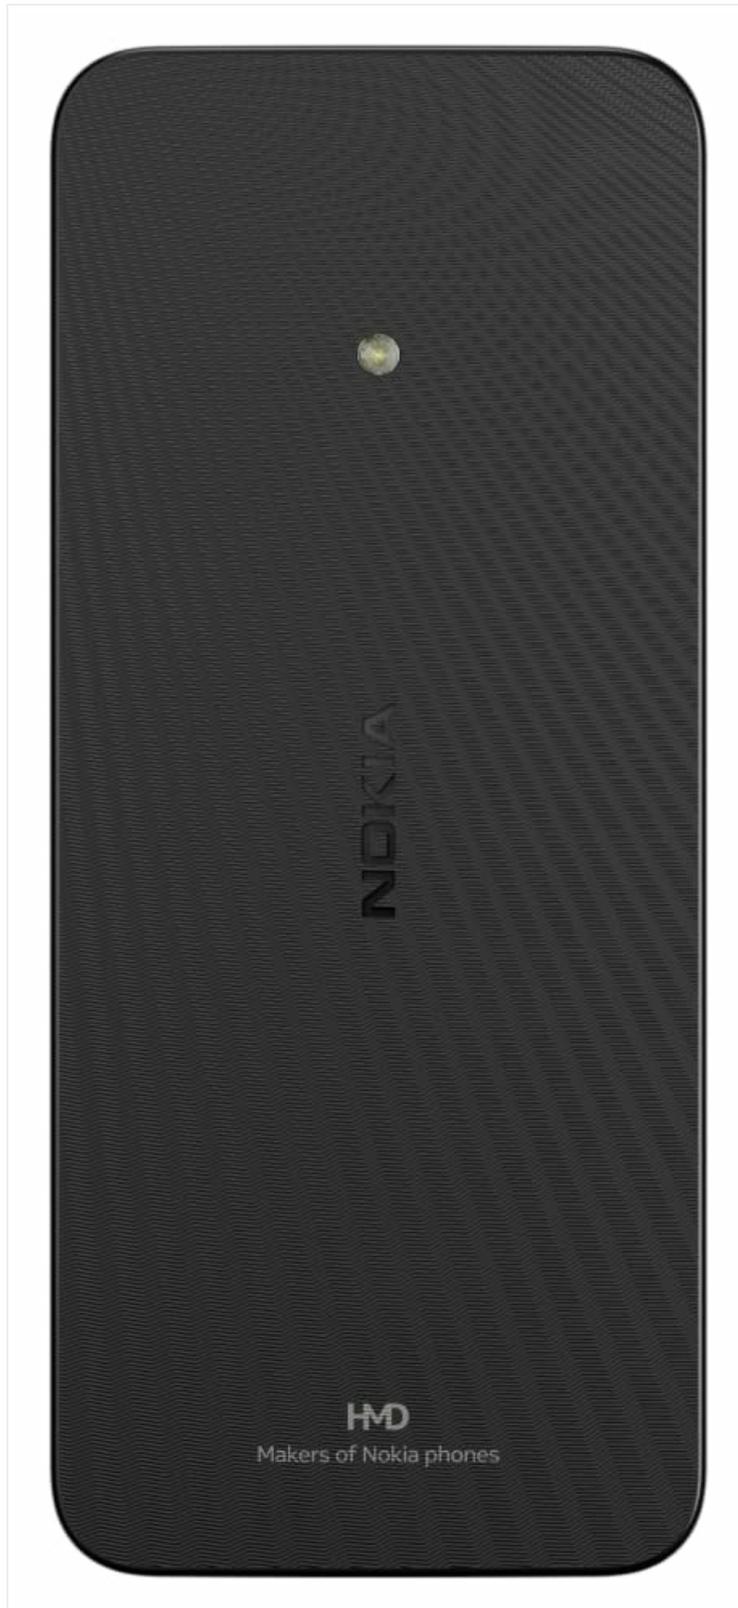


Image: Rear view of the Nokia 220 4G, illustrating the textured back cover and camera module, which needs to be removed to access the SIM and battery slots.

2. Charging the Battery

Before first use, fully charge the battery. Use only the charger provided with your device.

1. Connect the USB Type-C end of the charger to the phone's charging port.
2. Plug the charger into a wall outlet.
3. The battery indicator on the screen will show charging progress.
4. Once fully charged, disconnect the charger.

3. Powering On/Off

- To power on, press and hold the Power key until the phone vibrates.
- To power off, press and hold the Power key, then select "Power off" from the options.

OPERATING INSTRUCTIONS

Basic Navigation

The Nokia 220 4G features a traditional keypad for navigation and input.

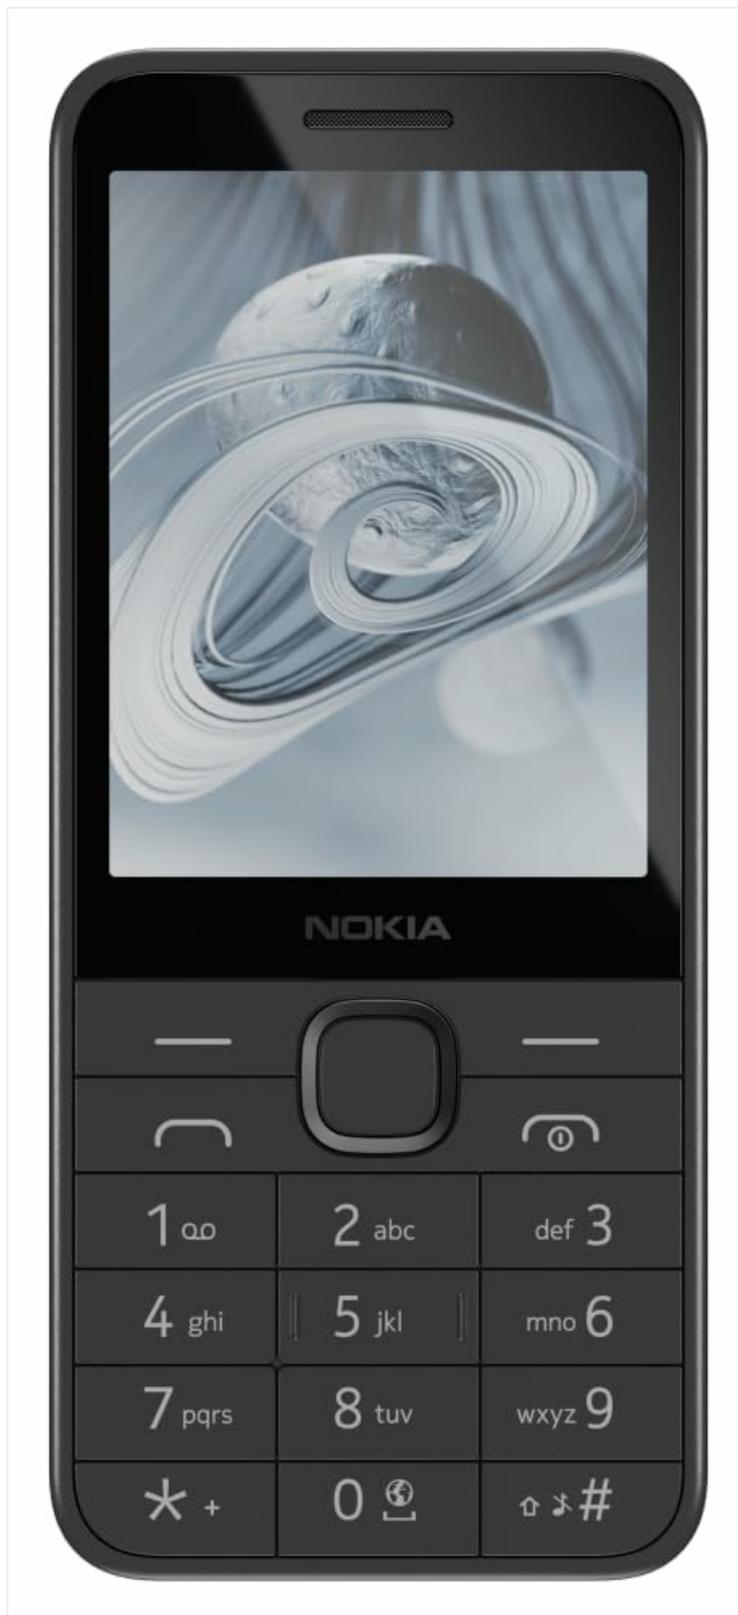


Image: Front view of the Nokia 220 4G, highlighting the display screen and the physical keypad for navigation and input.

- **Navigation Key:** Use the central navigation key to scroll through menus and select items.
- **Call Key:** Press to make a call or answer an incoming call.
- **End Key:** Press to end a call or return to the home screen.
- **Numeric Keys:** Use for dialing numbers and text input.

Making and Receiving Calls

- **To make a call:** Enter the phone number using the keypad and press the Call key.
- **To answer a call:** Press the Call key when the phone rings.

- **To end a call:** Press the End key.

Messaging

To send and receive text messages (SMS):

1. Go to Menu > Messaging.
2. Select "Create message" or "New message".
3. Enter your message using the keypad.
4. Enter the recipient's number or select from contacts.
5. Select "Send".

Special Features

- **Built-in UPI App:** The phone comes with a pre-installed UPI (Unified Payments Interface) application for easy and secure money transactions. Access it from the main menu to send and receive payments.

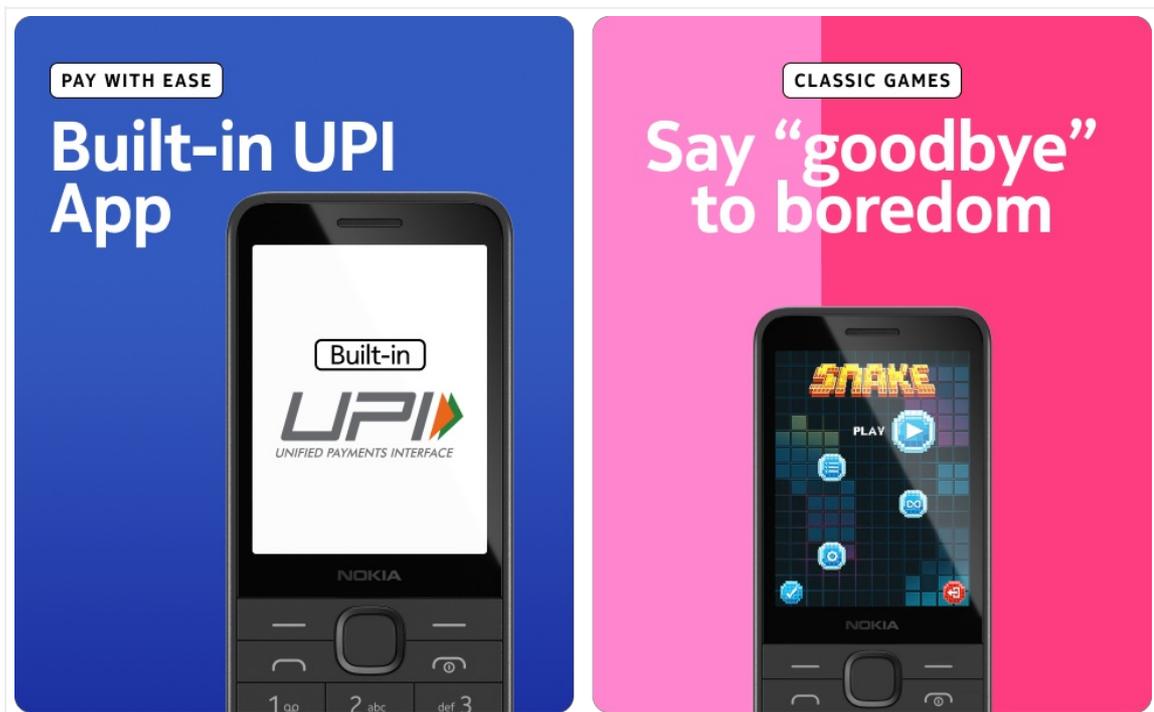


Image: The Nokia 220 4G display showing the Built-in UPI app interface on one screen and the classic Snake game on another, highlighting both modern payment features and traditional entertainment.

- **Wireless FM Radio:** Enjoy your favorite radio stations without needing a headset. Navigate to the FM Radio application from the menu.
- **MP3 Player:** Play your stored music files. Ensure you have a memory card inserted with your MP3 files. Access the MP3 Player from the multimedia menu.
- **Bluetooth:** Connect to other Bluetooth-enabled devices like headsets or speakers for wireless audio. Go to Menu > Settings > Connectivity > Bluetooth to enable and pair devices.
- **Cloud Apps (YouTube & YouTube Shorts):** The phone includes pre-installed cloud applications for accessing online content, including YouTube and YouTube Shorts.

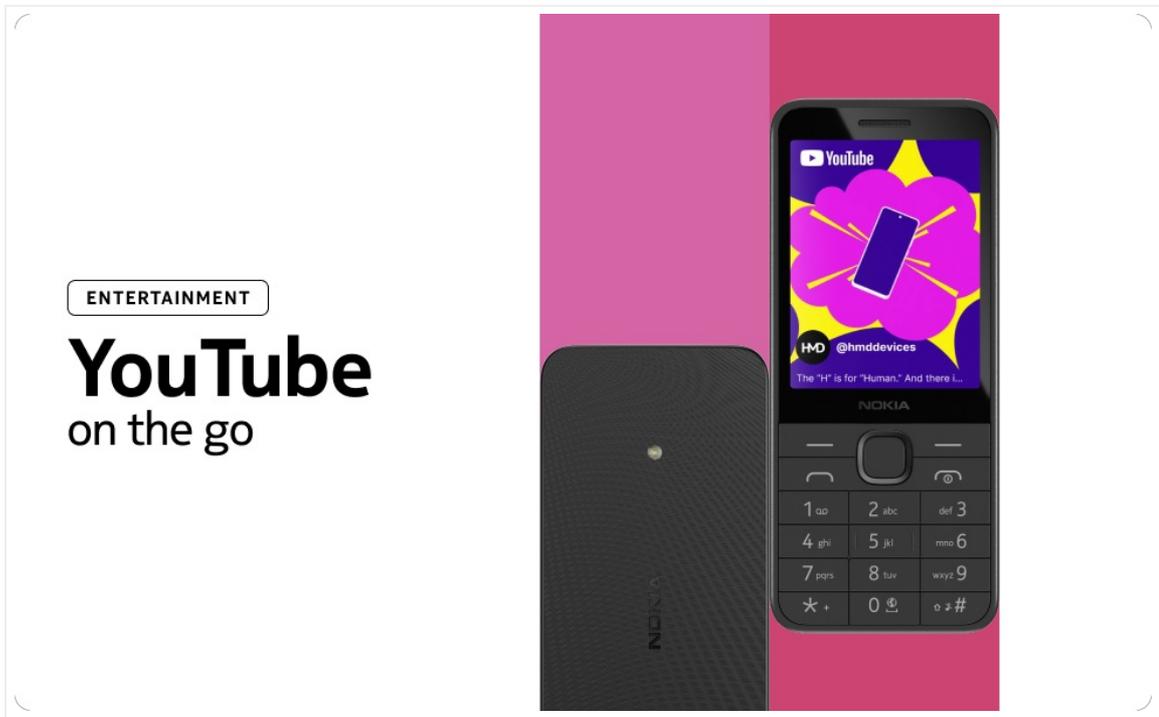


Image: The Nokia 220 4G displaying the YouTube interface, emphasizing its capability for "YouTube on the go" through cloud applications.

- **Classic Snake Game:** Revisit the iconic Snake game for entertainment. Find it under the Games section in the menu.



Image: The Nokia 220 4G displaying the classic Snake game on one screen and a YouTube video on another, illustrating the device's entertainment options.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Battery Care:**
 - Do not expose the battery to extreme temperatures.
 - Avoid fully discharging the battery frequently.

- Use only original Nokia chargers and batteries.
- **Storage:** Store the phone in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
Phone does not power on	Ensure the battery is correctly inserted and fully charged. Try connecting the charger.
Cannot make or receive calls	Check SIM card insertion. Ensure you have network coverage. Restart the phone.
Poor battery life	Reduce screen brightness. Close unused applications. Limit background data usage.
Bluetooth connection issues	Ensure Bluetooth is enabled on both devices. Make sure devices are within range. Try re-pairing.

SPECIFICATIONS

Feature	Detail
Operating System	S30+
Product Dimensions	12.7 x 5.4 x 1.2 cm
Item Weight	71 g
Battery	1 Lithium Ion battery (included)
Battery Power Rating	1450 mAh
Wireless Communication	Bluetooth
Connectivity	USB Type-C
GPS	GLONASS
Special Features	MP3 Player, Wireless FM Radio, Built-in UPI App, YouTube, YouTube Shorts, Snake Game
Display Resolution	240 x 320 pixels
Display Size	2.8"
Device Interface	Keypad
Audio Jack	3.5 mm
Form Factor	Bar
RAM Memory Installed Size	64 MB

Feature	Detail
Memory Storage Capacity	32 GB (expandable via memory card)
Manufacturer	For and on behalf of HMD Mobile India Private Limited
Country of Origin	India

WARRANTY AND SUPPORT

Your Nokia 220 4G is manufactured by HMD Mobile India Private Limited. For warranty claims and technical support, please refer to the Quick Start Guide included in the box or visit the official Nokia support website for your region.

The manufacturer's address is: Pioneer Urban Square Complex, No 510 5th Floor, Tower C, Golf Course Extension Road, Sector 62, Gurgaon, Haryana, 122102, India.

Please retain your proof of purchase for warranty purposes.