

OGERY JD-14923

OGERY Camping String Lights 4-in-1 User Manual

Model: JD-14923

INTRODUCTION

Thank you for choosing the OGERY Camping String Lights. This 4-in-1 device combines a camping light, string light, work light, and flashlight, offering versatile illumination for various indoor and outdoor settings. Designed for portability and ease of use, it features a quick storage mechanism and multiple lighting modes to enhance your experience.

WHAT'S IN THE BOX

- 1 x OGERY Camping String Light
- 1 x USB Charging Cable
- 1 x User Manual

FEATURES

- **8 Lighting Modes:** Includes warm string lights, RGB alternate flash, RGB breathing, camping light + warm string light, camping glare light, XTE strong light, XTE weak light, and XTE SOS flashing light.
- **Portable Storage:** Lightweight (approximately 7.4 ounces) with a quick manual winding mechanism for 32.8FT string lights, allowing storage in approximately 30 seconds.
- **4-in-1 Functionality:** Serves as a camping light, decorative string light, work light, and emergency flashlight.
- **Durable Design:** Constructed from high-quality ABS & PC material with splash-proof (IPX4) rating and magnetic adsorption for versatile placement.
- **USB Rechargeable:** Built-in 2000mAh battery provides 5 to 12 hours of operation after a 5-hour charge, with a clear power indicator.

SETUP

1. **Initial Charge:** Before first use, fully charge the device using the provided USB cable. The power indicator light will flash blue during charging and turn solid when complete.
2. **Unwind String Lights:** To deploy the string lights, gently pull the string from the main unit. The lights will extend up to 32.8 feet.

3. **Placement:** Utilize the integrated hook for hanging the unit (e.g., inside a tent, on a branch) or use the magnetic base to attach it to metal surfaces.



Image: The OGERY Camping String Light demonstrating its versatility: hanging inside a tent, being held as a handheld light, and resting on a table as an area light.

OPERATION

The OGERY Camping String Light is operated via a single control button located on the unit.

1. **Power On/Off:** Press and hold the control button for approximately 2-3 seconds to turn the device on or off.
2. **Change Lighting Modes:** Once powered on, short press the control button to cycle through the 8 available lighting modes.
3. **Adjust Brightness (XTE Modes):** For XTE strong, weak, and SOS flashing light modes, further short presses may adjust brightness or activate the SOS function.

Easy to Store

Ours



Others



Image: Visual representation of the various lighting modes and brightness levels, including warm string lights, camping glare, RGB alternating flash, RGB breathing, and XTE strong/weak/flash lights.

LIGHTING MODES

The device offers 8 distinct lighting modes:

- **Warm String Lights:** Provides a steady, warm glow from the string lights.
- **RGB Alternate Flash:** The string lights cycle through red, green, and blue colors with an alternating flash effect.
- **RGB Breathing:** The string lights gently fade in and out with RGB colors.
- **Camping Light + Warm String Light:** Activates both the main camping light and the warm string lights simultaneously.
- **Camping Glare Light:** Provides a bright, wide-area illumination from the main unit.
- **XTE Strong Light:** A focused, strong beam from the XTE LED for flashlight functionality.
- **XTE Weak Light:** A less intense, focused beam from the XTE LED.

- **XTE SOS Flashing Light:** The XTE LED flashes an SOS signal for emergency situations.

CHARGING AND BATTERY

- **Battery Capacity:** Built-in 2000mAh lithium polymer battery.
- **Charging Time:** Approximately 5 hours for a full charge.
- **Operating Time:** 5 to 12 hours, depending on the selected lighting mode.
- **Charging Process:** Connect the provided USB cable to the charging port on the device and a suitable USB power source. The power indicator light will flash blue during charging.
- **Battery Indicator:** The power indicator light will turn solid blue when the device is fully charged.
- **Important Note:** Use only the original charging cable. Other cables may prevent proper charging.

STORAGE AND PORTABILITY

The OGERY Camping String Light is designed for quick and easy storage, preventing tangles and maximizing portability.

1. **Winding Mechanism:** To store the string lights, turn the manual handle on the side of the unit. The 32.8FT string lights will retract into the device in approximately 30 seconds.
2. **Compact Design:** The lightweight and compact design allows for easy storage in backpacks or small bags, making it an ideal camping essential.

5 Light Modes



Warm string lights

🕒 6H




Camping glare light

🕒 8H




Camping light+ string lights

🕒 3.5H

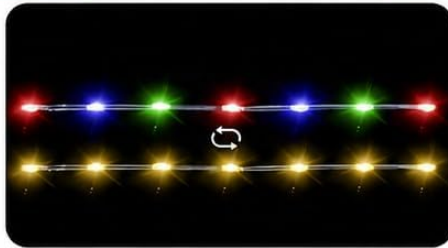

Alternating Flash

🕒 6H

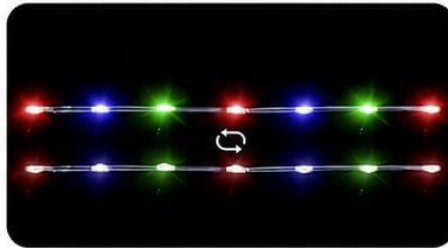

RGB Breathing

🕒 12H

3 Brightness Levels



XTE strong light



XTE weak light



XTE flash light

Image: A visual comparison highlighting the easy storage of the OGERY Camping String Light by winding the string back into the unit, contrasting with a tangled mess of traditional string lights.

Your browser does not support the video tag.

Video: A short preview video demonstrating the quick storage feature of the OGERY Camping String Lights, showing the winding mechanism in action. This video is provided by the seller.

INSTALLATION AND PLACEMENT

The versatile design allows for multiple installation options:

- **Hanging:** Use the integrated hook to hang the main unit from tent ceilings, branches, awnings, or other suitable structures.
- **Magnetic Adsorption:** The magnetic base allows the unit to be securely attached to metal surfaces, such as RVs or metal poles.
- **Surface Placement:** The unit can also be placed on flat surfaces like tables or the ground to provide ambient light.

- **String Light Arrangement:** Drape the 32.8ft string lights around tents, trees, patios, or any area where decorative or functional lighting is desired.

LED Camping Lantern

Lighting & Decoration perfectly combined



Image: The OGERY Camping String Lights set up at a campsite, providing warm illumination around a tent and outdoor dining area, demonstrating its use for both lighting and decoration.

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** When not in use for extended periods, ensure the device is fully charged and stored in a cool, dry place.
- **Cable Care:** Handle the string lights and charging cable gently to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Device is not charging.	Incorrect charging cable or faulty connection.	Ensure you are using the original USB cable and that it is securely connected to both the device and the power source.
Short battery life.	High brightness mode or continuous use.	Operating time varies by mode. Use lower brightness settings or less power-intensive modes for longer battery life. Ensure the device is fully charged before use.
String lights are tangled.	Improper unwinding or storage.	Gently untangle the lights. Always use the manual winding mechanism for storage to prevent tangles.

SPECIFICATIONS

Feature	Detail
Model Number	JD-14923
Brand	OGERY
Light Source Type	LED
Power Source	Battery Powered (2000mAh Lithium Polymer)
Light Color Options	Warm, RGB, White
Ingress Protection Rating	IPX4 (Splash-Proof)
Control Method	Touch Button
Item Length	32.8 feet (10 meters)
Item Weight	0.25 kg (approximately 7.4 ounces)
Material Type	ABS & PC Plastic
Indoor/Outdoor Usage	Indoor, Outdoor

SAFETY INFORMATION

- This device is splash-proof (IPX4) and can withstand light rain, but it should not be submerged in water.
- Keep out of reach of children.
- Do not attempt to disassemble or modify the device.
- Use only the provided USB cable for charging.
- Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official OGERY website. Please retain your proof of purchase for any warranty claims.

© 2026 OGERY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question