

Mellerware MWAFF 04

Mellerware MWAFF 04 Air Fryer Instruction Manual

Model: MWAFF 04

Brand: Mellerware

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using the Mellerware MWAFF 04 Air Fryer.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the pan is properly inserted before operation. The air fryer features an automatic shut-off when the pan is removed.

2. PRODUCT OVERVIEW AND COMPONENTS

The Mellerware MWAF 04 Air Fryer is a versatile kitchen appliance designed for healthy cooking with minimal oil. It features a digital touch control panel and a 4.5-liter capacity.



The Mellerware MWAF 04 Air Fryer, showcasing its sleek black design with subtle golden accents and digital control panel.


Included Components:

- 1 N Air Fryer Unit
- 1 N Cooking Pan (4.5L capacity)
- 1 N Food Separator
- 1 N Instruction Manual Cum Warranty Card
- 1 N Recipe Booklet

INALSA
MALLERWARE

EVEN BROWNING OF FOOD WITH 360° HEATING

SAFE TO OPERATE

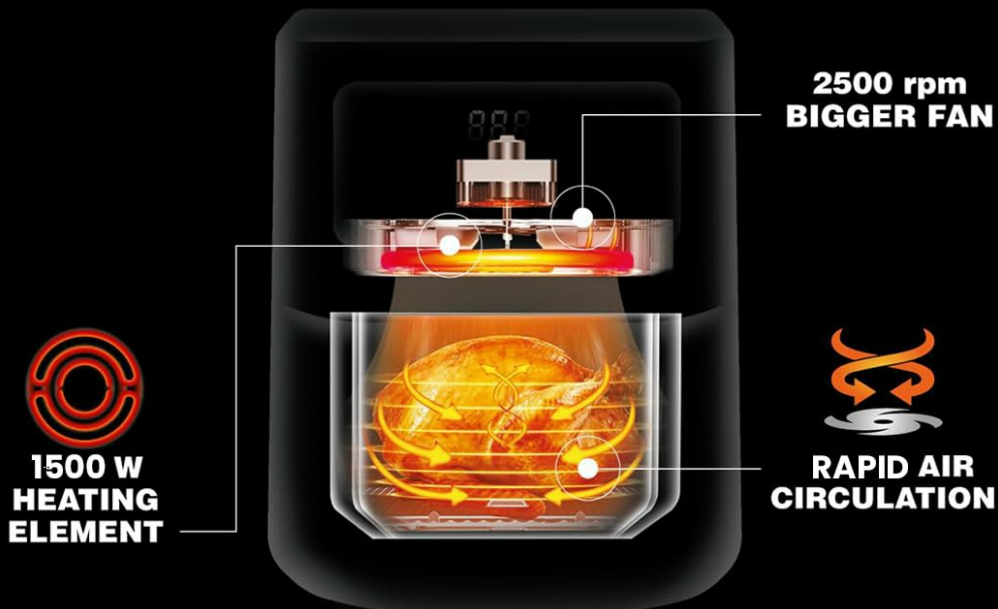

An overhead view into the 4.5-liter capacity cooking pan of the Mellerware Air Fryer, demonstrating its ability to hold a substantial amount of food like chicken pieces, suitable for family meals. The pan features a non-stick coating for easy cleaning.

3. SETUP

Before first use, ensure all packaging materials are removed and the appliance is clean.

1. **Unpack:** Carefully remove the air fryer and all its components from the packaging.
2. **Clean:** Wash the cooking pan and food separator with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before plugging in.

4. OPERATING INSTRUCTIONS

The Mellerware MWAf 04 Air Fryer features a digital touch control panel for easy operation.



A user's hand operating the intuitive digital touch control panel of the Mellerware Air Fryer, which allows for easy selection of cooking modes and adjustments to time and temperature.

Basic Operation:

1. **Prepare Food:** Place your ingredients into the cooking pan. For best results, do not overfill the basket.
2. **Insert Pan:** Slide the cooking pan back into the air fryer unit until it clicks into place.
3. **Power On:** Plug the air fryer into a grounded electrical outlet. The digital display will illuminate.
4. **Select Mode or Adjust Manually:**
 - Using Preset Modes:** The air fryer has 8 pre-set modes. Touch the corresponding icon on the digital panel to select a mode (e.g., Fries, Chicken, Steak). The default time and temperature for that preset will be displayed.
 - Manual Adjustment:** Alternatively, you can manually set the temperature and time using the dedicated temperature and timer controls. Temperature can be adjusted from 80°C to 200°C, and time from 1 to 60 minutes.

5. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
6. **Shake/Flip (Optional):** For even cooking, especially for items like fries or chicken wings, you may need to shake or flip the food halfway through the cooking time. The air fryer features a memory function, allowing you to remove the pan, shake, and reinsert it to continue the cooking cycle without resetting.
7. **Completion:** Once the set time has elapsed, the air fryer will beep, indicating that cooking is complete. Carefully pull out the pan using the handle.
8. **Serve:** Remove the cooked food from the pan. Use heat-resistant tongs or utensils.

Versatile Cooking Options:

Beyond the presets, the MWAF 04 offers 6 versatile cooking functions:

- **Grill:** For achieving grilled textures.
- **Roast:** Ideal for roasting meats and vegetables.
- **Bake:** Suitable for baking cakes, muffins, and other desserts.
- **Fry:** For crispy, oil-free frying.
- **Defrost:** To gently thaw frozen items.
- **Dehydrate:** For making dried fruits or jerky.

An advertisement for the Mellerware Air Fryer. The image shows a black air fryer with a transparent window revealing a glowing orange heating element and food inside. To the right of the fryer is a pile of golden-brown fried food, possibly chicken wings or fries. The background is a blurred kitchen setting. Text on the right side of the image includes the brand name 'MELLERWARE' in large red letters, a description of how air fryers work, temperature and wattage specifications, and the model name 'IN A L S A' above the brand name.

IN A L S A
MELLERWARE

Air fryers work by circulating hot air around a food item to create the same crispiness as traditional fried foods.

Minimum – 80° C
Maximum – 200° C

1500 Watt

mellerware

This image illustrates the Mellerware Air Fryer's versatile 6-in-1 functionality, capable of grilling, roasting, baking, frying, defrosting, and dehydrating various foods, from chicken wings to vegetables.

Rapid Air Circulation Technology:

The air fryer utilizes 360° Rapid Air Circulation Technology, combined with a 1500W heating element and a 2500 rpm fan, to ensure perfectly crispy and evenly cooked results with up to 99% less oil.



An internal diagram of the Mellerware Air Fryer, explaining its 360-degree rapid air circulation technology. This system ensures even browning and thorough cooking by circulating hot air efficiently around the food, powered by a 1500W heating element and a 2500 rpm fan.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Pan and Separator:** The non-stick cooking pan and food separator are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Ensure all food residue is removed.

- 3. **Clean Interior:** Wipe the interior of the air fryer unit with a damp cloth. For stubborn residue, use a mild detergent. Do not use abrasive cleaners or scouring pads.
- 4. **Clean Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth.
- 5. **Storage:** Once clean and dry, store the air fryer in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your Mellerware MWAF 04 Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power outlet malfunction; Pan not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the cooking pan is fully inserted and clicked into place.
Food is not cooked evenly.	Basket overloaded; Food not shaken/flipped.	Do not overload the basket. Cook in smaller batches if necessary. Shake or flip food halfway through cooking.
Food is not crispy.	Insufficient cooking time/temperature; Too much moisture on food.	Increase cooking time or temperature. Pat food dry before cooking. A light coating of oil can help.
White smoke coming from the appliance.	Grease residue from previous use; High fat content food.	Clean the pan and interior thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Appliance smells during first use.	New appliance smell.	This is normal and will dissipate after a few uses. Ensure good ventilation.

7. TECHNICAL SPECIFICATIONS

Model Name	MWAF 04
Capacity	4.5 Litres
Wattage	1500 Watts
Product Dimensions	31.5D x 25.5W x 31.5H Centimeters
Item Weight	2.88 Kilograms

Colour	Black/Golden
Material	Polypropylene (PP), Plastic (Inner)
Control Method	Touch
Special Features	Automatic Shut-Off, Quick Heat Circulation, One Touch Digital Control, Non-stick Coating, Dishwasher Safe Basket
Country of Origin	India

8. WARRANTY AND SUPPORT

Warranty Information:

The Mellerware MWAF 04 Air Fryer comes with a **1 Year Warranty** from the date of purchase. Please retain your purchase receipt for warranty claims.

Customer Support:

For any queries, assistance, or service requests, please contact the manufacturer:

Manufacturer: Tuareg Marketing Pvt. Ltd.

Address: Khasra No- 1189, Bhalswa, New Delhi-110033, India

Contact Number: 9773982065

Please have your model number (MWAF 04) and purchase details ready when contacting support.