

ALLIMITY RC833-GUB1

ALLIMITY RC833-GUB1 Voice Replacement Remote Control User Manual

Model: RC833-GUB1

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your ALLIMITY RC833-GUB1 Voice Replacement Remote Control. Please read this guide carefully to ensure proper use and to maximize the functionality of your remote control.

The RC833-GUB1 is designed as a voice-enabled replacement remote for various TCL 4K OLED LCD HDTV models. For a list of compatible models, please refer to the **Compatibility** section.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating correct AAA battery placement.

2. Pairing the Remote Control

This is a voice-enabled remote control and requires pairing with your TCL TV before full functionality, including voice commands, can be utilized. The pairing process may vary slightly depending on your specific TCL TV model. Generally, follow these steps:

1. Ensure your TCL TV is powered on.
2. Point the remote control towards the TV.
3. Press and hold the **OK** button and the **Home** button (usually a house icon) simultaneously for a few seconds.
4. A pairing message should appear on your TV screen, indicating that the remote is pairing or has successfully paired.
5. If pairing fails, try moving closer to the TV, ensuring no obstructions, and repeat the process. Consult your TV's user manual for specific pairing instructions if needed.

OPERATING INSTRUCTIONS

Once paired, your ALLIMITY RC833-GUB1 remote control provides intuitive control over your TCL TV. Below are the primary functions:





Image: Front view of the remote control, highlighting button layout for operation.

- **Power Button:** Turns the TV on or off.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly select channels or input numbers.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Navigation Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK Button:** Confirms selections or opens menus.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's home screen or smart TV interface.
- **Voice Control Button** (microphone icon): Activates the voice assistant. Press and hold to speak commands.
- **Quick Access Buttons** (Netflix, YouTube, Prime Video, etc.): Provides direct access to popular streaming applications.

Using Voice Control

To use the voice control feature, ensure your remote is successfully paired with your TV. Press and hold the **Voice Control Button** (microphone icon) and speak clearly into the remote. Release the button when you are finished speaking. You can use voice commands to:

- Search for content (e.g., "Find action movies").
- Open applications (e.g., "Open Netflix").
- Control playback (e.g., "Pause," "Play," "Fast forward").
- Change settings (e.g., "Go to settings").

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Exposure:** Keep the remote away from direct sunlight, heat sources, moisture, and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Solution
Remote is not responding.	• Check if the batteries are correctly installed with the correct polarity. • Replace the batteries with new AAA batteries. • Ensure there are no obstructions between the remote and the TV's IR receiver. • Re-pair the remote control with the TV (refer to the Pairing the Remote Control section).
Voice control is not working.	• Ensure the remote is successfully paired with your TV. Voice functionality requires pairing. • Check your TV's network connection, as voice commands often rely on internet services. • Speak clearly and hold the remote closer to your mouth when pressing the voice control button. • Restart your TV and try pairing the remote again.
Buttons are sticky or unresponsive.	• Clean the remote control surface with a dry, soft cloth. Avoid liquids. • This may indicate internal damage or wear; consider replacing the remote if cleaning does not resolve the issue.

SPECIFICATIONS

Feature	Detail
Model Number	RC833-GUB1
Brand	ALLIMITY
Dimensions	6 x 2 x 0.6 inches (approximately 15.2 x 5.1 x 1.5 cm)

Feature	Detail
Item Weight	2 ounces (approximately 56.7 grams)
Batteries Required	2 x AAA batteries
Special Feature	Voice Search
Compatible Devices	Television (specifically TCL 4K OLED LCD HDTV models)
Max Number of Supported Devices	18 (Refers to the number of compatible TV models)



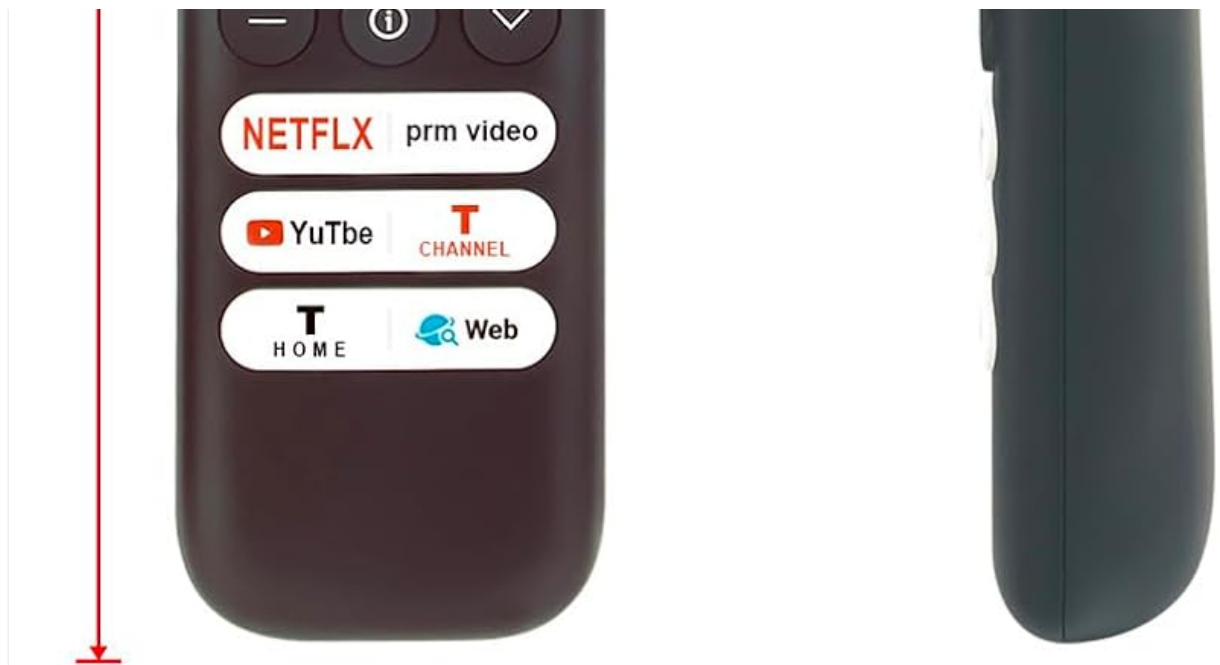


Image: Remote control with approximate dimensions for reference.

COMPATIBILITY

The ALLIMITY RC833-GUB1 Voice Replacement Remote Control is compatible with the following TCL 4K OLED LCD HDTV models:

85C845
98X955
98P745
98C809
75C809
65C809
98C655
85C655
43C655
98P755
75P755
65P755
55P755
50P755
43P755
85P655
75P655
65P655
58P655
55P655
50P655
43P655
98C805
85C805

75C805

65C805

55C805

50C805

65C845

85C645

43C645

55C645

65C645

75C655

65C655

55C655

50C655