

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Eureka](#) /

› [EUREKA GX5 Pro-RB Roller Brush for Wet & Dry Vacuum Cleaners User Manual](#)

## Eureka GX5 Pro-RB

# EUREKA GX5 Pro-RB Roller Brush User Manual

Accessory for EUREKA NEW430 and NEW400 Wet & Dry Vacuum Cleaners

## 1. INTRODUCTION

---

This manual provides essential instructions for the installation, operation, and maintenance of your EUREKA GX5 Pro-RB roller brush. This accessory is designed to enhance the cleaning performance of compatible EUREKA wet & dry vacuum cleaners.

## 2. COMPATIBILITY

---

The EUREKA GX5 Pro-RB roller brush is specifically designed for use with the following EUREKA wet & dry vacuum cleaner models:

- EUREKA NEW430
- EUREKA NEW400

Ensure your vacuum cleaner model matches one of the listed compatible models before installation.

## 3. PACKAGE CONTENTS

---

Your package should contain the following item:

- 1 x EUREKA GX5 Pro-RB Roller Brush

## 4. INSTALLATION INSTRUCTIONS

---

The roller brush is designed for quick and easy installation. Follow these steps to replace or install the roller brush:

1. **Power Off:** Before attempting any installation or replacement, ensure your EUREKA wet & dry vacuum cleaner is turned off and unplugged from the power outlet to prevent accidental operation.
2. **Access Brush Compartment:** Refer to your vacuum cleaner's main instruction manual for specific details on how to open the roller brush compartment. This usually involves releasing a latch or cover on the underside of the cleaning head.
3. **Remove Old Brush (if applicable):** Carefully remove the existing roller brush from its housing. Note its orientation for correct installation of the new brush.

4. **Insert New Brush:** Align the EUREKA GX5 Pro-RB roller brush with the brush housing. Ensure the ends of the brush fit securely into their designated slots or bearings.
5. **Secure Compartment:** Close the roller brush compartment cover until it clicks securely into place.
6. **Test:** Plug in your vacuum cleaner and perform a brief test to ensure the roller brush rotates freely and correctly.



*Image: The EUREKA GX5 Pro-RB roller brush, showing its design for wet and dry vacuum cleaners. This image illustrates the accessory that needs to be installed.*

## 5. OPERATION AND PERFORMANCE

---

The EUREKA GX5 Pro-RB roller brush is engineered to provide thorough cleaning of hard floors. Its design effectively picks up dirt, dust, and debris, contributing to an enhanced cleaning experience with your compatible EUREKA wet & dry vacuum cleaner.

For optimal performance, ensure the roller brush is free from obstructions and rotates smoothly during operation. Refer to your vacuum cleaner's main manual for specific operating instructions.

## 6. MAINTENANCE AND REPLACEMENT

---

Regular maintenance of your roller brush is crucial for maintaining optimal cleaning performance and extending

the life of your vacuum cleaner. The EUREKA GX5 Pro-RB roller brush is made from high-quality, durable materials designed for regular use.

- **Regular Cleaning:** Periodically inspect the roller brush for tangled hair, threads, or debris. Carefully remove any obstructions to ensure smooth rotation and effective cleaning.
- **Recommended Replacement:** For best cleaning results and to maintain the efficiency of your EUREKA vacuum cleaner, it is highly recommended to replace the roller brush every **6 months** under normal use conditions.
- **Replacement Procedure:** Follow the installation instructions provided in Section 4 to replace the roller brush.

## 7. TROUBLESHOOTING

---

If you experience issues with your EUREKA GX5 Pro-RB roller brush, consider the following:

- **Brush Not Rotating:** Ensure the brush is correctly installed and free from any obstructions (hair, debris). Check if the vacuum cleaner's brush motor is functioning correctly (refer to your vacuum's main manual).
- **Reduced Cleaning Performance:** The roller brush may be worn out. Consider replacing it if it has been in use for more than 6 months or shows visible signs of wear.
- **Unusual Noises:** Turn off and unplug the vacuum. Inspect the brush and its housing for any foreign objects or damage.

For further assistance, please contact EUREKA customer support.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	GX5 Pro-RB
Product Dimensions	3.62 x 7.24 x 11.65 inches
Item Weight	5.3 ounces
Manufacturer	EUREKA
Material	High-quality durable materials
Compatibility	EUREKA NEW430, EUREKA NEW400 Wet & Dry Vacuum Cleaners

## 9. WARRANTY AND SUPPORT

---

For information regarding warranty coverage, please refer to the documentation provided with your original EUREKA wet & dry vacuum cleaner or visit the official EUREKA website. As an accessory, its warranty may be tied to the main unit or have a separate limited warranty.

For technical support, replacement parts, or any inquiries, please contact EUREKA customer service through their official channels. You can often find contact information on the EUREKA website or in your vacuum cleaner's main manual.

**Online Resources:** [Visit the Eureka Store on Amazon](#)

