

WDZP KM7 Plus

User Manual for WDZP Voice Remote Control

Model: KM7 Plus

INTRODUCTION

This user manual provides comprehensive instructions for the WDZP Voice Remote Control, designed for seamless compatibility with Android TV Box 11.0 and MECOOL KM7 Plus Smart TV Box 4K HDR. This guide covers everything from initial setup and pairing to advanced operation, maintenance, and troubleshooting, ensuring you get the most out of your new remote control.

PRODUCT OVERVIEW

The WDZP Voice Remote Control is a lightweight and durable replacement remote, offering enhanced functionality including voice search and dedicated streaming service buttons. Its ergonomic design ensures comfortable handling.





Figure 1: Front and back view of the WDZP Voice Remote Control.

Compatibility

**for Android TV Box 11.0, MECOOL KM7 Plus Smart TV Box 4K HDR
2GB 16GB Support 2.4G/5.0G/BT 5.0/AV1 Google TV Remote
Streaming Media Player**



Figure 2: The remote control demonstrating compatibility with an Android TV Box interface.

SETUP

1. Battery Installation

The remote control requires two (2) 1.5V AAA batteries (not included). Ensure correct polarity when inserting the batteries.

Install 2 AAA Batteries

(Batteries NOT Included)



Figure 3: Guide for installing AAA batteries into the remote control.

2. Pairing Instructions

For full functionality, especially voice control, the remote must be paired with your Android TV Box or MECOOL KM7 Plus Smart TV Box. Follow these steps:

1. **Step 1:** Open the package and visually inspect the remote control to ensure it is complete and undamaged.
2. **Step 2:** Install the required AAA batteries (additional purchase required).
3. **Step 3:** Simultaneously press and hold the **'Home'** button and the **'Return'** button for more than 5 seconds. The remote's indicator light may flash to confirm pairing mode.
4. **Step 4:** If pairing is not successful, repeat the process. Generally, the match should be successful on the first attempt. If issues persist, contact WDZP customer support for assistance.

VOICE REMOTE PAIRING GUIDE

THE NEW REMOTE NEEDS TO BE PAIRED, OTHERWISE SOME BUTTONS WON'T WORK



Figure 4: Step-by-step visual guide for voice remote pairing.

OPERATING INSTRUCTIONS

Basic Functions

- **Power Button:** Turns the connected TV Box on or off.
- **Navigation Pad (Circular):** Use the directional arrows (Up, Down, Left, Right) to navigate menus and select items. The center button acts as "OK" or "Enter".
- **Volume Buttons (+/-):** Adjust the volume level.
- **Mute Button:** Mutes or unmutes the audio.
- **Home Button:** Returns to the main home screen of your TV Box.
- **Return Button:** Goes back to the previous screen or menu.
- **App Drawer Button:** Opens the list of installed applications.

Voice Search Functionality

The sensitive voice function allows for convenient control and content search. Press the dedicated Voice Assistant button (often depicted as a microphone or Google Assistant logo) and speak your command or search query clearly

into the remote.

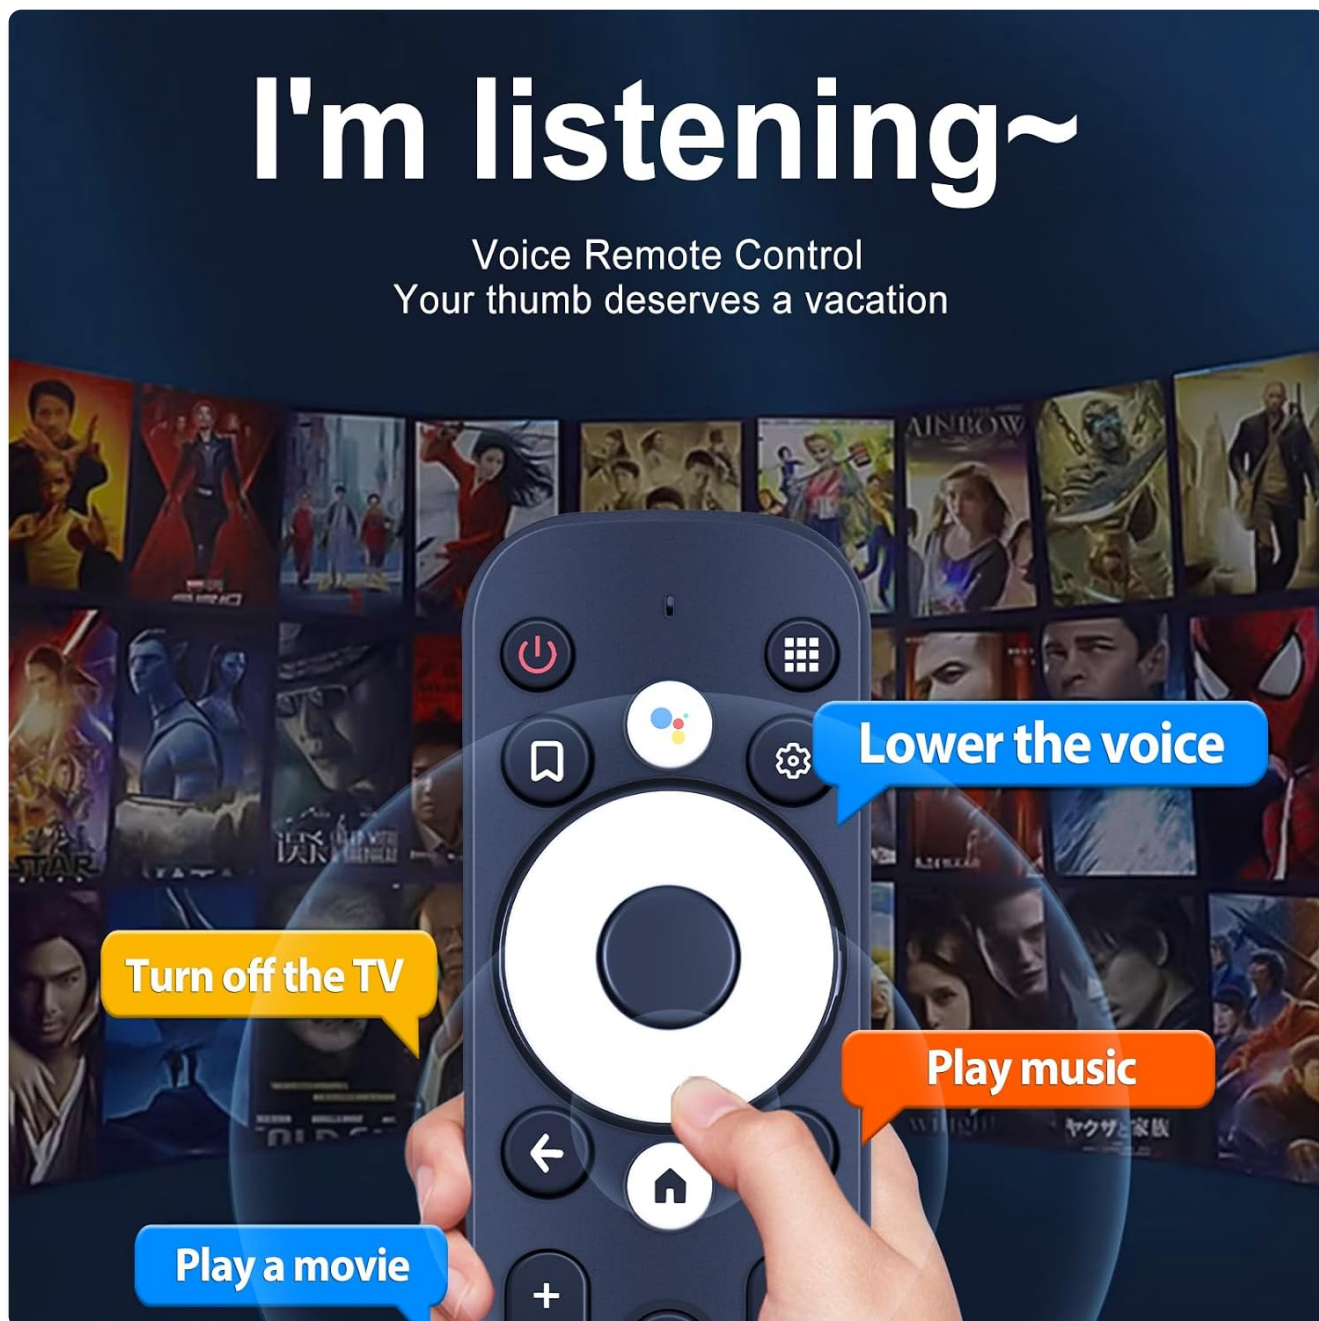


Figure 5: Demonstrating the voice search feature and example commands.

Dedicated App Buttons

The remote features quick access buttons for popular streaming services:

- **YouTube:** Launches the YouTube application.
- **Netflix:** Launches the Netflix application.
- **Prime Video:** Launches the Amazon Prime Video application.
- **Google Play:** Launches the Google Play Store or Google Play Movies & TV.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of old batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if batteries are installed correctly and have sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote and the TV Box.
 - Re-pair the remote control following the "Pairing Instructions" in the Setup section.
- **Voice search not working:**
 - Ensure the remote is properly paired with your TV Box.
 - Check your TV Box's settings to ensure voice input is enabled.
 - Speak clearly and directly into the remote's microphone.
- **Specific buttons not working:**
 - Some buttons (e.g., dedicated app buttons) may require an active internet connection or specific app installation on your TV Box.
 - If only a few buttons are unresponsive, try re-pairing the remote.

SPECIFICATIONS

Feature	Detail
Model Number	KM7 Plus
Compatibility	Android TV Box 11.0, MECOOL KM7 Plus Smart TV Box 4K HDR
Connectivity	2.4G/5.0G/BT 5.0/AV1 (Wireless)
Power Source	2 x 1.5V AAA Batteries (not included)
Material	High-quality ABS
Item Weight	2.11 ounces (approx. 0.10 kg)
Dimensions (L x W x H)	5.86 x 1.77 x 0.70 inches (approx. 6.34 x 2.28 x 0.71 inches package dimensions)
Control Distance	Up to 40 feet
Control Angle	180 degrees
Reaction Rate	38 kHz+
Special Features	Voice Search, Ergonomic Design, Durable, Shockproof, Lightweight, Low Power Design, Eco-Friendly Material, Advanced IR3.0 Technology



Figure 6: Physical dimensions of the remote control.

Advanced Remote Control



Figure 7: Features of the remote control's material and performance metrics.

UPGRADE CHIP

Advanced IR3.0 Technology

Our remote control chip



Other remote control chip



TRANSFER SPEED
INCREASED

50%

Figure 8: Illustration of the remote control's upgraded chip technology.

WARRANTY AND SUPPORT

WDZP offers a **6-MONTH warranty** for this product. If you encounter any quality problems or if the remote does not match your equipment as expected, please do not hesitate to contact WDZP customer support for assistance. We provide free exchange or refund options within the warranty period.

For support, please refer to the contact information provided with your purchase or visit the official WDZP store on Amazon: [WDZP Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question