

## Ceybo BN59-01455A

# Ceybo BN59-01455A Solar Voice Remote Control User Manual

Model: BN59-01455A

## PRODUCT OVERVIEW

The Ceybo BN59-01455A is a solar voice remote control designed for seamless operation of various Samsung Smart TV models, including NEO QLED, Crystal UHD, OLED, S95C, LS03D, Q60, Q70, Q80, QN85, and QN90 series. This remote features a minimalist design with essential buttons for navigation, volume, channel control, and direct access to popular streaming services. Its voice control capability enhances user convenience, allowing for hands-free command execution.



Figure 1: Front and back view of the Ceybo BN59-01455A Solar Voice Remote Control, highlighting its sleek design and solar panel on the rear.



## Voice Functionality

Simply press the Microphone button and give a command like "Open Netflix"

## Easy to Pair

Just press the back button and the play pause button a few seconds to begin pairing

## Convenient Shortcut Buttons

Quick access to apps like Netflix Prime Video and Samsung Internet

Figure 2: The remote control is compatible with a wide range of Samsung Smart TVs, including LED, OLED, QLED, UHD, and Neo QLED models.

## SETUP

The BN59-01455A remote control is designed for easy pairing with your Samsung Smart TV. Follow these steps to set up your remote:

1. **Initial Power-Up:** Ensure your Samsung Smart TV is powered on.
2. **Pairing Process:** Point the remote control towards your TV. Simultaneously press and hold the **"Return"** button (curved arrow) and the **"Play/Pause"** button for a few seconds. The TV screen should display a pairing message, indicating successful connection.
3. **Troubleshooting Pairing:** If pairing fails, ensure there are no obstructions between the remote and the TV's IR sensor. Some TV models, especially those with decorative frames, might have their IR sensor partially blocked. Temporarily removing such obstructions might be necessary for initial pairing.



Figure 3: Key features of the remote, including the "Easy to Pair" function by holding the Return and Play/Pause buttons.

## OPERATING INSTRUCTIONS

The remote control offers intuitive navigation and quick access to your TV's features and streaming content.

### Basic Navigation

- **Directional Pad:** Use the circular directional pad to navigate menus and select items.
- **Select Button:** Press the center button of the directional pad to confirm selections.
- **Return Button:** The curved arrow button allows you to go back to the previous screen or menu.
- **Home Button:** The house icon button takes you directly to the Smart Hub or home screen of your TV.
- **Play/Pause, Fast Forward, Rewind:** Standard media control buttons for content playback.
- **Volume Control:** Use the "+" and "-" buttons to adjust the volume. Press the volume button to mute/unmute.
- **Channel Control:** Use the "Up" and "Down" arrows to change channels.



## Voice Control Functionality

This remote features integrated voice control for enhanced convenience.

- **Activating Voice Control:** Press and hold the **Microphone** button (microphone icon) located near the top of the remote.
- **Issuing Commands:** While holding the Microphone button, speak your command clearly. For example, you can say "Open Netflix," "Search for action movies," or "Change to Channel 5."
- **Voice Search:** Utilize voice commands to search for content on streaming platforms or within your TV's applications.



Figure 4: The remote supports voice commands for effortless TV navigation and content search.

## Quick Access Buttons

Dedicated buttons provide instant access to popular streaming services:

- **Netflix Button:** Directly launches the Netflix application.

- **Prime Video Button:** Directly launches the Amazon Prime Video application.
- **Samsung TV Plus Button:** Directly launches the Samsung TV Plus application.
- **Disney+ Button:** Directly launches the Disney+ application.



Figure 5: The remote features dedicated shortcut buttons for quick access to popular streaming applications.

## MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

### Cleaning

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn smudges, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.



## Charging (Solar and USB-C)

The BN59-01455A remote control is equipped with a solar panel for convenient recharging and also supports USB-C charging.

- **Solar Charging:** Place the remote control with its solar panel facing a light source (natural or artificial) to recharge the internal battery. Regular exposure to light will help maintain battery levels.
- **USB-C Charging:** For faster charging or when light is insufficient, connect a standard USB-C cable to the charging port on the remote.



Figure 6: The remote features a solar panel on its rear for eco-friendly charging.

## TROUBLESHOOTING

If you encounter issues with your Ceybo BN59-01455A remote control, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding	Low battery or not paired.	Ensure the remote is charged (via solar or USB-C). Re-pair the remote by holding the "Return" and "Play/Pause" buttons simultaneously.
Voice control not working	Microphone button not held down or TV settings.	Ensure you are holding the Microphone button while speaking. Check your TV's sound or voice assistant settings.
Buttons unresponsive	Dirt or debris under buttons.	Clean the remote's surface and around the buttons. If persistent, contact support.
Intermittent connection	Interference or distance.	Reduce distance to TV. Remove potential sources of interference (other electronic devices).

## SPECIFICATIONS

- **Model Number:** BN59-01455A
- **Brand:** Ceybo
- **Compatible Devices:** Samsung Smart Televisions (NEO QLED, Crystal UHD, OLED, S95C, LS03D, Q60, Q70, Q80, QN85, QN90 series)
- **Connectivity Technology:** Infrared (for initial pairing), Bluetooth (for operation)
- **Controller Type:** Voice Control
- **Number of Buttons:** 6 (main functional buttons, excluding directional pad and volume/channel rockers)
- **Power Source:** Internal rechargeable battery (Solar and USB-C charging)
- **Item Weight:** 1.44 ounces (approx. 40.8 grams)
- **Package Dimensions:** 5.63 x 2.13 x 0.55 inches (approx. 14.3 x 5.4 x 1.4 cm)

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Ceybo website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Protection plans are available for extended coverage:

- **2-Year Protection Plan:** Available for purchase.
- **3-Year Protection Plan:** Available for purchase.
- **Complete Protect:** A monthly plan covering eligible past and future purchases.

*Note: Specific terms and conditions for protection plans apply. Please review the plan details before purchase.*