

Uciefy V19

Uciefy V19 Wireless Mouse User Manual

Model: V19

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Package Contents](#) [Product](#)
[Charging](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Uciefy V19 Wireless Mouse. This manual provides detailed instructions for setting up, operating, and maintaining your new wireless mouse. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.



Image: The Uciefy V19 Wireless Mouse, highlighting its unique mecha-style design and LED lighting.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x V19 Wireless Mouse
- 1 x USB Receiver
- 1 x Type-C Adapter
- 1 x Type-C Charging Cable
- 1 x User Manual (this document)

Your browser does not support the video tag.

Video: An unboxing demonstration of the Uciefy V19 Wireless Mouse, showing all included components.

3. PRODUCT OVERVIEW

The Uciefy V19 Wireless Mouse features a mecha-style design with cool LED lights and convenient storage for its components. It is designed for comfortable use and efficient performance.

Key Features:

- **Mecha-Style Design:** Classical color scheme with LED lighting and magnetic, detachable parts for the cover and nano receiver.
- **Battery Indicator:** LED indicator to monitor battery status and remind you when to charge.
- **Convenient Storage:** Detachable magnetic case for secure storage of the USB receiver inside the mouse.
- **2.4GHz Wireless:** Reliable 2.4GHz wireless transmission optical technology.
- **Rechargeable:** Built-in rechargeable battery with Type-C charging.
- **Adjustable DPI:** Three adjustable DPI settings (1000, 1200, 1600) for precise control.
- **Multi-Type USB Connectivity:** Includes a USB receiver and a Type-C adapter for broad compatibility.

Ergonomic Design

Comfortable Fit for Hand



Image: The ergonomic design of the Uciefy V19 Wireless Mouse, illustrating a comfortable fit for the hand.

4. GETTING STARTED (SETUP)

Follow these steps to connect your Uciefy V19 Wireless Mouse to your computer:

1. **Retrieve the USB Receiver:** The USB receiver is stored magnetically inside the mouse. Gently remove the magnetic top cover of the mouse to access and retrieve the USB receiver.
2. **Connect to your Device:**
 - **For USB-A Port:** Plug the USB receiver directly into an available USB-A port on your computer.
 - **For USB-C Port:** First, plug the included Type-C adapter into your computer's USB-C port. Then, plug the USB receiver into the Type-C adapter.
3. **Power On:** Locate the ON/OFF switch on the bottom of the mouse and slide it to the "ON" position.
4. **Automatic Connection:** The mouse will automatically connect to your device. No additional drivers are typically required.



Image: Step-by-step guide on connecting the mouse using both USB-A and USB-C ports.

Your browser does not support the video tag.

Video: A demonstration of connecting the Uciefy V19 Wireless Mouse via its USB-C port connection.

Your browser does not support the video tag.

Video: A quick guide on how to easily use the Uciefy Wireless Mouse after connection.

5. OPERATING INSTRUCTIONS

DPI Adjustment:

The Uciefy V19 mouse offers three adjustable DPI (Dots Per Inch) settings to suit your preference for cursor speed and precision. To change the DPI:

- Press the button located behind the scroll wheel.
- Each press cycles through the DPI settings: 1000 DPI, 1200 DPI, and 1600 DPI.
- Select the DPI that best fits your task, whether it's precise graphic design or fast-paced browsing.

3 Adjustable DPI



Image: Visual representation of the three adjustable DPI settings and the button to change them.

Magnetic Cover and USB Receiver Storage:

The mouse features a detachable magnetic top cover. This design allows for convenient storage of the USB receiver directly inside the mouse when not in use, preventing loss and making it portable.

Magnetic Design

Storage of mini usb receiver

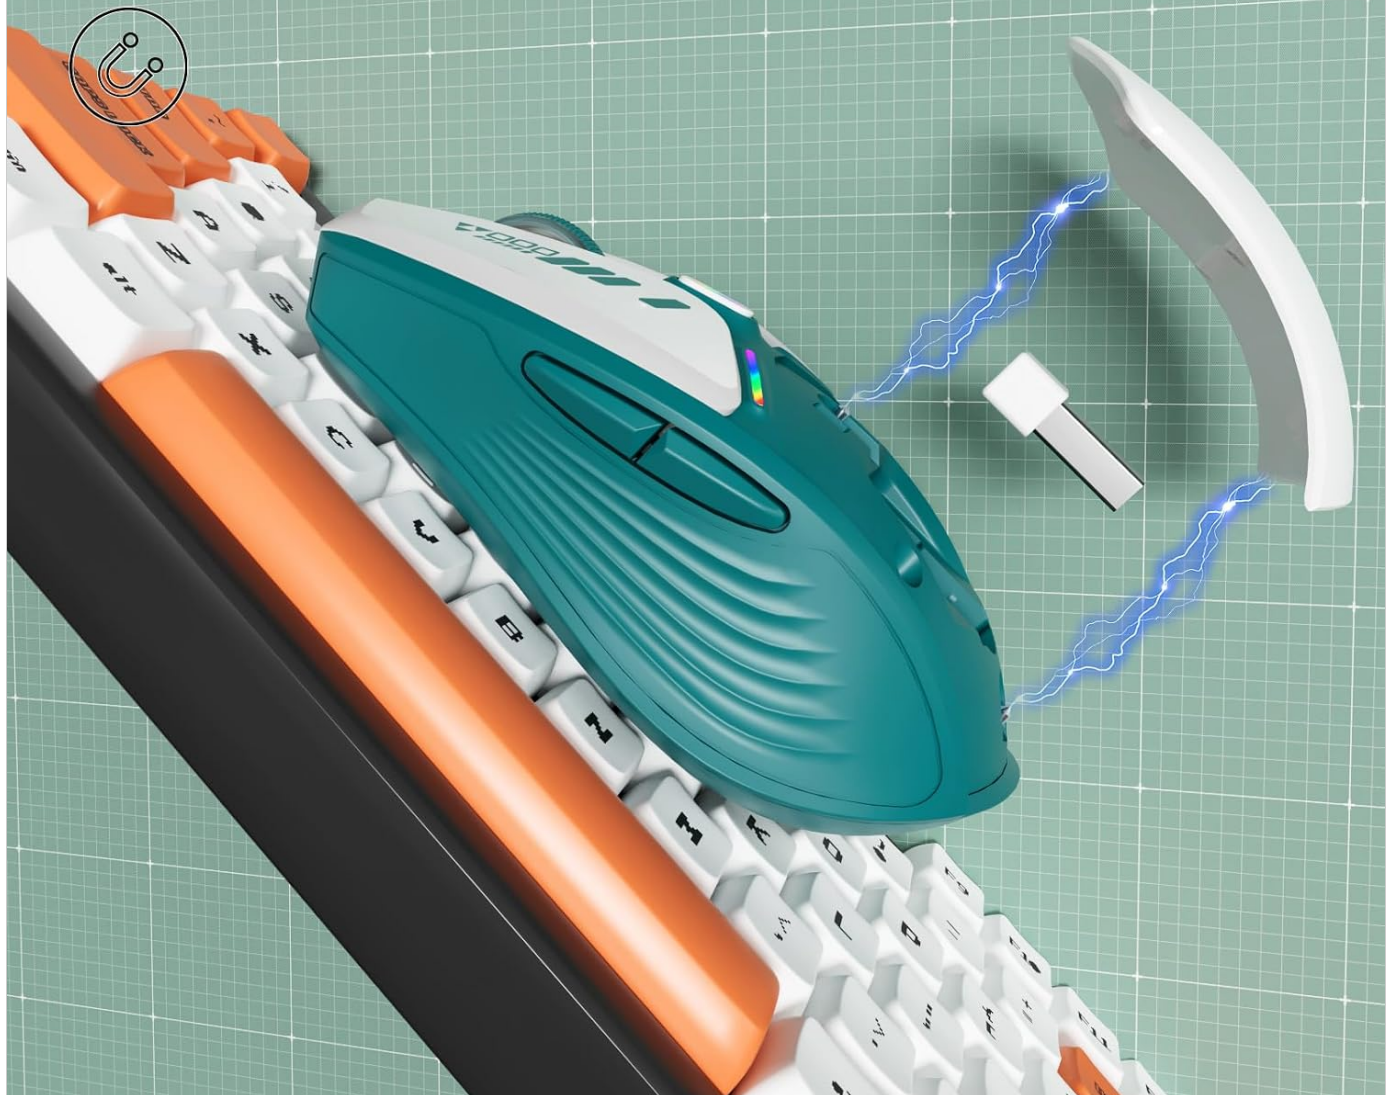


Image: The magnetic design of the mouse, illustrating how the USB receiver is stored securely inside.

6. CHARGING THE MOUSE

The Uciefy V19 Wireless Mouse is equipped with a built-in rechargeable battery. To charge your mouse:

- Connect the provided Type-C charging cable to the Type-C port on the front of the mouse.
- Plug the other end of the cable into a USB power source (e.g., computer USB port, USB wall adapter).
- A blue charging indicator light (located at the front near the scroll wheel) will illuminate, indicating that the mouse is charging.
- The mouse also features a battery indicator on its underside to show the current power level, helping you know when a charge is needed.

Type C Rechargeable Mouse



Charging Indicator



Image: The Uciefy V19 Wireless Mouse being charged via its Type-C port, with the charging indicator visible.

Battery Indicator



Image: The bottom of the mouse, highlighting the battery indicator lights.

7. MAINTENANCE

To ensure the longevity and optimal performance of your Uciefy V19 Wireless Mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, especially during travel, store the USB receiver inside the mouse's magnetic compartment to prevent loss.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the mouse when the battery indicator shows low power.
- **Environment:** Keep the mouse away from extreme temperatures, direct sunlight, and high humidity.

8. TROUBLESHOOTING

If you encounter issues with your Uciefy V19 Wireless Mouse, please refer to the following common problems and solutions:

Problem	Solution
Mouse not responding	Ensure the mouse is turned ON. Check if the USB receiver is securely plugged into the computer's port. Try plugging the USB receiver into a different USB port. Ensure the mouse battery is charged.
Cursor movement is erratic or slow	Clean the optical sensor on the bottom of the mouse. Ensure you are using the mouse on a suitable surface (non-reflective, opaque). Adjust the DPI setting to a higher value if needed. Check for interference from other wireless devices.
Mouse not charging	Ensure the Type-C charging cable is properly connected to both the mouse and the power source. Try a different Type-C cable or USB power source. Verify the charging indicator light illuminates.
Mouse frequently disconnects	Ensure the mouse is within the effective range of the USB receiver (typically up to 10 meters). Minimize obstacles between the mouse and the receiver. Check for strong wireless interference.

9. SPECIFICATIONS

Feature	Detail
Brand	Uciefy
Model	V19
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Movement Detection Technology	Optical
DPI Settings	1000, 1200, 1600 (Adjustable)
Buttons	6
Hand Orientation	Ambidextrous
Power Source	Rechargeable Battery (1 included)
Charging Port	Type-C
Compatible Devices	Computers, Laptops, iPads
Operating System Compatibility	Windows, macOS, Linux
Item Weight	76 g

Feature	Detail
Special Features	LED Lights, Portable, Rechargeable, Side Buttons, Wireless, Magnetic Storage

10. WARRANTY AND SUPPORT

Warranty Information:

The Uciefy V19 Wireless Mouse comes with a standard manufacturer's warranty. Please refer to the product packaging or the official Uciefy website for specific warranty terms and conditions, including duration and coverage details.

Customer Support:

For any technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Uciefy customer support through the following channels:

- **Email:** Refer to the contact information provided on the product packaging or the official Uciefy website.
- **Website:** Visit the official Uciefy website for FAQs, support resources, and contact forms.

Please have your product model (V19) and purchase details ready when contacting support.

© 2026 Uciefy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

