

Garwarm SF20250923B0D5QC3PS7

Garwarm 18-inch Caged Ceiling Fan with Light User Manual

Model: SF20250923B0D5QC3PS7

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.


- Always disconnect power at the main circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code. If you are unfamiliar with electrical wiring, consult a qualified electrician.
- Ensure the installation site can support the weight of the fan.
- Do not insert objects into the fan blades while the fan is operating.
- Use only E26 base bulbs, maximum 60W each. Do not exceed the recommended wattage.
- This product is designed for indoor use only.

2. PRODUCT OVERVIEW

The Garwarm 18-inch Caged Ceiling Fan with Light combines a rustic wood design with modern functionality. It features a bladeless fan for safety and a compact profile, making it suitable for various indoor spaces. The fan includes 6 speed settings, a timing function, and can be controlled via remote or a mobile application.



Image: The Garwarm 18-inch Caged Ceiling Fan with Light, showcasing its rustic wood design and integrated lighting. The image also displays the remote control and app interface.

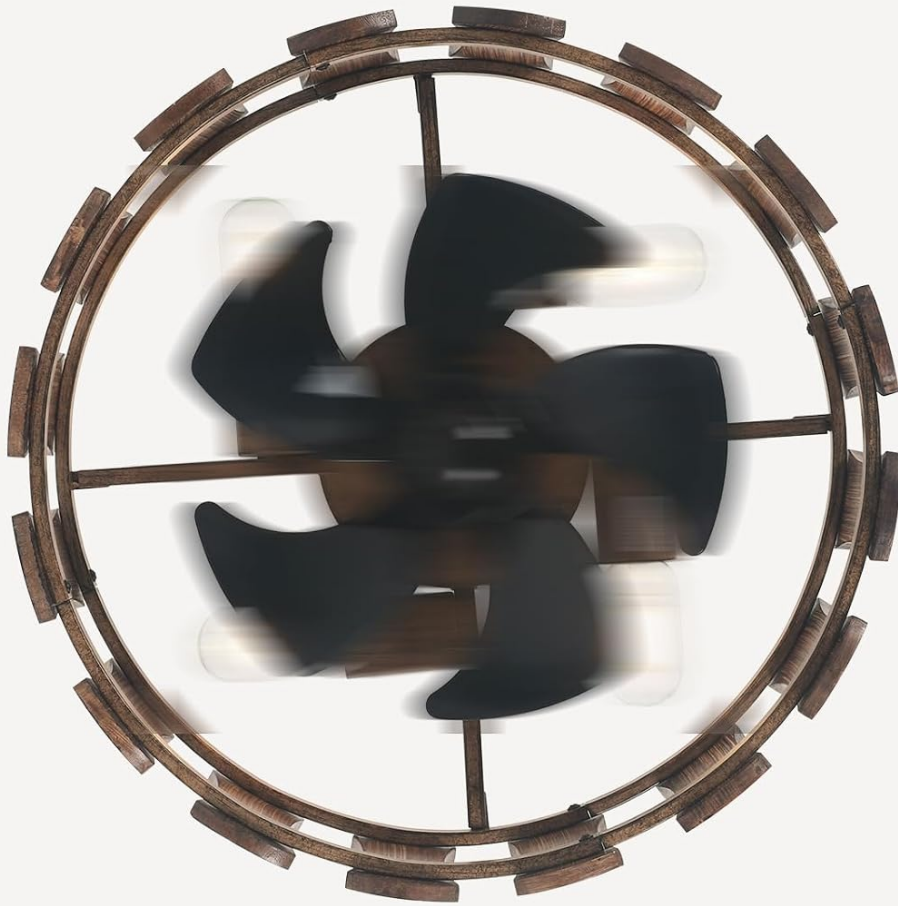

6 Wind Speeds



Timing Function



Remote/App control



Low Noise



Easy to install



Save energy

Image: Icons representing key features: 6 Wind Speeds, Timing Function, Remote/App Control, Low Noise, Easy to Install, and Energy Saving.

 
3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

- Caged Ceiling Fan Unit
- Remote Control
- Remote Control Holder
- Mounting Hardware
- Instruction Manual
- Two Extension Rods (10 cm / 3.9 inches and 30 cm / 11.8 inches)

Note: Four E26 base bulbs (Max 60W each) are **NOT** included and must be purchased separately.

Wood Ceiling Fan with Lights

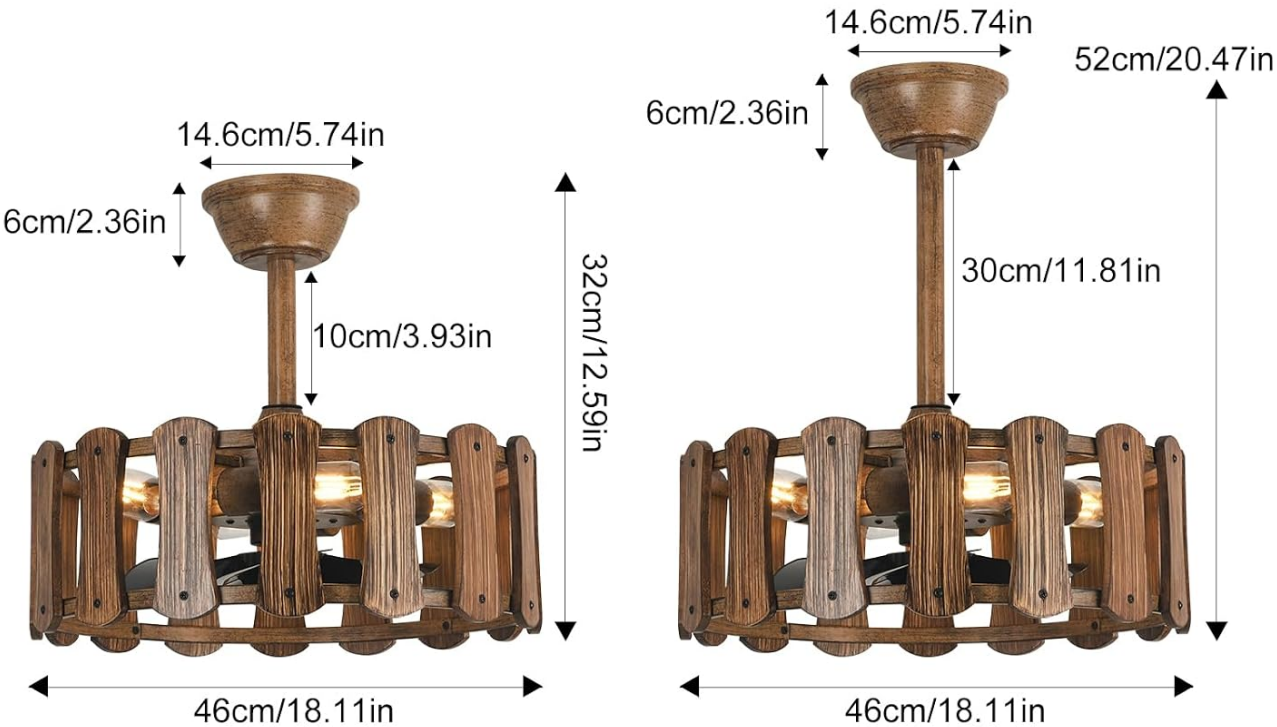

E26*4(Not included)
Recommended Bulbs:(MAX 60W)



Image: Diagram illustrating the dimensions of the ceiling fan and canopy, the two included extension rods, and examples of compatible E26 bulbs (not included).

4. SPECIFICATIONS

Feature	Specification
Brand	Garwarm
Model Number	SF20250923B0D5QC3PS7
Diameter	18 inches (46 cm)
Height (with 10cm rod)	8.66 inches (22 cm)
Canopy Diameter	5.74 inches (14.6 cm)
Canopy Height	2.36 inches (6 cm)

Extension Rods	10 cm (3.9 in) and 30 cm (11.8 in)
Bulb Base	E26 (4 bulbs required, Max 60W each, not included)
Material	Iron, Wood
Control Method	Remote Control, Mobile App
Fan Speeds	6
Timer Function	1 Hour, 2 Hours, 4 Hours
Motor Type	DC, Reversible
Noise Level	<30dB
Voltage	110 Volts (AC)
Usage	Indoor use only
Assembly	Required

5. INSTALLATION GUIDE

Professional installation is recommended. Ensure power is disconnected at the circuit breaker before proceeding.

5.1 Mounting the Remote Control Holder



Image: Four-step visual guide for installing the remote control holder to a wall using screws and then placing the remote into the holder.

1. Select a suitable location on a wall for the remote control holder.
2. Use a drill to create pilot holes for the mounting screws.
3. Secure the remote control holder to the wall using the provided screws.
4. Place the remote control into the installed holder.

5.2 Fan Assembly and Wiring

Refer to the detailed instructions included in the package for specific assembly and wiring steps. This typically involves:

- Attaching the chosen extension rod to the motor housing.
- Securing the canopy to the downrod.
- Mounting the ceiling bracket to the junction box.

- Making electrical connections (Live, Neutral, Ground) according to the wiring diagram.
- Attaching the fan assembly to the ceiling bracket.
- Installing the four E26 bulbs (not included).

6. OPERATING INSTRUCTIONS

Your Garwarm ceiling fan can be operated using the included remote control or a compatible mobile application.

6.1 Remote Control Functions

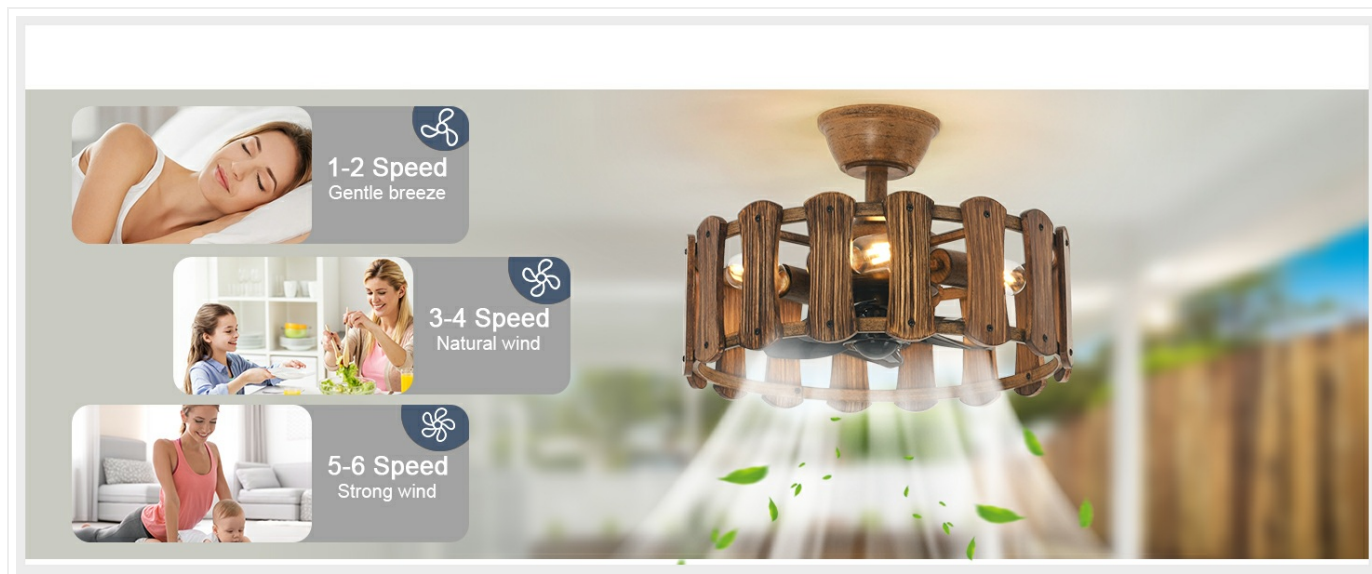


Image: The remote control with labels for its various buttons, including fan on/off, light on/off, fan speed settings (1-6), forward/reverse rotation, and timer functions (1H, 2H, 4H).

- **ALL OFF:** Turns off both the fan and light.
- **LIGHT ON/OFF:** Toggles the light on or off.
- **FAN ON/OFF:** Toggles the fan on or off.
- **1/2/3/4/5/6:** Adjusts the fan speed from 1 (lowest) to 6 (highest).
- **F (Forward Rotating):** Sets the fan to downdraft mode for cooling (Summer Mode).
- **R (Reversal Reverse):** Sets the fan to updraft mode for air circulation (Winter Mode).
- **1H/2H/4H:** Activates the timer function, turning the fan off after 1, 2, or 4 hours respectively.
- **Mute Beep:** Pressing a specific button (refer to remote diagram) can eliminate the beeping sound.

6.2 Fan Modes (Forward & Reverse)

Airflow Circulation

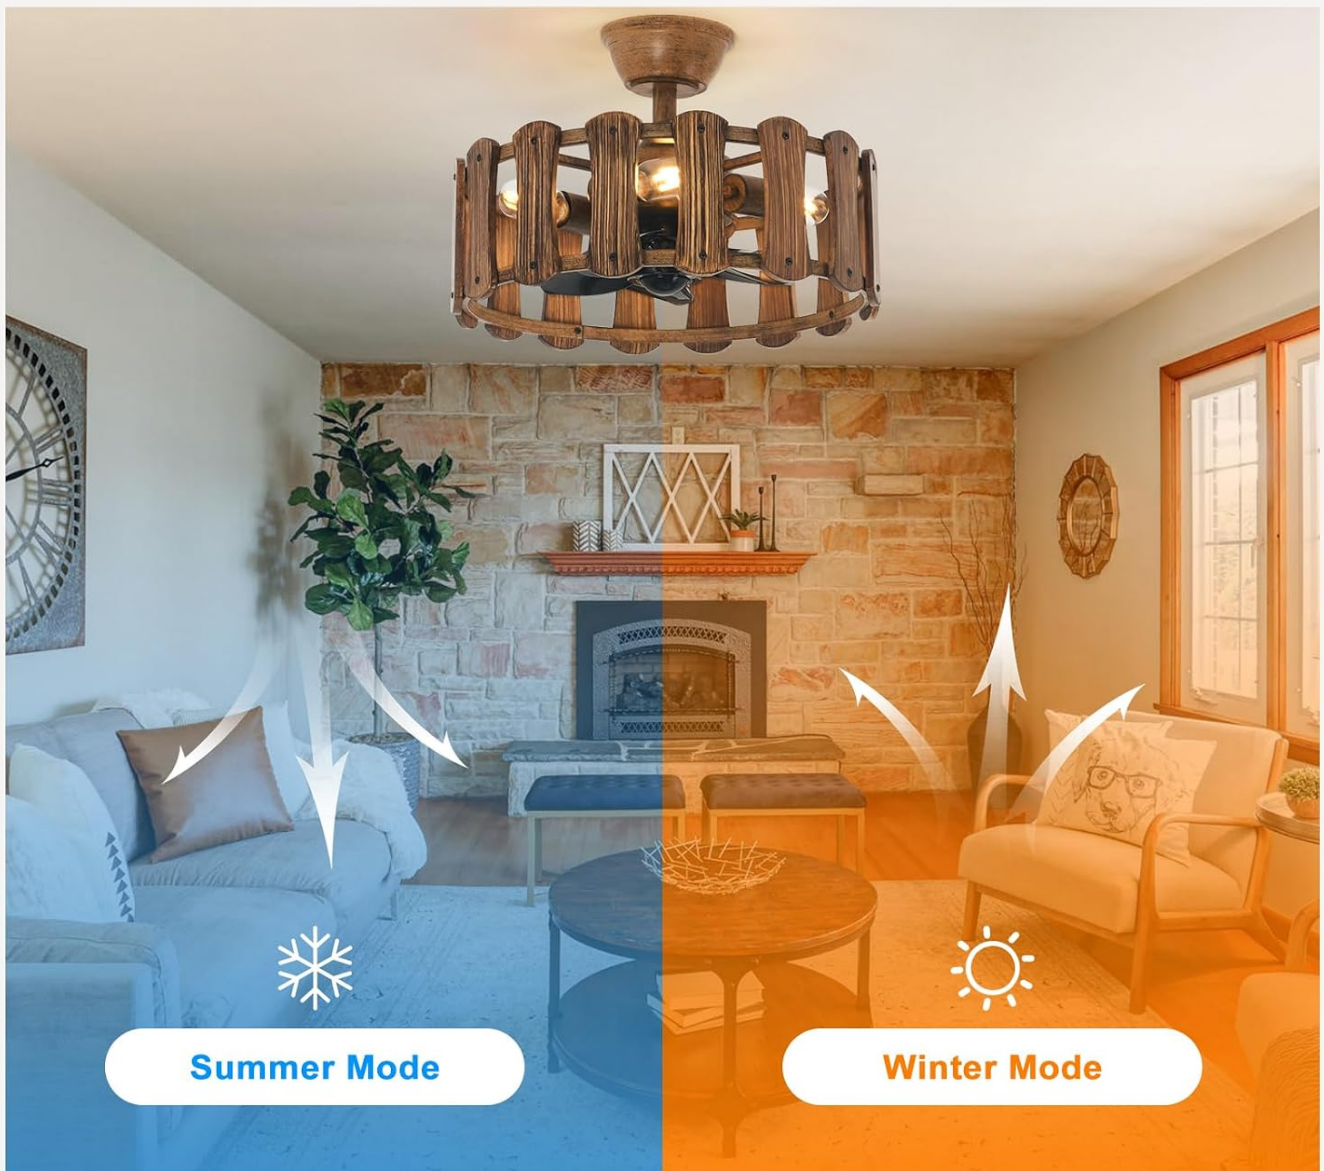


Image: Diagram illustrating airflow patterns for Summer Mode (downdraft, cooling) and Winter Mode (updraft, circulating warm air).

- **Summer Mode (Forward):** The fan blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode (Reverse):** The fan blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling, helping to save energy.

6.3 Fan Speed Settings

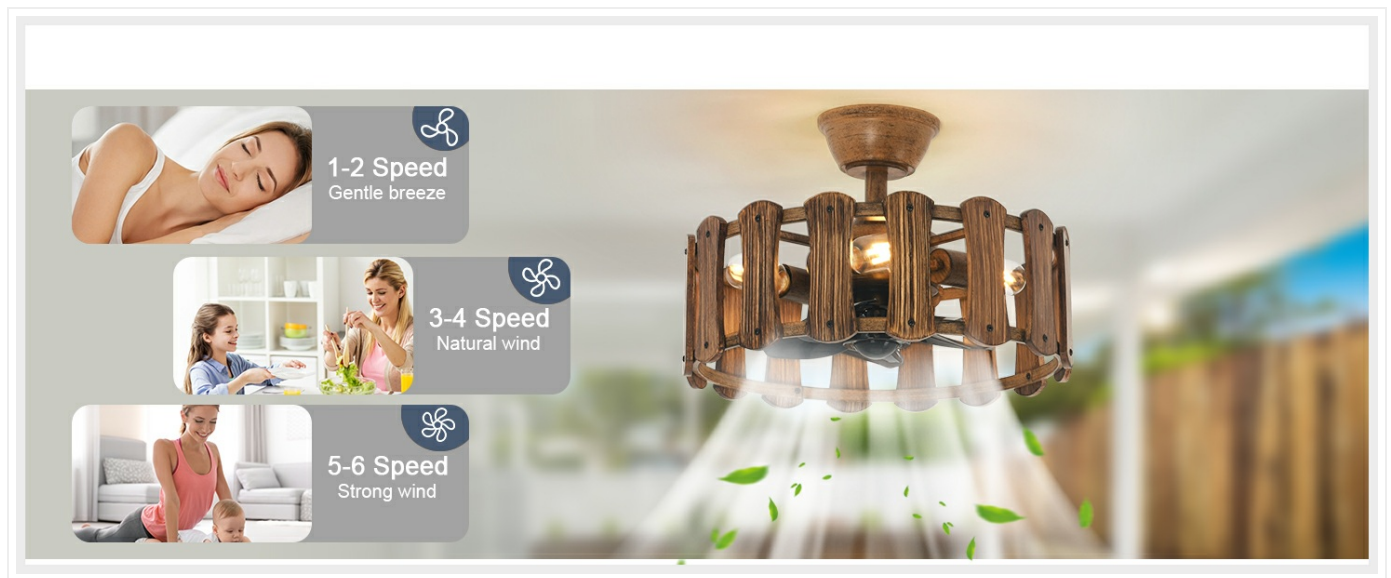


Image: Descriptions of fan speeds: 1-2 for gentle breeze, 3-4 for natural wind, and 5-6 for strong wind.

- **Speed 1-2:** Gentle breeze, ideal for comfortable sleep.
- **Speed 3-4:** Natural wind, suitable for general comfort.
- **Speed 5-6:** Powerful wind, for maximum cooling and air circulation.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan. Always disconnect power before cleaning.

7.1 Cleaning



Image: A person wearing gloves gently wiping the fan blades with a soft cloth or sponge.

- Use a soft, damp cloth to clean the fan housing and blades. Do not use abrasive cleaners or solvents.
- Periodically check all connections and screws to ensure they are secure.

8. TROUBLESHOOTING

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Fan does not start	No power supply Loose wiring Remote control battery low	Check circuit breaker and wall switch Verify all wiring connections are secure (ensure power is off) Replace remote control battery
Light does not work	Bulbs not installed or faulty Loose wiring	Install or replace E26 bulbs Check light kit wiring connections (ensure power is off)
Remote control not responding	Battery low or dead Remote not paired (if applicable)	Replace remote control battery Refer to remote pairing instructions in the full manual
Excessive noise	Loose mounting screws Unbalanced fan blades	Tighten all mounting screws Ensure fan blades are securely attached and balanced

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Garwarm customer service. Details can typically be found on the product packaging or the official Garwarm website.

If your remote control is lost or damaged, contact customer service for a replacement.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

