

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs 16MP 1080P Digital Camera User Manual

Dpofirs Dpofirs17kc0sefn2

Dpofirs 16MP 1080P Digital Camera User Manual

Model: Dpofirs17kc0sefn2

1. SAFETY INFORMATION

Please read all safety instructions carefully before using the camera. Keep this manual for future reference.

- Do not expose the camera to water or moisture.
- Avoid extreme temperatures and direct sunlight.
- Keep out of reach of children.
- Use only specified batteries (3 x AAA, not included).
- Do not attempt to disassemble or modify the camera.

2. PRODUCT OVERVIEW

2.1 Package Contents

- 1 x Dpofirs Digital Camera
- 1 x Charging Cable (USB)
- *Note: AAA batteries and memory card are not included.*

2.2 Camera Components

Familiarize yourself with the camera's main parts and controls.



Image 2.2.1: Top and back view of the camera. The top shows the lens and power button. The back features the 2.4-inch LCD screen and control buttons.

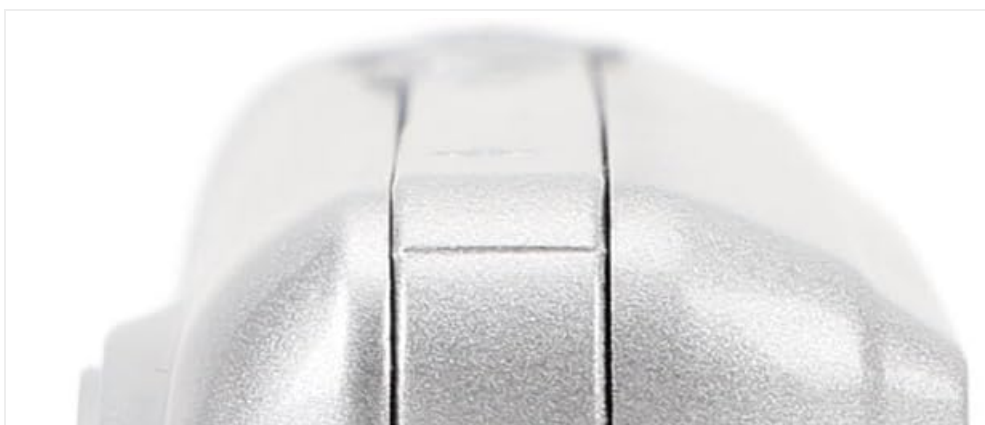




Image 2.2.2: Side view of the camera, highlighting the USB port for charging/data transfer and the memory card slot.

Your browser does not support the video tag.

Video 2.2.1: This video demonstrates handling the Dpofirs digital camera, showing its compact size and the location of the lens and rear

controls. It also briefly shows the camera being powered on.

3. SETUP

3.1 Installing Batteries

1. Locate the battery compartment cover on the camera.
2. Open the battery compartment cover.
3. Insert 3 AAA batteries (not included) according to the positive (+) and negative (-) poles indicated inside the compartment.
4. Close the battery compartment cover securely.

3.2 Inserting a Memory Card

The camera supports memory cards up to 128GB (not included).

1. Locate the memory card slot on the side of the camera (refer to Image 2.2.2).
2. Insert a compatible memory card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the card in until it springs out.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on: Press and hold the **Power** button.
- To power off: Press and hold the **Power** button again.

4.2 Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.4-inch LCD display.
3. Press the **Shutter** button (usually located on top or near the power button) to capture a photo.



Image 4.2.1: The camera displaying a captured image on its 2.4-inch LCD screen, demonstrating photo viewing.

4.3 Recording Videos

1. Turn on the camera.
2. Switch to video mode (if applicable, usually via a mode button or menu setting).
3. Press the **Record** button (often the same as the Shutter button, or a dedicated video button) to start recording.
4. Press the **Record** button again to stop recording.

Video Resolution

1080P 1920 x 1080, 720P 1280 x 720, VGA 640 x 480

Photo Resolution: 16MP 4032 x 4032, 12MP 4032 x 3024, 10MP 4032 x 2520, 8MP 3800 x 2160, 5MP 3200 x 1800, 3MP 2560 x 1440, 2MP 1920 x 1080, 1MP 1280 x 720



Image 4.3.1: The camera displaying a video scene on its 2.4-inch LCD screen, illustrating video capture capability.

4.4 Playback Mode

- Enter playback mode (usually via a dedicated button or menu option).
- Use the navigation buttons (up/down/left/right) to browse through your photos and videos.
- Press the **OK** button to view a selected item or play a video.

4.5 Settings Menu

Access the settings menu to adjust various camera parameters.

- Press the **Menu** button.
- Use navigation buttons to select options like photo resolution, video resolution, date/time, etc.
- Press **OK** to confirm selections.
- Press **Menu** again to exit.

5. MAINTENANCE

5.1 Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution.
- Do not use harsh chemicals or abrasive materials.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight.
- Remove batteries if the camera will not be used for an extended period.

6. TROUBLESHOOTING

Problem	Solution
Camera does not power on.	Ensure batteries are inserted correctly with correct polarity. Replace with fresh AAA batteries. Check if the power button is pressed and held sufficiently.
Cannot take photos/videos.	Ensure a memory card is inserted and has sufficient free space. Check if the memory card is properly formatted (refer to camera settings). Verify the camera is in the correct mode (photo/video).
Images are blurry.	Clean the camera lens. Ensure sufficient lighting. Hold the camera steady while shooting.

7. SPECIFICATIONS

Feature	Detail
Pixels	16MP
Screen Type	2.4 Inch LCD display
Storage	Memory Card, Support up to 128GB (Not Included)
Video Resolution	1080P (1920 x 1080), 720P (1280 x 720), VGA (640 x 480)
Photo Resolution	16MP (4032 x 4032), 12MP (4032 x 3024), 10MP (4032 x 2520), 8MP (3800 x 2160), 5MP (3200 x 1800), 3MP (2560 x 1440), 2MP (1920 x 1080), 1MP (1280 x 720)
Battery Information	3 x AAA (Batteries Not Included)
Item Weight	Approx. 138g / 4.9oz

Feature	Detail
Connectivity Technology	USB
Form Factor	Compact

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Dpofirs customer service.
Keep your purchase receipt as proof of purchase for any warranty claims.

