

[Manuals.plus](#) /

› [Midea](#) /

› Midea MDWPF1233C(W)-WG-UK 12 Place Setting Freestanding 60cm Dishwasher User Manual

Midea MDWPF1233C(W)-WG-UK

Midea MDWPF1233C(W)-WG-UK Dishwasher User Manual

Model: MDWPF1233C(W)-WG-UK | Brand: Midea

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Midea MDWPF1233C(W)-WG-UK Freestanding Dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with handles up to reduce the risk of cuts.
- Do not touch the heating element during or immediately after use.

PRODUCT OVERVIEW

The Midea MDWPF1233C(W)-WG-UK is a freestanding 60cm dishwasher designed for efficient dish cleaning. It features a 12 place setting capacity and multiple wash programs.

Key Features:

- **12 Place Setting Capacity:** Accommodates a significant amount of dishes, ideal for families.
- **6+1 Programs:** Offers a variety of wash cycles to suit different cleaning needs.
- **Adjustable Upper Basket:** Provides flexibility for loading taller items in the lower basket.
- **WiFi Connectivity:** Enables smart control and monitoring via a mobile application.
- **Delayed Start:** Allows you to set the wash cycle to begin at a later time.
- **Golden Hygiene Certificate:** Indicates high standards of cleanliness and hygiene.

SETUP AND INSTALLATION

Before installation, ensure you have all necessary components as listed in the 'What's in the Box' section.

Unpacking:

Carefully remove the dishwasher from its packaging. Inspect for any transit damage. Keep packaging materials away from children.

Placement:

Position the dishwasher on a flat, stable surface near a water supply, drain, and electrical outlet. Ensure there is adequate space for the door to open fully.



Figure 2: Side view of the Midea MDWPF1233C(W)-WG-UK dishwasher. This image highlights the appliance's depth and freestanding nature, useful for planning kitchen placement.

Connections:

- **Water Supply:** Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks.
- **Drainage:** Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked and is properly secured.

- **Electrical Connection:** Plug the power cord into a grounded electrical outlet. The voltage required is 240 Volts.

What's in the Box:

- User Manual
- Power Cord
- Drain Hose
- Inlet Hose

OPERATING INSTRUCTIONS

Loading the Dishwasher:

Proper loading ensures optimal cleaning performance. Scrape off large food particles before loading.



Figure 3: Interior view of the Midea MDWPF1233C(W)-WG-UK dishwasher with racks. This image illustrates the layout of the upper and lower baskets, including the cutlery basket, demonstrating the loading capacity.

- **Lower Basket:** Ideal for plates, bowls, pots, and pans.
- **Upper Basket:** Suitable for glasses, cups, and smaller bowls. The height is adjustable.
- **Cutlery Basket:** Place forks, spoons, and knives with handles facing up for safety and better cleaning.

Adding Detergent and Rinse Aid:

Fill the detergent dispenser with the recommended amount of dishwasher detergent. Add rinse aid to the rinse aid dispenser for improved drying and shine.

Selecting a Program:

The dishwasher offers 6+1 programs. Refer to the control panel for program selection. Common programs include:

- **Intensive:** For heavily soiled dishes and pots.
- **Eco:** Energy-efficient program for normally soiled dishes.
- **Quick:** For lightly soiled dishes that need a fast wash.
- **Auto Program:** Automatically adjusts wash cycle based on soil level.

Starting a Wash Cycle:

Close the dishwasher door firmly. Press the Power button, select your desired program, and then press the Start button. The Delayed Start function can be used to postpone the cycle.

MAINTENANCE AND CARE

Cleaning the Filters:

Regularly clean the filter system to ensure optimal performance. Remove the coarse filter, fine filter, and main filter, rinse them under running water, and reassemble.

Cleaning the Spray Arms:

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin wire.

Exterior and Interior Cleaning:

Wipe the exterior with a damp cloth. For the interior, run a dishwasher cleaner cycle periodically or wipe down with a damp cloth and mild detergent.

Winterizing (if applicable):

If the dishwasher is to be left in an unheated place during winter, drain all water from the appliance and hoses to prevent freezing damage.

TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door latches; Select a program and press Start.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arms; Add more detergent; Clean filters.
Water not draining	Clogged drain hose; Clogged filter; Drain pump malfunction.	Check and clear drain hose; Clean filters; Contact service if pump is faulty.
Excessive noise	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.

SPECIFICATIONS

Feature	Detail
Model Name	MDWPF1233C(W)-WG-UK
Form Factor	Freestanding
Dimensions (H x W x D)	84.5 cm x 60 cm x 60 cm
Item Weight	35 kg
Voltage	240 Volts
Annual Energy Consumption	95 Kilowatt Hours Per Year
Energy Efficiency Rating	E
Number of Place Settings	12
Noise Level	47 dB
Material	Stainless Steel, Polypropylene, Alloy Steel
Special Features	Auto Program, Half Load, Extra-Drying Function, Adjustable Rack, Smart (WiFi Connectivity)

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Midea website. Keep your proof of purchase for warranty claims.

For further assistance, you may also contact the retailer where the product was purchased.

