

## Dzees G1-D

# Dzees Wireless Security Camera User Manual

Model: **G1-D** | Brand: **Dzees**

Your comprehensive guide to setting up, operating, and maintaining your Dzees Wireless Security Camera.

## 1. PRODUCT OVERVIEW

The Dzees Wireless Security Camera is designed to provide robust and reliable home security with its advanced features and flexible installation options. This battery-powered camera offers 4MP resolution for clear imaging, AI motion detection, two-way audio communication, and color night vision, ensuring comprehensive surveillance day and night.



*Image: Dzees Wireless Security Cameras with Magnetic Mount. The image shows two white security cameras, one attached to a black magnetic base, and a smartphone screen above them displaying a live video feed of children playing outdoors.*

## Key Features:

- **No-Hole Magnetic Mount:** Offers easy installation and repositioning without drilling.
- **Real-Time Siren & Two-Way Talk:** Deter intruders and communicate with visitors directly via the built-in siren and two-way audio.
- **Advanced AI Motion Detection:** Accurately tracks people and objects, sending instant notifications to your app.
- **High-Definition 2.5K Resolution:** Provides clear and detailed images with a 120-degree wide field of view.
- **Color Night Vision:** Ensures clear, full-color images even in low-light conditions.
- **Flexible Storage Options:** Supports both cloud storage (including a 2-year free 3-day rolling cloud option) and local SD card storage (up to 128GB).
- **IP66 Weatherproof Rating:** Designed to withstand harsh outdoor conditions, including dust, rain, and snow.

## 2. PACKAGE CONTENTS

---

Please check the box for the following items:

- Dzees Wireless Security Camera Unit(s)
- Magnetic Mount(s)
- USB Charging Cable
- Mounting Screws and Anchors (for optional screw mount)
- Quick Start Guide

## **3. SETUP AND INSTALLATION**

---

### **3.1 Charging the Camera**

Before initial use, fully charge the camera using the provided USB charging cable. Connect the cable to the camera's charging port and a standard USB power adapter (not included). The charging indicator light will show the charging status.

### **3.2 App Installation and Account Creation**

Download the "DzeesHome" or "Vicohome" app from your smartphone's app store (iOS or Android). Follow the on-screen instructions to create an account and log in.

# All-in-One Dzees App Controls



Image: All-in-One Dzees App Controls. The image shows a smartphone displaying the DzeesHome application, with a list of connected devices and live video feeds, demonstrating centralized control.

## 3.3 Connecting the Camera to Wi-Fi


1. Open the DzeesHome/Vicohome app and tap the "+" icon to add a new device.
2. Select your camera model from the list.
3. Power on the camera. The camera will enter pairing mode (indicated by a flashing LED).
4. Follow the app's instructions to connect the camera to your **2.4GHz Wi-Fi network**. *Note: This camera is not compatible with 5GHz Wi-Fi networks.*
5. Scan the QR code displayed on your phone screen with the camera lens. You will hear a confirmation sound once connected.



**Stand**



**Wall Mount**

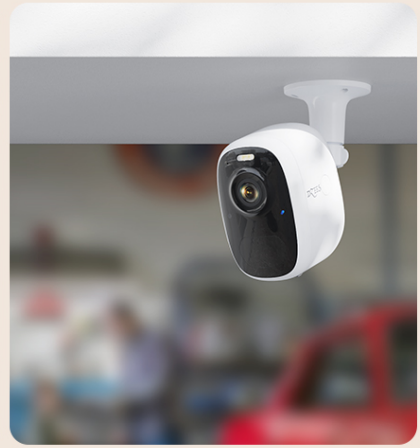

**Ceiling Mount**

*Image: 2.4GHz Wifi Only. This diagram shows a house with a Wi-Fi router and a Dzees camera, indicating that the camera only supports 2.4GHz Wi-Fi, not 5GHz.*

### 3.4 Mounting the Camera

The Dzees camera offers versatile mounting options:

- **Magnetic Mount:** For easy, drill-free installation and repositioning. Simply attach the magnetic base to a clean, flat surface using the adhesive pad, then snap the camera onto the magnetic ball joint.
- **Screw Mount:** For a more permanent installation, use the provided screws and anchors to secure the mount to a wall or ceiling.



## Flexibility In Installation



Image: Flexibility In Installation. A woman is shown adjusting a Dzees security camera mounted on an outdoor wall, while holding a smartphone, illustrating the ease of installation and positioning.



Image: Stand, Wall Mount, Ceiling Mount. This composite image displays three different ways to install the Dzees camera: on a flat surface using its base, mounted on a wall, and mounted on a ceiling.

## 4. OPERATION

---

## 4.1 Live View and Recording

Access the DzeesHome/Vicohome app to view live footage from your camera. You can manually record video or capture screenshots directly from the live view interface.

## 4.2 Motion Detection and Alerts

The camera features advanced AI motion detection. When motion is detected, the camera will automatically record and send instant notifications to your smartphone. You can customize activity zones within the app to minimize unwanted alerts.

### Color Night Vision

Providing clear, full-color images even in low-light conditions



*Image: Instant Security Alerts. A smartphone screen shows a notification from the Dzees app indicating motion detection, with a person standing at a front door in the background.*

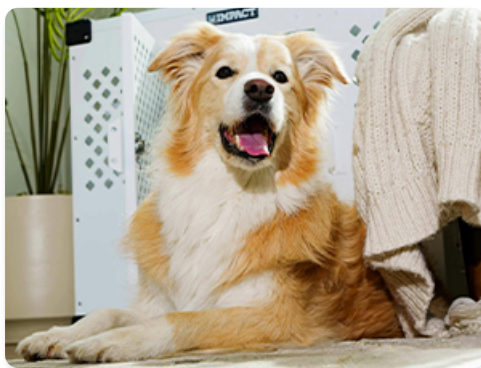


Image: Customizable Zone to Minimize Unwanted Alerts. This image illustrates a house with its surrounding area divided into three distinct zones (Zone 1, Zone 2, Zone 3), demonstrating how users can customize detection areas to reduce false alarms.

### 4.3 Two-Way Audio and Siren

Use the two-way talk feature in the app to communicate with people near the camera. You can also remotely activate the built-in siren to deter unwanted visitors.

## Property Protection with Multi-Alarms

**Go away !**

-  **Siren Spotlight**
-  **APP Push**
-  **Two-Way Audio**
-  **Motion Dection**



Image: Property Protection with Multi-Alarms. This image depicts a security camera deterring an intruder with a spotlight and siren, alongside icons representing app push notifications, two-way audio, and motion detection.

## 4.4 Night Vision

The camera is equipped with color night vision, providing clear, full-color images even in very low light conditions, enhancing visibility and identification at night.

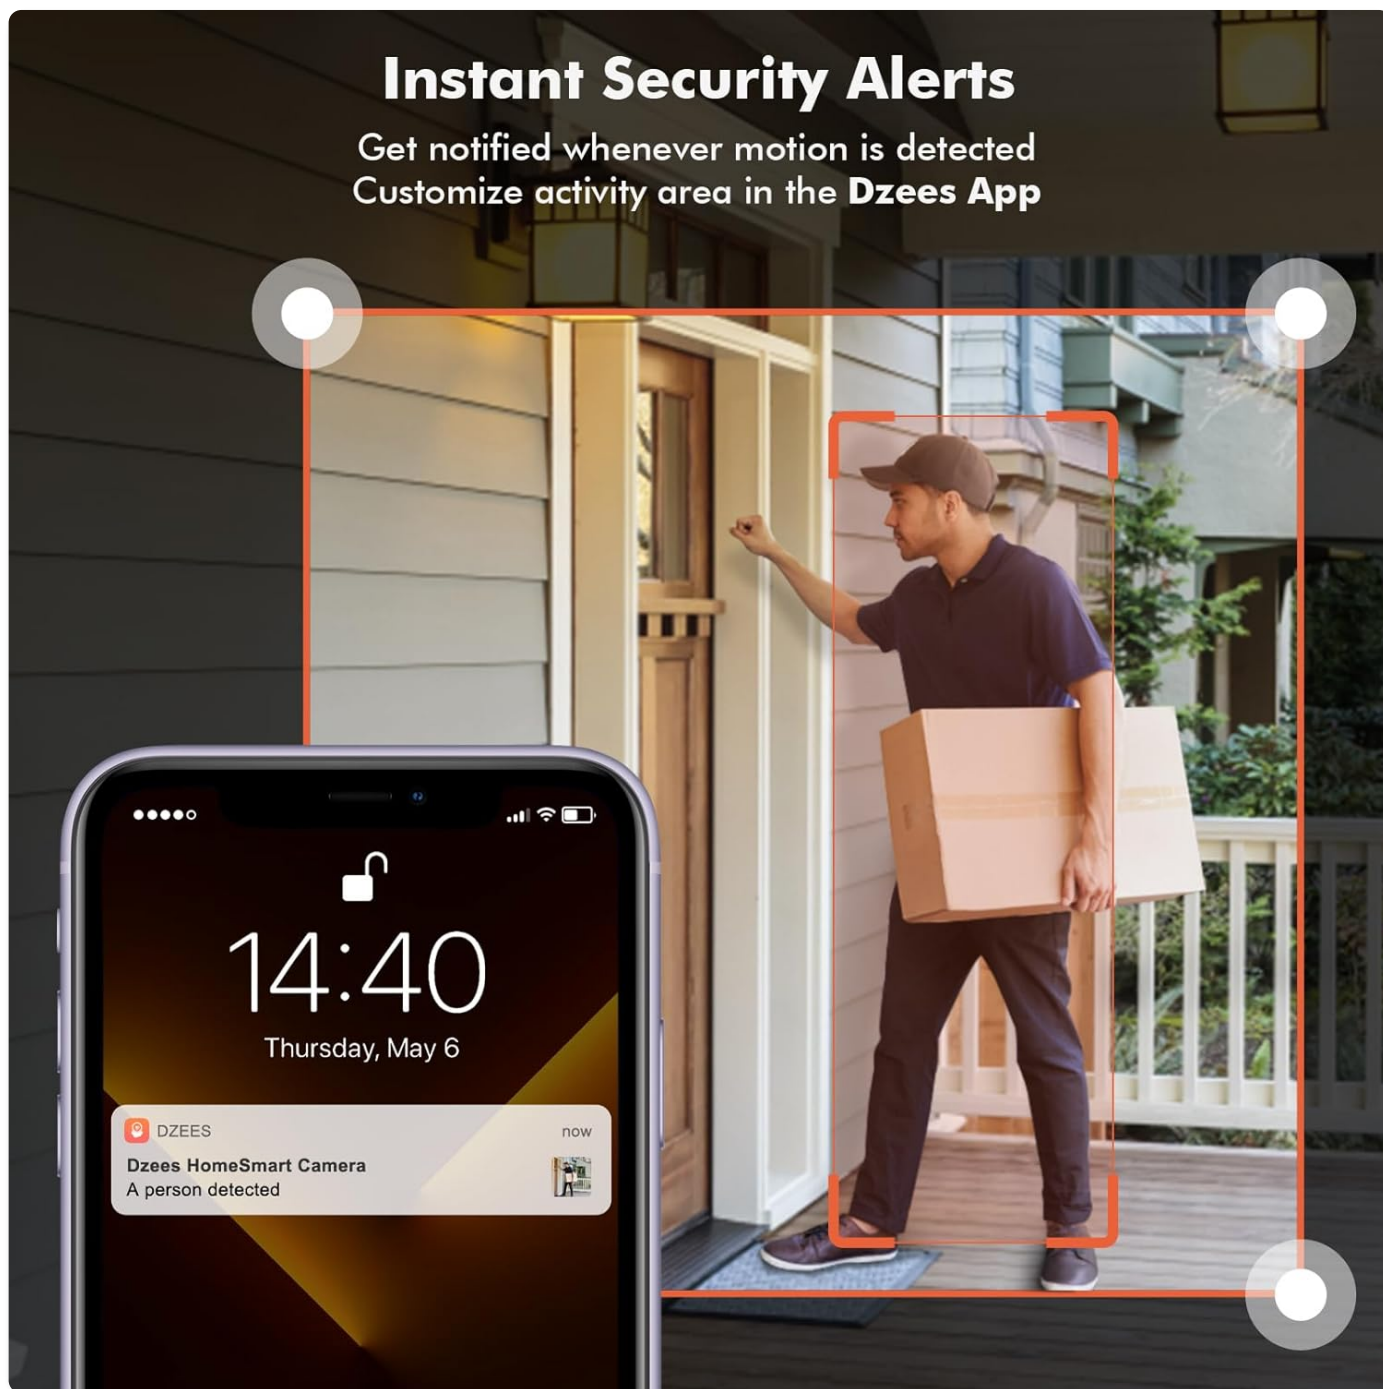


Image: Color Night Vision. This split image compares traditional black-and-white night vision with the Dzees camera's color night vision, showing a house at night in both modes.

## 4.5 Storage Management

Your camera supports two storage methods:

- **Cloud Storage:** Enjoy a 2-year free 3-day rolling cloud storage cycle. Optional paid plans are available for extended storage and AI recognition features.
- **SD Card Storage:** Insert a microSD card (up to 128GB, not included) into the camera's SD card slot for local video storage.



*Image: Dzees Cloud, Privacy, Storage Card. This image shows three distinct panels: one for Dzees Cloud storage with a "FREE 3 DAYS Video History" label, another for privacy protection with a shield icon, and a third for "Up to 128 GB" storage via an SD card.*

## 5. MAINTENANCE

---

### 5.1 Battery Management

The camera is powered by a 6700 mAh rechargeable battery. Battery life varies based on usage (e.g., frequency of motion detection, live view access). Recharge the camera when the battery level is low, typically every few weeks to months depending on activity.

### 5.2 Cleaning

To ensure optimal performance, periodically clean the camera lens and body with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

### 5.3 Weather Resistance

With an IP66 rating, your Dzees camera is designed to withstand dust, rain, and snow. However, avoid submerging the camera in water or exposing it to extreme temperatures beyond its operating range.

## IP66 for harsh outdoor conditions



Image: IP66 for harsh outdoor conditions. This image shows a Dzees camera, with one half depicting it in rainy and dusty conditions and the other half in snowy conditions, emphasizing its IP66 weather resistance.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera won't connect to Wi-Fi.	Incorrect Wi-Fi band (5GHz), weak signal, incorrect password.	Ensure your router is broadcasting a 2.4GHz network. Move the camera closer to the router. Double-check your Wi-Fi password.
Short battery life.	Frequent motion detection, extensive live view usage, cold weather.	Reduce motion detection sensitivity or frequency. Limit live view sessions. Ensure camera is fully charged. Consider a solar panel accessory if available.

Problem	Possible Cause	Solution
No motion detection alerts.	Motion detection disabled, incorrect sensitivity, app notifications off.	Check motion detection settings in the app. Adjust sensitivity. Enable app notifications for DzeesHome/Vicohome.
Poor image quality.	Dirty lens, low light conditions, network bandwidth issues.	Clean the camera lens. Ensure adequate lighting for optimal color night vision. Check your internet connection speed.

## 7. SPECIFICATIONS

Feature	Detail
Model Name	G1-D
Indoor/Outdoor Usage	Indoor, Outdoor
Video Capture Resolution	4MP (2.5K)
Connectivity Technology	Wireless (Wi-Fi 2.4GHz only)
Power Source	Battery Powered
Battery Capacity	6700 Milliampere Hour (mAh)
Controller Type	DzeesHome, Vicohome
Mounting Type	Magnetic, Screw (anywhere)
Special Features	2-Way Audio, Built-In Light, HD Resolution, Motion Sensor, Night Vision (Color)
International Protection Rating	IP66
Product Dimensions	4.84 x 3.7 x 5.94 inches
Item Weight	2.64 pounds
Storage Options	Cloud, SD Card (up to 128GB)

## 8. WARRANTY AND SUPPORT






Dzees is committed to providing excellent customer service and product support.

- **Lifetime Warranty:** Dzees offers a lifetime warranty on its products, ensuring long-term reliability.
- **Lifetime Trade-in:** Benefit from a lifetime trade-in program for future upgrades.
- **Professional Technical Support:** Access a professional technical team for assistance.
- **Quick Response:** Expect prompt responses to your inquiries.

For further assistance, please visit the official Dzees Store on Amazon:[Dzees Store](#).



## Related Documents - G1-D

 <p>Wire-Free Security Camera QUICK START GUIDE (D3)</p>	<p><a href="#">Dzees Wire-Free Security Camera D3 Quick Start Guide</a></p> <p>A comprehensive quick start guide for the Dzees Wire-Free Security Camera D3, covering setup, features, and troubleshooting.</p>
 <p>Wire-Free Security Camera QUICK START GUIDE (CG6)</p>	<p><a href="#">Dzees Wire-Free Security Camera CG6 Quick Start Guide</a></p> <p>A quick start guide for the Dzees Wire-Free Security Camera CG6, covering setup, features, and troubleshooting.</p>
 <p>Smart Battery Video Doorbell QUICK START GUIDE DB1</p>	<p><a href="#">DZEES Smart Battery Video Doorbell DB1 Quick Start Guide</a></p> <p>A comprehensive quick start guide for the DZEES Smart Battery Video Doorbell (DB1), covering packing list, product appearance, app installation, account registration, connection preparation, chime setup, installation, removal, tamper alerts, battery management, indicator light status, sharing, multi-device management, reset, storage, specifications, firmware upgrades, and FAQs.</p>
 <p>PTZ Security Camera QUICK START GUIDE D3</p>	<p><a href="#">Dzees PTZ Security Camera D3 Quick Start Guide</a></p> <p>This guide provides instructions for setting up and using the Dzees PTZ Security Camera (Model D3). It covers app installation, account registration, camera connection via Wi-Fi or QR code, physical installation, solar panel setup, battery management, and answers frequently asked questions.</p>
 <p>Wire-Free Security Camera QUICK START GUIDE (CG6K)</p>	<p><a href="#">Dzees Wire-Free Security Camera CG6K Quick Start Guide</a></p> <p>Get started with your Dzees Wire-Free Security Camera (CG6K). This guide provides setup instructions, features, and troubleshooting for your smart home security device.</p>



### [Dzees Wire-Free Security Camera D3 Quick Start Guide](#)

A comprehensive quick start guide for the Dzees Wire-Free Security Camera D3, covering setup, features, and troubleshooting.