

AOKESI F-C9572

AOKESI Christmas Tree Building Kits - DIY Music Box Instruction Manual

Model: F-C9572

1. INTRODUCTION

Thank you for choosing the AOKESI Christmas Tree Building Kit. This kit allows you to construct a festive Christmas tree that also functions as a hand-operated music box. Designed to foster creativity and logical thinking, this building set provides an engaging experience for users aged 8 and up.

This manual provides detailed instructions for assembly, operation, and maintenance to ensure a rewarding experience with your new building block music box.

WARNING: SMALL PARTS - Not intended for children under 3 years of age. Adult supervision is recommended during assembly for younger users.



Image 1.1: The fully assembled AOKESI Christmas Tree Music Box, showcasing its festive design and musical elements.

2. SETUP AND ASSEMBLY

2.1 Package Contents

Before beginning assembly, please verify that all components are present. The kit contains 373 building pieces, a musical generator base, and a detailed instruction manual.



PACKAGE LIST



Manual



Musical Generator Base



Building Block

Image 2.1: Overview of the AOKESI Christmas Tree Building Kit package contents, including the box, instruction manual, musical generator base, and building blocks.

2.2 Assembly Instructions

Follow the step-by-step instructions provided in the included printed manual. The average build time is approximately 2-3 hours. All parts are made from durable, non-toxic ABS plastic.

- **Step 1:** Unpack all building blocks and sort them by color or shape to facilitate assembly.
- **Step 2:** Begin by constructing the base of the Christmas tree, integrating the musical generator base as indicated in the manual.
- **Step 3:** Proceed with building the tree layers, adding decorative elements as you go.
- **Step 4:** Attach the star topper to complete the Christmas tree structure.

Building this kit can be a collaborative activity, enhancing hand-eye coordination and logical thinking. Ensure all connections are secure for a stable structure.



Building Block Christmas Tree Music Box A perfect decoration for any place



Image 2.2: A family engaged in the assembly process of the AOKESI Christmas Tree Building Kit, demonstrating the interactive nature of the toy.

3. OPERATING THE MUSIC BOX

The AOKESI Christmas Tree Music Box is hand-operated and does not require batteries or electricity. To play the music, simply turn the handle located on the side of the musical generator base.

- **Music Theme:** The music box plays the classic melody "We Wish You A Merry Christmas."
- **Operation:** Continuously crank the handle to enjoy the full melody. The internal mechanism will rotate, adding a dynamic visual element to the music.



Image 3.1: The AOKESI Christmas Tree Music Box highlighting its key features: music playback, rotational movement, and DIY assembly.

4. MAINTENANCE

To ensure the longevity and proper functioning of your AOKESI Christmas Tree Music Box, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the assembled model with a soft, dry cloth to remove dust. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the music box in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Handling:** Handle the music box gently, especially the musical crank mechanism, to avoid damage.

5. TROUBLESHOOTING

If you encounter any issues with your AOKESI Christmas Tree Music Box, please refer to the following common solutions:

- **Music Not Playing:** Ensure the handle is being continuously cranked. The music mechanism requires constant rotation of the handle to produce sound.

- **Missing Pieces:** Double-check the packaging and surrounding area for any small parts. If pieces are genuinely missing, please contact customer support for assistance.
- **Loose Connections:** If parts of the tree feel unstable, re-examine the assembly steps to ensure all blocks are firmly connected.

6. SPECIFICATIONS

Feature	Detail
Model Number	F-C9572
Number of Pieces	373
Material Type	Acrylonitrile Butadiene Styrene (ABS)
Assembly Required	Yes
Batteries Required	No
Music Theme	We Wish You A Merry Christmas
Recommended Age	8 years and up
Product Dimensions (L x W x H)	2.54 x 2.54 x 2.54 cm (approximate assembled size)
Item Weight	500 g
Educational Objectives	Creative Thinking, Hand-Eye Coordination, Logical Thinking, STEM

7. WARRANTY AND SUPPORT

AOKESI is committed to providing high-quality products. If you encounter any issues or have questions regarding your Christmas Tree Building Kit, please do not hesitate to contact our customer support team.

- **Warranty:** We offer a warranty against manufacturing defects. Please retain your proof of purchase.
- **Contact Support:** For any inquiries, missing parts, or technical assistance, please contact us. We aim to respond to all queries within 24 hours.

For the most up-to-date contact information, please refer to the packaging or the official AOKESI website.