

## vidaXL 367667

# Instruction Manual: vidaXL 2 Piece Foldable Garden Chair Set

Brand: vidaXL

## INTRODUCTION

---

Thank you for choosing the vidaXL 2 Piece Foldable Garden Chair Set. This set is designed to provide comfort and style for your outdoor spaces, including gardens, balconies, and patios. Crafted from solid Acacia wood and durable polypropylene, these chairs offer both aesthetic appeal and resilience against outdoor elements. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure long-lasting enjoyment of your new garden chairs.



Image: The vidaXL 2 Piece Foldable Garden Chair Set, showcasing both chairs in their unfolded state, highlighting the grey polypropylene seating and solid Acacia wood frames.



Image: A single vidaXL garden chair positioned on a patio, surrounded by greenery, demonstrating its suitability for outdoor environments.

## SAFETY INFORMATION

---

- Always ensure the chairs are fully unfolded and stable before use.
- Do not exceed the maximum weight capacity of 242.5 lbs (110 kg) per chair.
- Keep fingers clear of moving parts when folding or unfolding the chairs to prevent pinching.
- Avoid placing the chairs on uneven surfaces to prevent tipping.
- Do not use the chairs as a step stool or ladder.
- Supervise children when they are near or using the chairs.
- Periodically check all screws and connections to ensure they remain tight.

## PACKAGE CONTENTS

---

The following items are included in your package:

- 2 x Garden chairs
- Assembly hardware (screws, bolts, etc. - specific items not detailed, but implied by "Assembly Required")
- Instruction manual (this document)

## SETUP AND ASSEMBLY

---

Assembly is required for this product. It is recommended that one person performs the assembly. Please follow these general steps. Refer to the included hardware pack for specific fasteners.

1. Unpack all components and verify that all parts listed in the "Package Contents" section are present.
2. Lay out all wooden frame pieces on a clean, soft surface to prevent scratching.
3. Identify the main frame sections (legs, backrest, seat frame).
4. Attach the backrest and seat components to the leg frames using the provided screws and tools. Ensure all connections are secure but do not overtighten initially.
5. Connect the armrests to the main frame, if applicable.
6. Once all components are loosely assembled, place the chair upright and gently tighten all screws. This allows the chair to settle into its natural position before final tightening.
7. Test the folding mechanism to ensure smooth operation.

*Note: Specific assembly diagrams and hardware details are typically provided in a separate assembly sheet within the product packaging. This section provides general guidance.*

## OPERATING INSTRUCTIONS

---

The vidaXL garden chairs are designed for easy folding and unfolding, making them convenient for storage and transport.

### Unfolding the Chair:

1. Hold the top of the backrest and the front of the seat.
2. Gently pull the backrest and seat apart until the chair fully extends and locks into its open position. Ensure all locking mechanisms (if present) are engaged.
3. Verify the chair is stable before sitting.

### Folding the Chair:

1. Ensure no one is sitting on the chair.
2. Locate the folding mechanism (usually a hinge or release point near the seat or legs).
3. Carefully push the seat upwards and the backrest downwards, allowing the chair to collapse. Keep hands clear of pinch points.
4. Once folded, the chair can be easily stored or transported.



Image: The vidaXL garden chair in its folded configuration, demonstrating its compact design for convenient storage.

## MAINTENANCE AND CARE

---

Proper care will extend the life and appearance of your garden chairs.

- **Acacia Wood Care:** The solid Acacia wood is oiled for protection. To maintain its appearance and weather resistance, re-oil the wood periodically (e.g., once or twice a year, depending on exposure to elements) with a suitable outdoor wood oil. Clean the wood with a damp cloth and mild soap, then dry thoroughly before re-oiling.
- **Polypropylene Seat/Back Care:** Clean the polypropylene material with a soft cloth, mild soap, and water.

Rinse thoroughly and allow to air dry. Avoid harsh chemicals or abrasive cleaners.

- **General Cleaning:** Wipe down the chairs regularly with a damp cloth to remove dust and dirt.
- **Storage:** When not in use for extended periods, especially during harsh weather conditions (heavy rain, snow, extreme sun), it is recommended to store the chairs indoors or cover them with a protective outdoor furniture cover.
- **Hardware:** Periodically check all screws and bolts to ensure they are tight. Retighten as necessary to maintain stability.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair feels wobbly after assembly.	Screws are not fully tightened or unevenly tightened.	Ensure all screws are tightened evenly and securely. If necessary, loosen all screws slightly, place the chair on a flat surface, apply gentle pressure to settle it, then retighten all screws.
Difficulty folding/unfolding the chair.	Mechanism is stiff or obstructed.	Check for any debris or obstructions in the folding mechanism. Apply a silicone-based lubricant to hinges if stiffness persists. Ensure the chair is not on an uneven surface.
Wood appears dry or faded.	Lack of regular oiling or prolonged exposure to sun/rain.	Clean the wood thoroughly and apply a fresh coat of outdoor wood oil. Regular maintenance is key to preventing this.
Polypropylene material looks dirty.	Accumulation of dirt, dust, or mildew.	Clean with a soft cloth, mild soap, and water. For mildew, a diluted bleach solution (1 part bleach to 10 parts water) can be used, followed by thorough rinsing.

## SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model Number	367667
Number of Items	2 (chairs)
Color	Grey
Material	Solid Acacia wood and Polypropylene
Finish	Oiled
Indoor/Outdoor Use	Outdoor Only
Maximum Weight Capacity	242.5 lbs (110 kg) per chair
Product Dimensions (W x L x H)	22.4 x 21.3 x 35.8 inches (57 x 54 x 91 cm)

Feature	Detail
Seat Depth	14.9 inches (37.8 cm)
Leg Height	17.3 inches (44 cm)
Item Weight	25.3 lbs (11.48 kg) per chair
Assembly Required	Yes
Recommended Assembly People	1

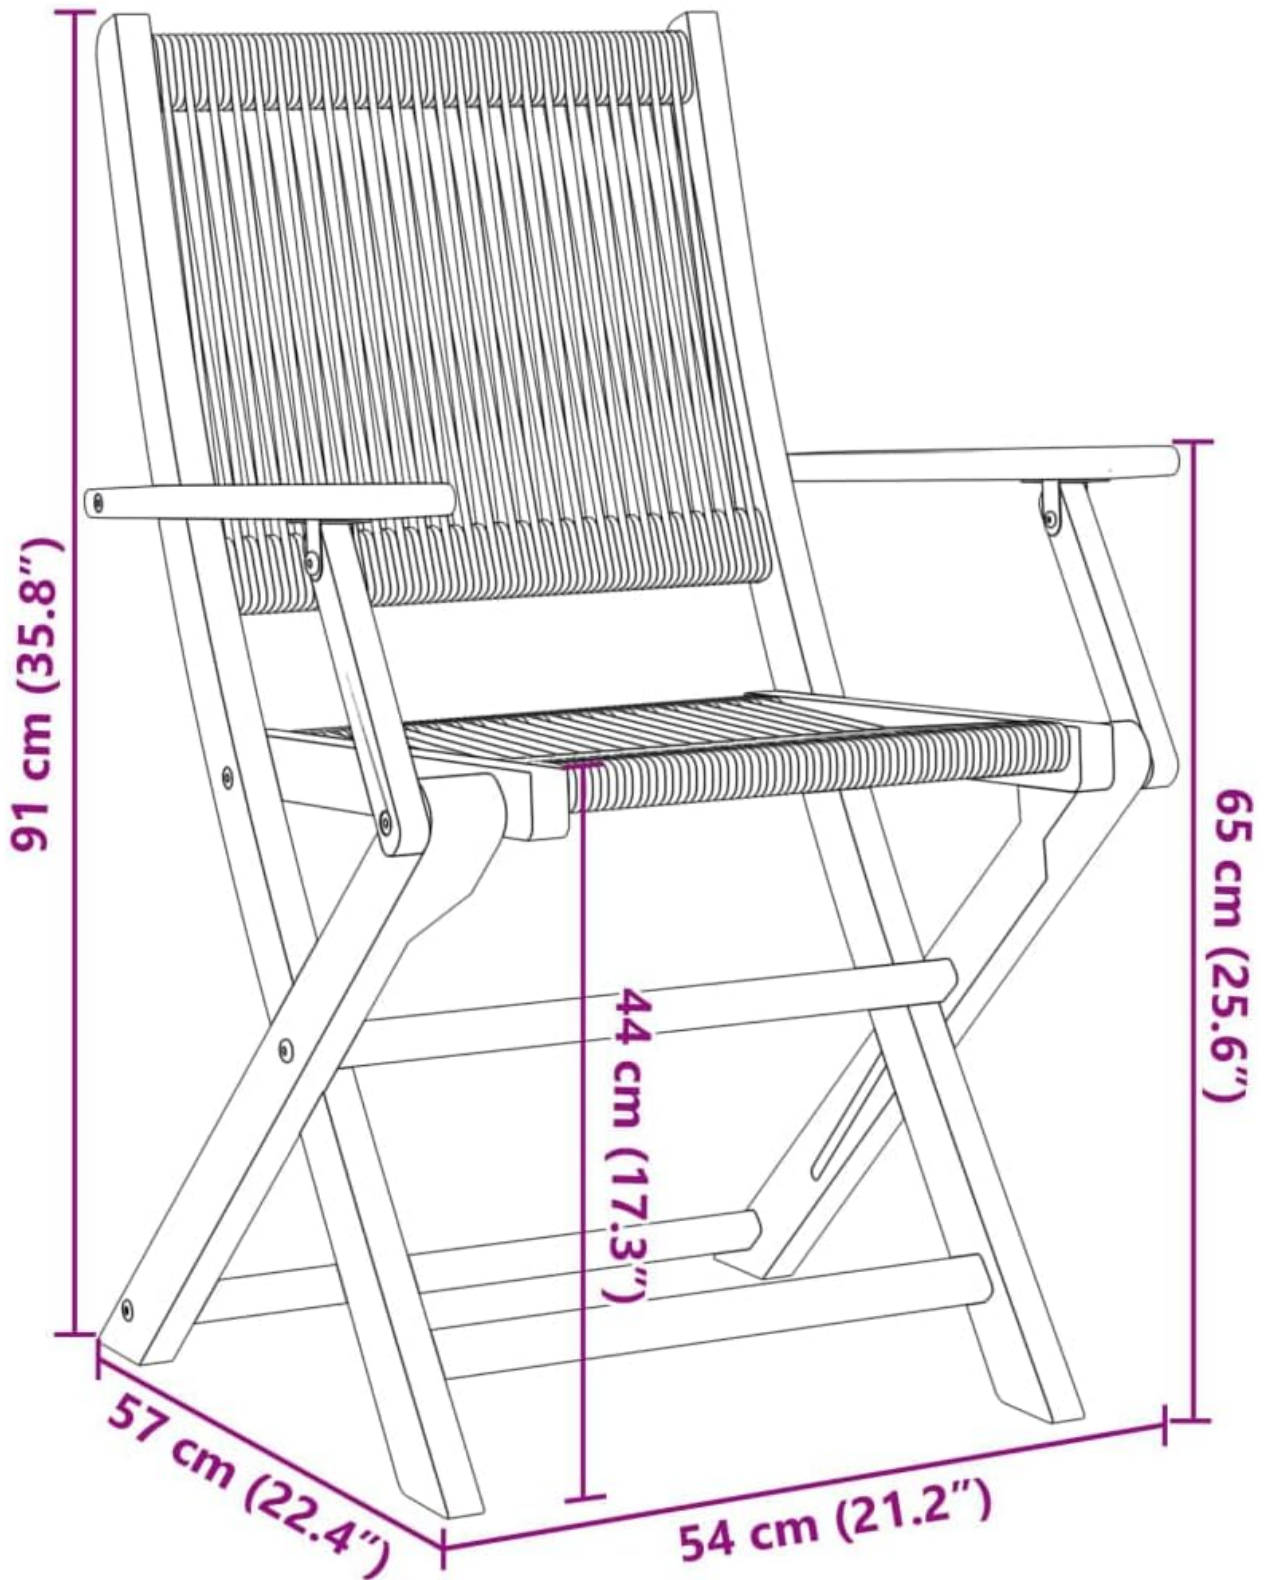


Image: A technical diagram illustrating the key dimensions of the garden chair, including height, width, depth, seat height, and

armrest height.

## WARRANTY AND SUPPORT

---

vidaXL products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official vidaXL website. In case of any issues, missing parts, or questions not covered in this manual, please contact vidaXL customer support through their official channels. Please have your model number (367667) and purchase details ready when contacting support.

For further assistance, you may visit the vidaXL Store on Amazon:[vidaXL Store](#)