

ALLIMITY RMCSPB1EP1

ALLIMITY RMCSPB1EP1 Universal Voice Remote Control User Manual

For Samsung Smart TVs

1. PRODUCT OVERVIEW

This manual provides instructions for the ALLIMITY RMCSPB1EP1 Universal Voice Remote Control, designed as a replacement for various Samsung Smart TV remote controls. This remote offers voice control functionality and dedicated buttons for popular streaming services, enhancing your television viewing experience.

Key Features:

- Direct replacement for original Samsung Smart TV remotes.
- Integrated voice control capability.
- Pre-programmed shortcut buttons for streaming applications.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) 1.5V AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.





Figure 1: Rear view of the remote control with the battery compartment open, showing proper battery placement.

2.2 Pairing with Your Samsung Smart TV

Before using the remote, it must be paired with your Samsung Smart TV. The exact pairing process may vary slightly

depending on your TV model. Generally, follow these steps:

1. Ensure your TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **Return** button  and the **Play/Pause** button  simultaneously for 3-5 seconds.
4. A pairing message should appear on your TV screen, indicating that the remote is connecting.
5. Once paired, the remote is ready for use. If pairing fails, ensure batteries are correctly installed and try again.

3. OPERATING THE REMOTE CONTROL

The ALLIMITY RMCSBP1EP1 remote control features a user-friendly layout for easy navigation and control of your Samsung Smart TV.





Figure 2: Front view of the ALLIMITY RMCSPB1EP1 remote control.

3.1 Button Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Voice Control Button** (🗣️): Activates the voice assistant for commands. Press and hold to speak your command.
- **Navigation Pad (Directional Buttons)**: Used to move the cursor or selection up, down, left, or right on the screen.
- **Select/OK Button** (Center of Navigation Pad): Confirms a selection or opens an item.
- **Return Button** (↩️): Returns to the previous screen or menu.
- **Home Button** (🏠): Accesses the Smart Hub or home screen of your TV.
- **Play/Pause Button** (⏮️): Controls media playback (play, pause).
- **Volume Up/Down Buttons** (+/-): Adjusts the TV volume.
- **Channel Up/Down Buttons** (⏮️): Changes TV channels.
- **App Shortcut Buttons** (e.g., NETFLIX, Prime Video, Disney, Rakutn TV, SmSng TV Plus, Globo Play, HLU): Directly launch the corresponding streaming applications.

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

4.2 Battery Care

- Replace batteries when the remote's performance degrades or it stops responding.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

- Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

Problem	Possible Cause / Solution
Remote not responding.	• Check if batteries are correctly inserted and have sufficient charge. Replace if necessary. • Ensure there are no obstructions between the remote and the TV. • Re-pair the remote control with the TV (refer to Section 2.2).
Voice control not working.	• Ensure the remote is properly paired with the TV. • Check TV settings to confirm voice control is enabled. • Speak clearly and hold the remote closer to your mouth.
Remote range is limited.	• Replace batteries with fresh ones. • Ensure no strong interference sources (e.g., other wireless devices) are nearby.
Specific app buttons not launching apps.	• Ensure the app is installed and updated on your Samsung Smart TV. • Check your TV's internet connection.

6. SPECIFICATIONS

- **Model Number:** RMCSPB1EP1 (CV-2728-RMCSPB1EP1-BT-SH)
- **Brand:** ALLIMITY
- **Compatible Devices:** Samsung Smart Televisions
- **Power Supply:** 2 x 1.5V AAA Batteries
- **Product Dimensions:** 6.5 x 1.38 x 0.72 inches
- **Item Weight:** 1.59 ounces
- **Special Feature:** Wireless, Voice Control

7. WARRANTY AND SUPPORT

Warranty information for this product was not provided in the available documentation. For specific warranty details or technical support, please contact ALLIMITY customer service directly or refer to the product packaging for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question