

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Bincoo](#) /
- › [Bincoo 16-Inch Coffee Maker Travel Case with Wheels - Instruction Manual](#)

Bincoo GYKF0276

Bincoo 16-Inch Coffee Maker Travel Case with Wheels

Model: GYKF0276

[Introduction](#) [Product Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#)

1. INTRODUCTION

This manual provides instructions for the Bincoo 16-Inch Coffee Maker Travel Case with Wheels, model GYKF0276. This case is designed to safely transport your barista espresso machine and coffee accessories, offering waterproof and shockproof protection for travel, camping, and outdoor use. Please read this manual thoroughly before using the product to ensure proper handling and longevity.



Image 1.1: The Bincoo 16-Inch Coffee Maker Travel Case, showcasing its compact design and wheels.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Compact and Lightweight:** Measures 15.7" x 13.7" x 9" and weighs 5.7 lbs, meeting most airline carry-on requirements.
- **Silent Multi-Directional Wheels:** Equipped with 360° silent, shock-absorbing, and wear-resistant wheels for easy maneuverability across various terrains.
- **Durable Construction:** Features a thickened ABS shell for excellent compression and wear resistance, protecting contents during travel.
- **Multi-Functional Storage:** Interior includes multiple compartment partitions and dual zipper designs for organized storage of coffee equipment and accessories.
- **Aluminum Alloy Telescopic Handle:** Sturdy, durable handle with a three-stage telescopic design for adjustable height.

- **Secure Combination Lock:** Built-in lock to protect privacy and valuables.



Image 2.1: Diagram highlighting key features such as ABS anti-scratch material, 360° spinner wheels, security code lock, adjustable handle, and smooth zipper.

2.2 What's in the Box

- Bincoo 16-Inch Coffee Maker Travel Case with Wheels

3. SETUP

3.1 Setting the Combination Lock

Your travel case comes with a built-in combination lock to secure your belongings. Follow these steps to set or reset your personal combination:

1. The initial password for unlocking is typically 0-0-0.
2. To open the lock, hold down the lock button with one hand and turn the number dials to the appropriate position (0-0-0 initially).
3. To change the password, keep the initial password for unlocking and press and hold the unlock button without releasing it.
4. While holding the button, turn your finger on the password dial to set your desired new password.
5. Release the lock button after your new password is set. Remember your new combination.

Password lock for safe travel



How to change password

1. Keep the initial password for unlocking and press and hold the unlock button without releasing it.
2. Turn your finger on the password dial to set your favorite password
3. Release the lock key after setting is completed

Image 3.1: Visual guide for setting and resetting the combination lock.

3.2 Organizing the Interior

The case features a multi-functional storage area with adjustable partitions to customize the layout for your coffee equipment.

- Utilize the transparent grid layer for smaller items.
- Secure grinding machines in the designated strap area.
- Arrange coffee accessories in the dedicated storage areas.
- Adjust the fixed partitions as needed to create snug compartments for various items, preventing movement during transit.
- The dual zipper design helps stabilize goods and prevents them from falling apart.



BINCOO 16 Inch Travel Coffee Utensils Suitcases



Image 3.2: Detailed view of the case's interior, showing transparent grid layer, grinding machine strap

area, and coffee accessories storage area.

Large Suitcase for Coffee Maker

Large storage area with dense lining, solid and durable



Image 3.3: Illustration of the adjustable fixed partitions for customizing internal storage.

4. OPERATION

4.1 Packing Your Coffee Equipment

Carefully place your coffee maker, espresso machine, grinder, cups, and other accessories into the designated compartments. Ensure all items are securely fastened with straps or snugly fit within the adjustable partitions to prevent shifting during transit.

Multifunctional Storage Area



Image 4.1: The case interior demonstrating how various coffee items can be organized.

4.2 Using the Telescopic Handle and Wheels

To extend the aluminum alloy telescopic handle, press the release button and pull the handle upwards to your desired height. The three-stage design accommodates different user heights. The 360° silent multi-directional wheels allow for effortless movement across various surfaces, including sidewalks, asphalt, cobblestones, and carpets.



Aluminum alloy telescopic handle

Three-stage pull-out design, suitable for different groups of people

Double Spinner Wheels

360° silent universal wheel, shock-absorbing and wear-resistant, easily coping with various road conditions



Image 4.2: Close-up of the aluminum alloy telescopic handle and double spinner wheels, illustrating their functionality.



Double Spinner Wheels Suitable for various road conditions



Silent



Two wheels



360°



Shock absorption



Sidewalk



Asphalt road



Cobblestone road



Carpet road

5. MAINTENANCE

5.1 Cleaning Instructions

- Wipe the exterior of the case with a soft, damp cloth and mild soap if necessary. Avoid abrasive cleaners that could damage the ABS shell.
- For the interior, vacuum or wipe with a damp cloth to remove any dust or spills. Ensure the interior is completely dry before closing the case or storing items.
- Periodically check the wheels for any debris and clean them to maintain smooth operation.

6. TROUBLESHOOTING

6.1 Combination Lock Issues

- **Lock not opening:** Ensure the correct combination is entered and the lock button is fully depressed. If you forgot your combination, refer to the 'Setting the Combination Lock' section for reset instructions (if applicable, some locks cannot be reset without the original combination).
- **Dials are stiff:** Apply a small amount of silicone-based lubricant to the dials if they become difficult to turn.

6.2 Wheel Issues

- **Wheels not rolling smoothly:** Check for hair, lint, or other debris caught in the wheel axles. Clean as necessary.
- **Wobbly wheels:** Ensure all screws securing the wheels are tight. Do not overtighten.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	13.7 x 9 x 15.7 inches
Item Weight	5.7 pounds
Manufacturer	Bincoo
Model Number	GYKF0276
Material	Thickened ABS Shell, Aluminum Alloy Handle
Wheel Type	360° Silent Multi-Directional Spinner Wheels
Lock Type	Secure Combination Lock

Travel Coffee Utensils Suitcases

Size: 16" /5.7LB

This is a very lightweight coffee maker suitcase, perfect for camping and short trips



Image 7.1: Diagram illustrating the dimensions of the Bincoo travel case.

8. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Bincoo Coffee Maker Travel Case, please contact Bincoo customer service. Refer to your purchase documentation for specific warranty details and contact information. Additional protection plans may be available for purchase separately.