



[Manuals.plus](#) /

› [WAFLOO](#) /

› WAFLOO Cordless Water Dental Flosser User Manual

WAFLOO YXY-801

WAFLOO Cordless Water Dental Flosser User Manual

Model: YXY-801



INTRODUCTION

This user manual provides comprehensive instructions for the safe and effective operation, maintenance, and troubleshooting of your WAFLOO Cordless Water Dental Flosser. Please read this manual thoroughly before first use and retain it for future reference.



Image: The WAFLOO Cordless Water Dental Flosser in white, shown with its packaging, the main unit, 8 assorted jet tips, and a black travel bag.

Safety Information

For your safety and to ensure proper operation, please observe the following precautions:

- Do not charge the device while wet. Ensure the charging port is completely dry before connecting the USB cable.
- Keep the device away from open flames and extreme heat sources.
- Do not use the device with damaged charging cords or adapters. Replace immediately if damaged.
- Consult your dentist or physician before use if you have certain medical conditions or have recently undergone oral surgery.

- Always follow proper dental care guidelines as recommended by dental professionals.
- Ensure the base cover is closed tightly before use to prevent leaks and maintain IPX7 waterproof integrity.

PRODUCT COMPONENTS

Your WAFLOO Cordless Water Dental Flosser package includes the following items:

- 1 × WAFLOO Water Flosser Unit
- 8 × Replacement Nozzles (5 Standard Jet Tips, 1 Orthodontic Braces Tip, 1 Periodontal Tip, 1 Tongue Cleaner)
- 1 × USB Charging Cable (Note: Adapter not included)
- 1 × User Manual (This document)
- 1 × Travel Bag

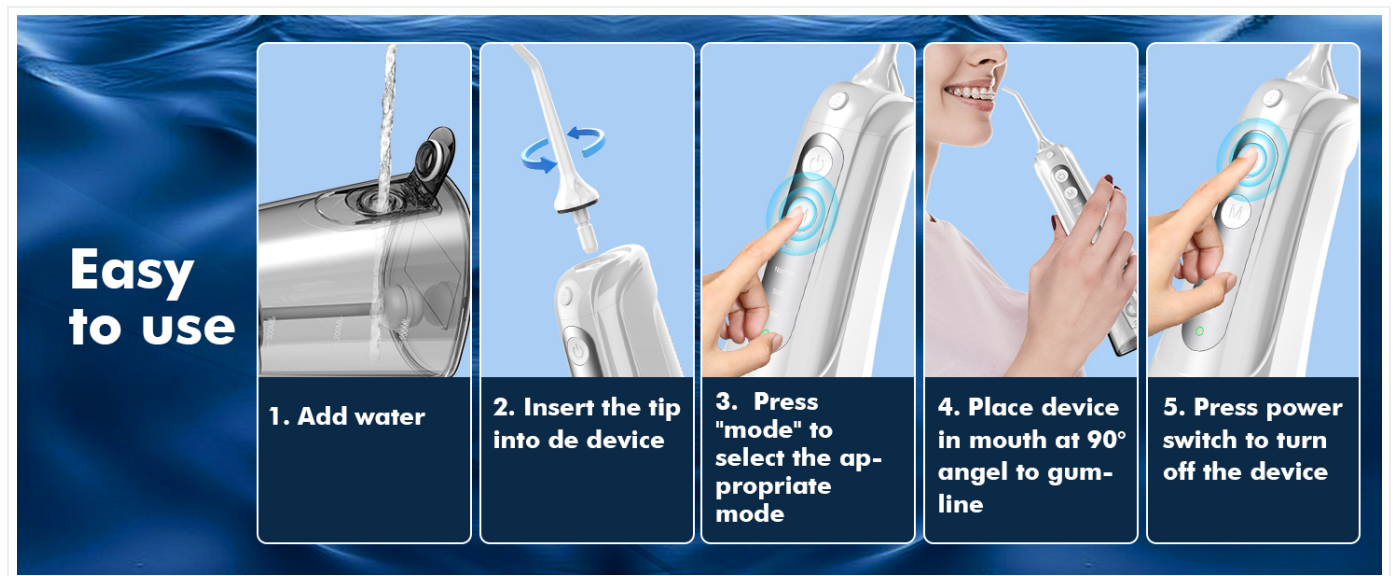 


Image: A visual representation of all items included in the WAFLOO Water Flosser package, laid out neatly.

SETUP

Charging the Device

The WAFLOO water flosser is equipped with a 2000mAh battery, providing up to 40 days of usage on a single charge. Before first use, or when the battery indicator is low, charge the device:

1. Ensure the device and charging port are completely dry.
2. Connect the provided USB charging cable to the charging port on the device.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
4. The indicator light will show charging status and turn off when fully charged.



Image: An X-ray view of the WAFLOO water flosser highlighting the 2000mAh battery and its capacity for over 40 days of use per charge.

Filling the Water Tank

The device features a 300ml detachable water reservoir for easy filling and cleaning.

1. Detach the water tank from the main unit by pulling it downwards.
2. Open the water tank cap.
3. Fill the tank with warm water. For optimal results, use lukewarm water.
4. Close the water tank cap securely and reattach the tank to the main unit, ensuring it clicks into place.



Image: A visual guide demonstrating the detachable 300ml water tank, showing how it can be easily cleaned and refilled.

Attaching a Nozzle

The WAFLOO water flosser comes with 8 versatile jet tips for various oral care needs.

1. Select the desired jet tip (e.g., Standard Jet Tip, Orthodontic Tip, Periodontal Tip, Tongue Cleaner).
2. Insert the stem of the selected tip into the hole at the top of the flosser handle.
3. Turn the tip clockwise until it clicks securely into place. Ensure it is firmly attached to prevent leaks.

8 Jet Tips in Total

Available More Than **3X8=24 Months**

360°

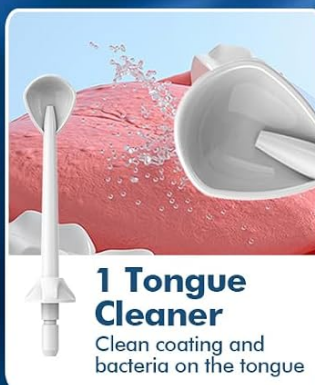 
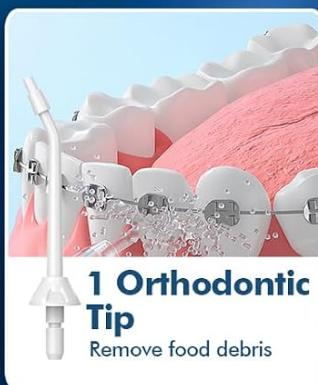 
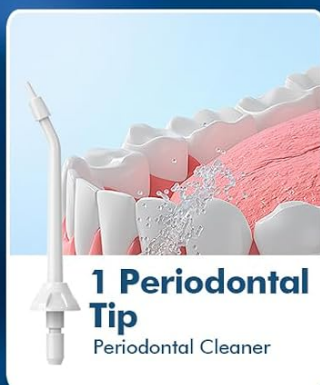 


Image: An overview of the 8 included jet tips: 5 standard jet tips for daily cleaning, 1 periodontal tip for gum pockets, 1 orthodontic tip for braces, and 1 tongue cleaner.



Image: A detailed view of the nozzle attachment point, illustrating its 360-degree rotation capability for comprehensive cleaning.

OPERATING INSTRUCTIONS

Understanding the Modes

The WAFLOO water flosser offers 4 cleaning modes to suit various oral care needs:

- **Strong Mode (150 PSI):** For deep cleaning and effective removal of stubborn plaque.
- **Normal Mode (120 PSI):** For daily cleaning and general oral hygiene.
- **Soft Mode (90 PSI):** Provides gentle care, ideal for sensitive gums, children, or first-time users.
- **Pulse Mode (70-120 PSI):** For gum massage and improved blood circulation.



Image: A visual representation of the device's control panel, detailing the four distinct cleaning modes and their pressure settings.

Basic Operation

Follow these steps for effective water flossing:

1. **Select Mode:** Before turning on the flosser, press the "M" (Mode) button to cycle through the modes (Strong, Normal, Soft, Pulse) and select your preferred setting. The device has a memory function and will start in the last used mode. For first-time users, it is recommended to start with the "Soft" mode.

2. **Positioning:** Lean over a sink. Place the tip of the nozzle into your mouth, pointing it towards your teeth and gumline at a 90-degree angle. Keep your mouth slightly closed to minimize splashing, but not so closed that it restricts water flow.
3. **Start Flossing:** Press the Power button to turn on the device. Guide the tip along your teeth and gums, moving it slowly from tooth to tooth. Allow the water to flow into the sink.
4. **Continue:** Continue flossing until you have cleaned all areas of your mouth, including between teeth and along the gumline. Do not remove the flosser from your mouth while it is operating to prevent water from splashing.
5. **Finish:** Press the Power button again to turn off the device.

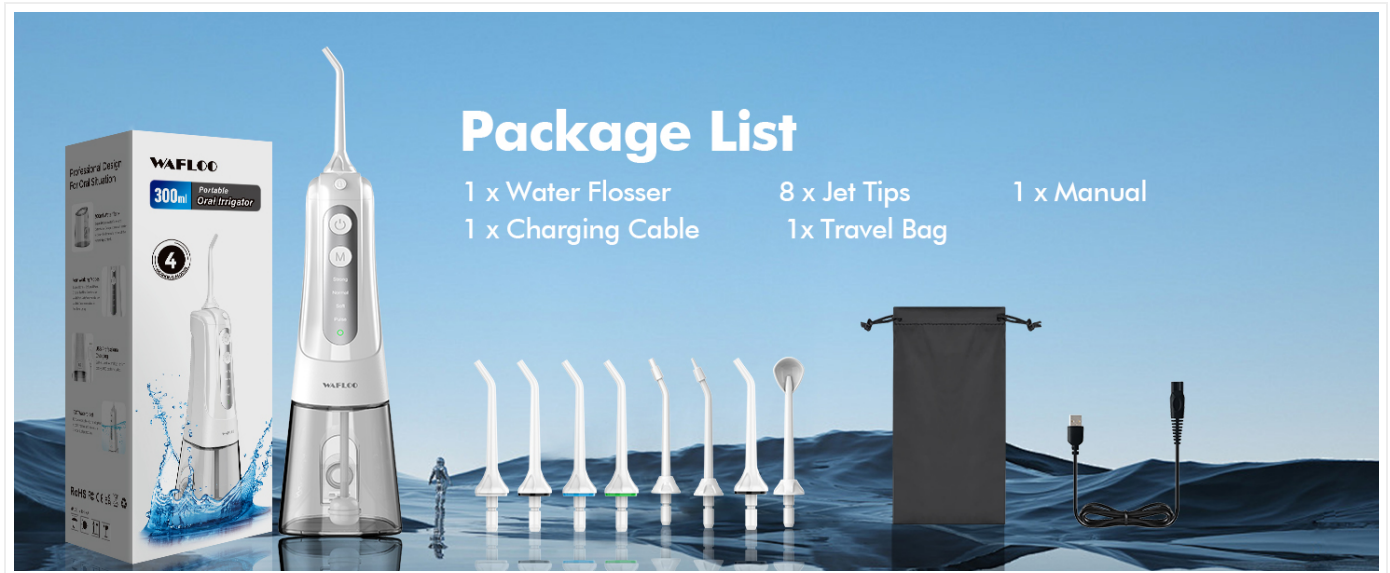


Image: A five-step visual guide demonstrating the easy-to-use process: 1. Add water, 2. Insert tip, 3. Select mode, 4. Position in mouth, 5. Press power button.

MAINTENANCE

Cleaning the Device

Regular cleaning ensures hygiene and extends the lifespan of your water flosser:

1. After each use, remove the jet tip by pressing the nozzle lock button and pulling the tip upwards. Rinse the tip under clean running water.
2. Detach the water reservoir and empty any remaining water. Rinse the inside of the tank thoroughly with clean water. The wide-mouth design makes this easy.
3. Wipe the exterior of the main unit with a soft, damp cloth. Do not submerge the main unit in water, although it is IPX7 waterproof, it is best to avoid prolonged submersion for cleaning.
4. Allow all parts to air dry completely before reassembling or storing.

Storage

When not in use, store your WAFLOO water flosser in a cool, dry place, away from direct sunlight. The included travel bag is ideal for both travel and home storage to protect the device and its accessories.



Image: The WAFLOO water flosser being stored in its compact travel bag, demonstrating its portability and ease of storage.

TROUBLESHOOTING

If you encounter any issues with your WAFLOO water flosser, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Power button not pressed correctly.	Charge the device fully. Ensure the power button is pressed firmly.
Water pressure is weak or inconsistent.	Water tank is empty; Nozzle is clogged; Air in the pump.	Refill the water tank. Remove and clean the nozzle. Run the device with the nozzle removed to clear air.
Water leaks from the device.	Nozzle not securely attached; Water tank not properly seated; Base cover not closed tightly.	Ensure the nozzle is clicked firmly into place. Reattach the water tank securely. Verify the base cover is tightly closed.
Nozzle swivels too loosely during use.	Normal operation for 360-degree rotation, but can be perceived as loose.	While the nozzle is designed to rotate 360 degrees, ensure it is fully inserted and clicked into place. Adjust your grip to maintain desired nozzle direction.
Device turns off unexpectedly during use.	Power button accidentally pressed; Low battery.	Adjust your grip to avoid accidentally pressing the power button. Charge the device if the battery is low.

If the problem persists after trying these solutions, please contact WAFLOO customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	YXY-801
Water Tank Capacity	300 ml / 10.1 oz
Water Pressure Range	70-150 PSI

Feature	Detail
Pulse Rate	1800 times per minute
Cleaning Modes	4 (Strong, Normal, Soft, Pulse)
Battery Capacity	2000mAh Lithium Ion
Battery Life	Up to 40+ days per charge
Waterproof Rating	IPX7
Dimensions (Package)	9.29 x 3.62 x 3.43 inches
Weight (Item)	14.39 ounces
Power Source	Battery Powered

WARRANTY AND SUPPORT

WAFLOO is committed to providing high-quality products and excellent customer service.

Warranty Information

Your WAFLOO Cordless Water Dental Flosser is covered by a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims.

For returns or replacements within 30 days of purchase, please refer to the retailer's return policy.

Customer Support

Should you require assistance, have questions, or need technical support, please contact WAFLOO customer service. We offer:

- 24-hour Customer Support
- Lifetime Technical Support

For contact information, please refer to the packaging or visit the official WAFLOO store on Amazon:[WAFLOO Store](#).

LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

