

[Manuals.plus](#) /

› [NOBIS](#) /

› Nobis 35W 10000mAh Portable Charger User Manual (Model ZWPBWWA-102C1A35W)

NOBIS ZWPBWWA-102C1A35W

Nobis 35W 10000mAh Portable Charger User Manual

Model: ZWPBWWA-102C1A35W

INTRODUCTION

Thank you for choosing the Nobis 35W 10000mAh Portable Charger. This power bank is designed to provide fast and efficient charging for a wide range of devices, featuring PD 3.0 and QC 4.0 fast charging capabilities, a smart LED digital display, and multiple safety protections. Please read this manual carefully to ensure proper use and optimal performance of your device.

PACKAGE CONTENTS

- 1 x Nobis 35W 10000mAh Portable Charger
- 1 x 3A Type-C to Type-C charging cable (30cm)
- 1 x Instruction Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your Nobis portable charger.

PD 3.0 & QC 4.0 Fast Charging

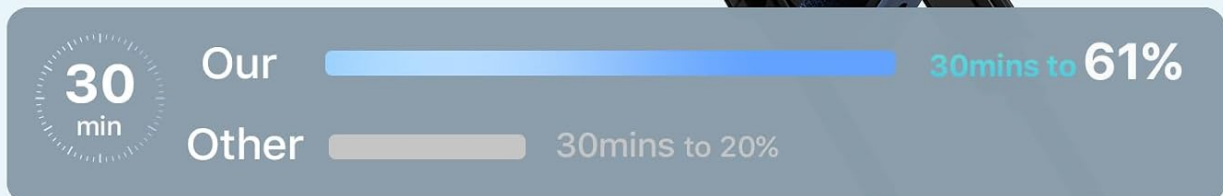


Image: Front view of the Nobis 35W 10000mAh Portable Charger, showing its sleek design and LED display area.

- **LED Digital Display:** Shows remaining battery percentage (0-100%).
- **USB-C Input/Output Ports (x2):** For charging the power bank or charging devices.
- **USB-A Output Port (x1):** For charging devices.
- **Power Button:** Activates the display and initiates trickle charging mode.

SETUP AND INITIAL CHARGING

Charging the Power Bank

Before first use, fully charge your Nobis portable charger. It takes approximately 1.4 hours to fully charge the power bank using a 30W or higher wall charger and a USB-C to USB-C cable (wall charger not included).

1. Connect the provided USB-C to USB-C cable to one of the USB-C input ports on the power bank.
2. Connect the other end of the cable to a compatible USB-C wall charger.

3. The LED digital display will show the charging progress. The power bank is fully charged when the display shows 100%.



Note: 35W fast recharging requires using a 35W or higher charger and a USB-C to C cable. (Charger is not included)

Image: The Nobis portable charger connected to a wall adapter via a USB-C cable, illustrating the recharging process. The display shows "100%".

OPERATING INSTRUCTIONS

Charging Your Devices

The Nobis portable charger can charge up to three devices simultaneously using its two USB-C ports and one USB-A port. It supports 35W fast charging for compatible devices.

1. Connect your device's charging cable to the appropriate port (USB-C or USB-A) on the power bank.
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. The LED display will show the power bank's remaining battery percentage.

Charge 3 Devices Simultaneously

Charging Small and Large Devices
Smartly adapt to the power needs of devices



Image: The Nobis portable charger simultaneously charging a tablet, a smartphone, and another device, demonstrating its multi-port capability.

For optimal fast charging, use a cable compatible with your device's fast charging protocol (PD 3.0 or QC 4.0).

Smart Digital Display

The integrated LED display provides a precise battery percentage from 0% to 100%, allowing you to monitor the power bank's charge level accurately.

Digital Display

Ours

Visible Reminder

Others

Invisible Reminder



Image: A close-up of the Nobis portable charger's digital display showing "100%", contrasting with a generic power bank that only uses indicator lights.

Trickle Charging Mode (Low Current Devices)

To safely charge low-current devices such as earbuds, smartwatches, or small drones, activate the trickle charging mode.

- Double-click the power button to activate trickle charging mode.
- The indicator on the LED display will start cycling to confirm activation.
- Connect your low-current device.
- To exit trickle charging mode, double-click the power button again or disconnect all devices.

MAINTENANCE AND SAFETY

- Keep the power bank away from water, moisture, and extreme temperatures.
- Do not disassemble, puncture, or modify the device.

- Avoid dropping or subjecting the power bank to strong impacts.
- Store in a cool, dry place when not in use.
- Recharge the power bank at least once every three months to maintain battery health if not used regularly.
- The power bank supports over-charged, over-discharged, over-voltage, over-current, and short circuit protection.
- The device is designed for 500+ recharge cycles over its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Charging cable is faulty or not properly connected. Wall charger is not working or insufficient power output. Power bank battery is completely depleted.	Check and replace the charging cable. Ensure it's securely connected. Try a different wall charger (preferably 30W or higher). Allow the power bank to charge for an extended period (e.g., 3-4 hours) even if the display doesn't immediately light up.
Device not charging from power bank	Device charging cable is faulty or not properly connected. Power bank battery is depleted. Device is not compatible or requires specific charging protocol. Trickle charging mode needed for low-current devices.	Check and replace the device's charging cable. Ensure it's securely connected. Recharge the power bank. Ensure your device is compatible. Try a different port on the power bank. For low-current devices, double-click the power button to activate trickle charging mode.
Slow charging	Cable used does not support fast charging. Device does not support fast charging. Multiple devices charging simultaneously.	Use a high-quality USB-C to USB-C cable that supports PD/QC fast charging. Confirm your device supports fast charging. Charging multiple devices will distribute the power, potentially reducing individual charging speeds.
LED display not working	Power bank is completely discharged. Internal malfunction.	Connect the power bank to a charger and allow it to charge for a while. If the issue persists, contact customer support.

SPECIFICATIONS

Model Name	35W 10000mAh Power Bank
Model Number	ZWPBWWA-102C1A35W
Battery Capacity	10000 mAh
Battery Cell Type	Lithium Polymer
Input (USB-C)	30W Max (Two-Way High-Speed Recharge)

Output (USB-C)	35W Max
Output (USB-A)	30W Max
Total Output	35W
Number of Ports	3 (2x USB-C, 1x USB-A)
Dimensions (L x W x Thickness)	13.7 x 7 x 1.7 cm
Weight	228 g
Special Features	Auto Shut-Off, Digital Display, Fast Charging, Over Charging Protection, Short Circuit Protection
Compatible Devices	Smartphones, Tablets, Laptops, Cameras, Headphones, Earbuds, Smartwatches, Small Drones

WARRANTY INFORMATION

This Nobis portable charger comes with a **3-Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

CUSTOMER SUPPORT

For technical support, warranty claims, or any questions regarding your Nobis portable charger, please contact the manufacturer:

- **Manufacturer:** SVVR Limited
- **Contact Information:** 19H Maxgrand plaza No.3 Tai Yau Street San PoKong, Kowloon, Hong Kong
- Please refer to the official Nobis website or your purchase platform for the most up-to-date contact methods.

© 2026 NOBIS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question