

ICE-WATCH 022735

ICE-WATCH Ice Digit Retro Digital Watch Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ICE-WATCH Ice Digit Retro digital watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

2. PRODUCT OVERVIEW

The ICE-WATCH Ice Digit Retro features a digital display and multiple functions controlled by four buttons. Familiarize yourself with the watch's components:



Figure 2.1: Front view of the ICE-WATCH Ice Digit Retro watch.



Figure 2.2: Side view illustrating the watch buttons.

Button Functions:

- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **RESET Button:** Used for resetting values or selecting items during setting.
- **ST/STP Button:** Starts/stops functions (e.g., stopwatch) or adjusts values during setting.
- **LIGHT Button:** Activates the backlight for illumination.

3. SETUP

3.1 Setting Time and Date

1. In Time Display Mode, press the **MODE** button three times to enter Time Setting Mode. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the setting options: Seconds → Hours → Minutes → Month → Date → Day of the week.
3. While the desired value is flashing, press the **ST/STP** button to adjust the value. Hold **ST/STP** to change values faster.
4. To switch between 12-hour and 24-hour format, adjust the hour while in Time Setting Mode. The 'P' indicator signifies PM in 12-hour format.

5. Once all settings are correct, press the **MODE** button to exit Time Setting Mode and return to Time Display Mode.

4. OPERATING MODES

4.1 Time Display Mode

This is the default mode, displaying the current time, day, and date. Press the **LIGHT** button to activate the backlight for a few seconds.

4.2 Alarm Mode

1. From Time Display Mode, press the **MODE** button once to enter Alarm Mode. The alarm time will be displayed.
2. Press the **RESET** button to select the hour or minute to set.
3. Press the **ST/STP** button to adjust the flashing hour or minute.
4. To activate or deactivate the alarm, press the **ST/STP** button while in Alarm Mode (without any digits flashing). An alarm icon will appear/disappear on the display.
5. Press the **MODE** button to return to Time Display Mode.

4.3 Stopwatch Mode

1. From Time Display Mode, press the **MODE** button twice to enter Stopwatch Mode. The display will show '00:00:00'.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to stop the stopwatch.
4. Press the **RESET** button to reset the stopwatch to '00:00:00'.
5. To measure lap/split times, press **RESET** while the stopwatch is running. The display will show the lap time while the stopwatch continues to run in the background. Press **RESET** again to return to the running stopwatch display.
6. Press the **MODE** button to return to Time Display Mode.

5. MAINTENANCE

5.1 Water Resistance

Your ICE-WATCH Ice Digit Retro watch is **3 ATM (30 meters) water resistant**. This means it is resistant to splashes, rain, and accidental exposure to water. It is **not suitable** for submersion, showering, bathing, swimming, water sports, or diving. Avoid operating buttons while the watch is wet.

5.2 Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

5.3 Battery Replacement

The watch is powered by a single battery. When the display becomes dim or functions become erratic, the battery may need replacement. Battery replacement should be performed by a qualified watch

technician to ensure proper sealing and water resistance. Refer to the specifications for battery type.

6. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time and date following the instructions in Section 3.1. Ensure the 12/24H format is correctly set.
- **Alarm not sounding:** Ensure the alarm is activated (alarm icon visible on display) and the alarm time is correctly set.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a reset may be required (consult support) or the watch may require servicing.

If problems persist after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	022735
Water Resistance	3 ATM (30 meters) - Splash resistant
Display Type	Digital
Functions	Time (12/24H), Date, Day, Alarm, Stopwatch, Backlight
Battery Type	Unknown (1 battery included)
Dimensions	3.15 x 4.33 x 3.15 inches; 1.59 ounces (Product dimensions)



Figure 7.1: Back view of the watch, displaying model reference and water resistance.

8. WARRANTY AND SUPPORT

Your ICE-WATCH Ice Digit Retro digital watch comes with a **2-year warranty** from the date of purchase, covering manufacturing defects. This warranty does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims, technical support, or service inquiries, please contact your authorized ICE-WATCH retailer or visit the official ICE-WATCH website for customer service contact information.

For more information, visit the official [ICE-WATCH Store](#).