

[Manuals.plus](#) /

> [Amesias](#) /

> Amesias WD30X28658 Dishwasher Tub Insulation Blanket User Manual

Amesias WD30X28658

Amesias WD30X28658 Dishwasher Tub Insulation Blanket User Manual

MODEL: WD30X28658

[Overview](#) [Compatibility](#) [Safety](#) [Installation](#) [Introduction](#) [Product](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. Introduction

This manual provides essential instructions for the installation, maintenance, and general use of the Amesias WD30X28658 Dishwasher Tub Insulation Blanket. This component is designed to replace original insulation blankets in compatible GE and Hotpoint dishwasher models, contributing to reduced operational noise and improved heat retention. Please read this manual thoroughly before proceeding with installation or any maintenance to ensure safe and correct operation.

2. Product Overview

The WD30X28658 is a replacement insulation blanket for dishwasher tubs. Its primary function is to provide thermal and acoustic insulation, helping to keep the dishwasher quiet during cycles and maintain water temperature for efficient cleaning. The blanket is typically made from fibrous material designed to withstand the environment around a dishwasher tub.



Image 2.1: The Amesias WD30X28658 Dishwasher Tub Insulation Blanket, shown unfolded. This image displays the general appearance and texture of the insulation material.



Image 2.2: The Amesias WD30X28658 Dishwasher Tub Insulation Blanket, shown in a folded state. This view illustrates the flexibility and thickness of the material.

3. Compatibility

The Amesias WD30X28658 Dishwasher Tub Insulation Blanket is designed as a direct replacement for several GE and Hotpoint part numbers. It replaces the following part numbers:

- WD01X10419
- WD01X10089
- WD01X10206
- WD01X10259
- WD01X10260
- WD01X10266
- WD01X10270
- WD01X10289
- WD1X10089
- AP6996855

Important: Always verify the compatibility with your specific dishwasher model number before purchasing and installing. While many replacement parts may appear similar, slight variations can prevent proper fit and function.

Does your part fit?



Many replacement parts
look the same
but won't fit your model.

Don't be fooled!

Check your
model number
before you buy.

Image 3.1: A visual reminder to verify part compatibility with your specific appliance model number to ensure correct fitment.

4. Safety Information

Before attempting any repair or installation on your dishwasher, observe the following safety precautions:

- **Disconnect Power:** Always unplug the dishwasher from the electrical outlet or turn off the circuit breaker before beginning any work.
- **Disconnect Water Supply:** Turn off the water supply valves to the dishwasher to prevent leaks.
- **Wear Protective Gear:** Use gloves to protect your hands from sharp edges or insulation fibers. Safety glasses are also recommended.
- **Professional Assistance:** If you are unsure about any step or uncomfortable performing the repair, consult a qualified appliance technician.
- **Proper Disposal:** Dispose of old parts and packaging materials responsibly according to local regulations.

5. Installation Instructions

The following are general steps for installing a dishwasher tub insulation blanket. Specific steps may vary depending on your dishwasher model. Refer to your dishwasher's service manual for detailed instructions.

- 1. Preparation:** Ensure the dishwasher is disconnected from power and water supply. Pull the dishwasher out from its cabinet enclosure to access the sides and bottom.
- 2. Remove Old Insulation:** Carefully remove the existing insulation blanket, if present. Note how it was attached or wrapped around the tub.
- 3. Clean Area:** Clean any debris or residue from the exterior of the dishwasher tub where the new insulation will be applied.
- 4. Position New Blanket:** Unfold the new Amesias WD30X28658 insulation blanket. Carefully position it around the dishwasher tub, ensuring it covers the desired areas for insulation. The blanket is typically designed to wrap around the sides and sometimes the bottom of the tub.
- 5. Secure Blanket:** Secure the insulation blanket in place. This may involve using adhesive strips (if provided), clips, or simply tucking it under existing components or brackets. Ensure it is snug but not overly compressed, allowing for its insulating properties.
- 6. Reassemble:** Carefully slide the dishwasher back into its cabinet enclosure. Reconnect the water supply and electrical power.
- 7. Test:** Run a short cycle to ensure proper operation and check for any leaks or unusual noises.

6. Maintenance

The dishwasher tub insulation blanket generally requires minimal maintenance. Periodically, during other dishwasher servicing or cleaning, you may inspect the blanket for:

- Damage:** Check for tears, rips, or significant compression that could reduce its effectiveness.
- Moisture:** Ensure the blanket remains dry. Persistent moisture could indicate a leak in the dishwasher tub or connections, which should be addressed immediately.
- Proper Positioning:** Verify that the blanket is still securely in place and has not shifted, which could expose parts of the tub or cause noise.

If the blanket is damaged or excessively wet, it may need to be replaced to maintain optimal performance.

7. Troubleshooting

This section addresses common issues related to dishwasher insulation.

Problem	Possible Cause	Solution
Increased Dishwasher Noise	Insulation blanket is damaged, dislodged, or missing.	Inspect the insulation blanket. Re-position or replace if necessary. Ensure all dishwasher components are securely fastened.
Dishwasher Not Retaining Heat	Ineffective or damaged insulation.	Check the insulation blanket for tears or gaps. Replace if insulation is compromised.
Moisture on Insulation	Dishwasher tub leak or condensation issue.	Immediately investigate the source of the moisture. Repair any leaks. Replace the insulation if it is saturated or moldy.

8. Specifications

Feature	Detail
Model Number	WD30X28658
Manufacturer	Amesias
Item Weight	5.6 ounces
Replaces Part Numbers	WD01X10419, WD01X10089, WD01X10206, WD01X10259, WD01X10260, WD01X10266, WD01X10270, WD01X10289, WD1X10089, AP6996855
Included Components	WD30X28658 Insulation Blanket

9. Warranty Information

The Amesias WD30X28658 Dishwasher Tub Insulation Blanket comes with a **1-Year Warranty**. This warranty covers defects in materials and workmanship under normal use. For specific terms, conditions, and to initiate a warranty claim, please refer to the manufacturer's official

warranty statement or contact Amesias customer support.

10. Customer Support

For further assistance, technical support, or inquiries regarding the Amesias WD30X28658 Dishwasher Tub Insulation Blanket, please contact Amesias customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.

